


# 18kPV JUMPER WIRE

Upon receiving the package, please check the inverter RSD terminals for a small red jumper wire.  
 If the unit came equipped with said jumper, ONLY remove the jumper when installing an external RSD (Rapid Shutdown Device).  
 If not installing an external RSD, leave the jumper in place.

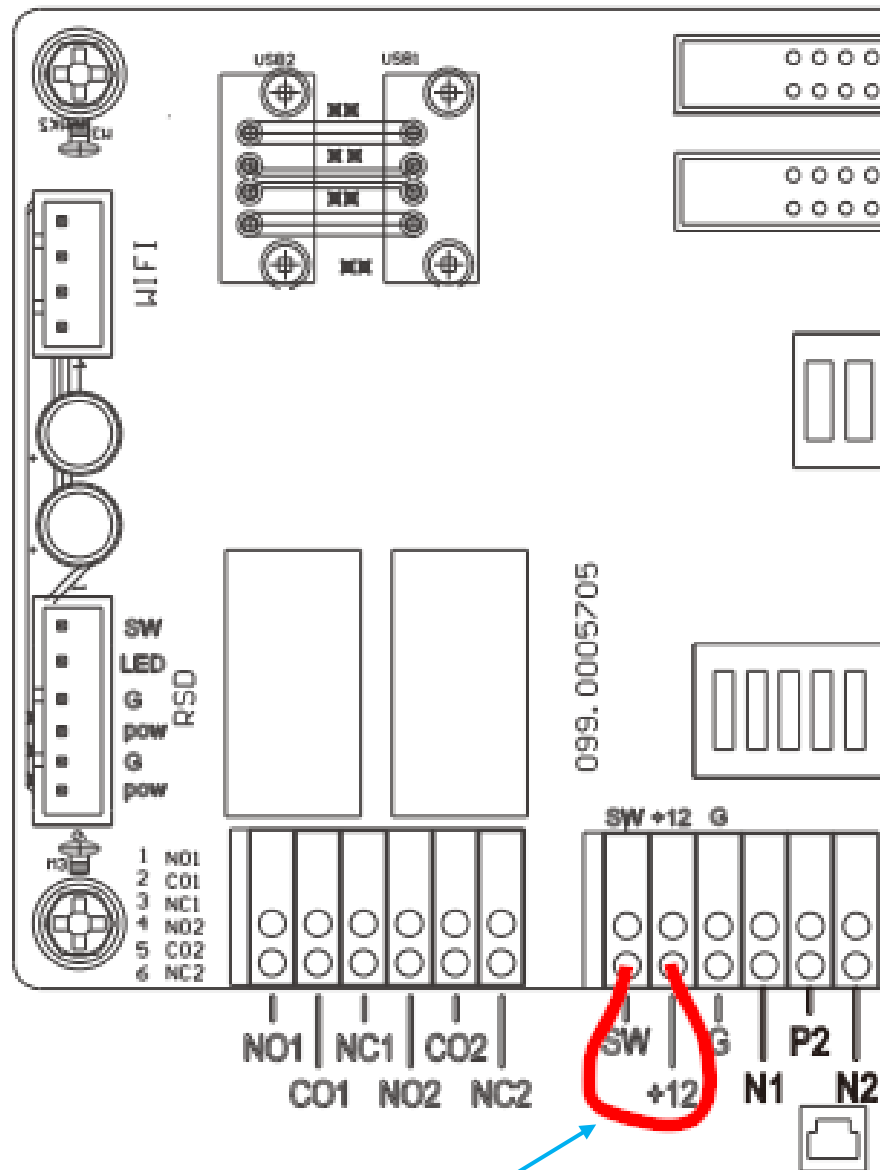

Pre-installed jumper wire