



The RS485 LCD Update will always use the RS485 RJ45 Port.

The RS232 BMS Update will always use the Battery-Com RJ45 Port.