

EG4® 6000XP OFF-GRID INVERTER

USER MANUAL



TABLE OF CONTENTS

1.	TECHNICAL SPECIFICATIONS	1
2.	ABBREVIATIONS	3
3.	INVERTER SAFETY	4
3.1	SAFETY INSTRUCTIONS.....	4
3.2	IMPORTANT SAFETY NOTIFICATIONS	4
4.	SÉCURITÉ DE L'ONDULEUR.....	6
4.1	INSTRUCTIONS DE SÉCURITÉ	6
4.2	NOTIFICATIONS DE SÉCURITÉ IMPORTANTES	6
5.	BRIEF INTRODUCTION.....	8
5.1	INVERTER FEATURES.....	8
5.2	INVERTER INTERFACE	9
6.	INSTALLATION	10
6.1	PACKING LIST	10
6.2	LOCATION SELECTION AND INSTALLATION.....	10
6.3	STORAGE INFORMATION	11
6.3.1	INSTALLING THE INVERTER.....	12
6.4	CONNECTION OVERVIEW.....	13
6.4.1	SYSTEM CONNECTIONS	13
6.5	PV CONNECTION	13
6.5.1	CONNECTING PV TO THE INVERTER	13
6.5.2	STRING SIZING.....	14
6.5.1	PV WIRING INSTRUCTIONS	15
6.6	BATTERY CONNECTION.....	17
6.6.1	BATTERY CABLE CONNECTION	17
6.6.2	LITHIUM BATTERY COMMUNICATIONS.....	18
6.7	AC WIRING INFORMATION.....	18
6.7.1	STEPS FOR AC CONNECTION	19
6.8	WORKING WITH A GENERATOR	22
6.8.1	GENERATOR SYSTEM CONNECTION.....	22
6.8.2	INTEGRATED TWO-WIRE START/STOP.....	22
6.8.3	GENERATOR AC CONNECTIONS	23
6.9	GENERATOR START AND STOP SETTINGS	23
6.10	OFF-GRID.....	24
6.10.1	OFF-GRID WIRING	24
6.11	AC COUPLING INSTALLATION CONNECTION.....	24
6.12	PARALLELING INFORMATION & DIAGRAMS	25
6.12.1	PARALLEL CONNECTIONS	25
6.12.2	PARALLEL CONFIGURATION	27
7.	END USER SETTINGS	28
7.1	APPLICATION SETTING	28
7.2	CHARGE SETTING.....	28
7.2.1	GENERATOR CHARGE	29
7.3	DISCHARGE SETTING.....	30

7.4	AC COUPLE	30
7.5	SMART LOAD	30
7.6	RESET	31
8.	INSTALLER SETTINGS	31
8.1	COMMON SETTING	31
8.2	APPLICATION SETTING	32
8.3	CHARGE SETTING	33
8.4	DISCHARGE SETTING	34
8.5	AC COUPLE	35
8.6	SMART LOAD	35
8.7	OTHER SETTING	36
8.8	RESET	36
9.	MONITOR SYSTEM SETUP	37
9.1	WI-FI/4G/LAN DONGLE CONNECTION	37
9.2	CONNECTIVITY REQUIREMENTS	37
9.3	THIRD-PARTY RS485 COMMUNICATION	38
9.4	ONLINE MONITORING SYSTEM USER INTERFACE	38
9.4.1	DASHBOARD (MONITOR TAB)	38
9.4.2	DASHBOARD (DATA TAB)	41
9.4.3	DASHBOARD (CONFIGURATION TAB)	44
9.4.4	DASHBOARD (OVERVIEW TAB)	45
9.4.5	DASHBOARD (MAINTENANCE TAB)	46
10.	FIRMWARE UPDATES	46
10.1	FIRMWARE UPDATE VIA EG4 ELECTRONICS APP	46
10.2	FIRMWARE UPDATE VIA MONITOR CENTER (WEBSITE)	47
11.	SMARTPHONE APP SETUP	49
12.	WORKING MODES	50
12.1	RAPID SHUTDOWN (RSD)	51
12.1.1	EXTERNAL RSD WIRING INSTRUCTIONS	52
12.2	LCD DISPLAY AND SETTINGS	53
12.2.1	LCD DISPLAY	53
13.	LCD SETTINGS	55
14.	INVERTER START-UP AND SHUT-DOWN PROCEDURE	69
14.1	START-UP	69
14.2	SHUT-DOWN	69
15.	STATUS, WARNING, & ERROR CODES	70
15.1	STATUS CODES	70
15.2	WARNING CODES	71
15.3	FAULT CODES	73
16.	INVERTER MAINTENANCE	76
17.	WARRANTY INFORMATION	76
18.	CHANGELOG	77

1. TECHNICAL SPECIFICATIONS

AC INPUT DATA			
NOMINAL AC VOLTAGE	120/240VAC (L1/L2/N required)		
FREQUENCY	50/60Hz		
MAX. CONTINUOUS AC CURRENT	37.5A @ 240VAC		
MAX. AC INPUT POWER	9000W		
AC BYPASS (GRID GENERATOR)	50A 50A		
AC OUTPUT DATA			
OUTPUT VOLTAGE	120/240VAC		
OUTPUT FREQUENCY	50/60Hz		
MAX. CONTINUOUS OUTPUT CURRENT @ 240V	25A		
MAX CONT. LINE WATTAGE	3000W		
NOMINAL POWER OUTPUT	6000W		
SURGE CAPACITY	12,000W for ≈3.5 seconds 11,000W for ≈5 seconds		
POWER FACTOR VALUE	0.6 – 1		
OPERATING FREQUENCY	50/60Hz		
THD (V)	<3%		
SWITCHING TIME	<15ms @ Single / <30ms @ Parallel		
PV INPUT DATA			
NUMBER OF MPPTS	2		
INPUTS PER MPPT	1		
MAX. USABLE INPUT CURRENT	17/17A		
MAX. SHORT CIRCUIT INPUT CURRENT	25/25A		
DC INPUT VOLTAGE RANGE	100-480VDC		
UNIT STARTUP VOLTAGE	100VDC ± 10VDC		
MPP OPERATING VOLTAGE RANGE	120-385VDC		
NOMINAL MPPT VOLTAGE	320VDC		
MAXIMUM UTILIZED SOLAR POWER	8000W (4000W per MPPT)		
RECOMMENDED MAXIMUM SOLAR INPUT	10000W (5000W per MPPT)		
EFFICIENCY			
MPPT EFFICIENCY	99%		
BATTERY CHARGING EFFICIENCY	93%		
BATTERY DISCHARGING EFFICIENCY	93%		
IDLE CONSUMPTION (STANDBY MODE*)	W/ PV <30W	w/ Battery ≈50W	w/ AC <50W
BATTERY DATA			
TYPE	Lead-acid/Lithium		
MAX. DISCHARGE CURRENT	140A		
MAX. CHARGE CURRENT	125A**		
NOMINAL VOLTAGE	48VDC		
BATTERY VOLTAGE RANGE	46.4-60VDC (Lithium); 38.4-60VDC (Lead-Acid)		
REC. BATTERY CAPACITY PER INVERTER	>200Ah		
HIGH DC CUT-OFF VOLTAGE	59VDC (Lithium) 60VDC (Lead-acid)		

HIGH DC RECOVERY VOLTAGE		57.4VDC(Lithium) 58VDC(Lead-Acid)
LOW DC WARNING VOLTAGE (LEAD-ACID)	LOAD<20%	44.0VDC (Configurable)
	20%≤LOAD<50%	Warning Voltage @Load <20% - 1.2V
	LOAD≥50%	Warning Voltage @Load <20% - 3.6V
LOW DC WARNING VOLTAGE RETURN (LEAD-ACID)		Low DC Warning Voltage @Different Load +2V
LOW DC CUT-OFF VOLTAGE (LEAD-ACID)	LOAD<20%	42.0VDC (Configurable)
	20%≤LOAD<50%	Cut-Off Voltage @Load <20% - 1.2V
	LOAD≥50%	Cut-Off Voltage @load <20% - 3.6V
LOW DC CUT-OFF RETURN VOLTAGE (LEAD-ACID)	CUT-OFF VOLTAGE @LOAD <20% ≥45V	Low DC Cut-Off Voltage @load <20% +3V
	CUT-OFF VOLTAGE @LOAD <20% <45V	48V
LOW DC WARNING SOC		20% SOC (Configurable)
LOW DC WARNING RETURN SOC		Low DC Warning SOC +10%
LOW DC CUT-OFF SOC		15% SOC (Grid ON) (Configurable)
		15% SOC (Grid OFF) (Configurable)
LOW DC CUT-OFF RETURN SOC		Low DC Cut-Off SOC +10%
CHARGE CUT-OFF VOLTAGE		58.4VDC
GENERAL DATA		
MAX. UNITS IN PARALLEL		16
INTEGRATED DISCONNECT		Yes
DC SWITCH RATING FOR EACH MPPT		Yes
DIMENSIONS		18×25.5×5.25 in (457×648×132mm)
WEIGHT		52.9 lbs. (24kg)
COOLING CONCEPT		Fan
TOPOLOGY		TL (Transformerless)
RELATIVE HUMIDITY		5-95%
ALTITUDE		<6561ft (2000m)
OPERATING TEMPERATURE RANGE		32 – 113°F (0 – 45°C)
STORAGE TEMPERATURE RANGE		5 – 140°F (-15 – 60°C)
NOISE EMISSION (TYPICAL)		<58 dB
LOCKED ROTOR AMPS (LRA)		95A
DISPLAY		LCD + LED
COMMUNICATION INTERFACE		RS485/Wi-Fi/CAN
STANDARD WARRANTY		5-year standard warranty***
PV REVERSE POLARITY PROTECTION, POLE SENSITIVE LEAKAGE CURRENT MONITORING UNIT, SURGE PROTECTION DEVICE, OUTPUT OVER-VOLTAGE PROTECTION, OUTPUT OVER-VOLTAGE PROTECTION VARISTOR		
STANDARDS AND CERTIFICATIONS		
UL1741		
FCC PART 15, CLASS B		
INGRESS PROTECTION RATING		
IP20		

*Idle consumption value tested with constant 300VDC PV source
 **115A @ 48VDC (AC), 125A @48VDC (PV)

***For information regarding warranty registration on EG4® Electronics products, please navigate to <https://eg4electronics.com/warranty/> and select the corresponding product to begin the registration process.

SCAN FOR LATEST
SPEC SHEET



2. ABBREVIATIONS

AWG – American Wire Gauge	In-lbs. – Inch Pounds
A – Amps	IP – Ingress Protection
Ah – Amp hour(s)	kW – Kilowatt
AC – Alternating Current	kWh – Kilowatt-hour
AFCI – Arc-Fault Circuit Interrupter	L1 – Line 1
AHJ – Authority Having Jurisdiction	L2 – Line 2
kAIC – kilo-Amp Interrupting Capability	LCD – Liquid Crystal Display
ANSI – American National Standards Institute	LFP – Lithium Iron Phosphate or LiFePO4
BAT – Battery	MID – Micro-Grid Interconnection Device
BMS – Battery Management System	mm – Millimeter(s)
COM – Communication	MPPT – Maximum Power Point Tracker
CT – Current Transformer	mV – Millivolt(s)
DC – Direct Current	N – Neutral
DIP – Dual In-line Package	NEC – National Electric Code
DOD – Depth of Discharge	NEMA – National Electrical Manufacturers Association
EG – Equipment Ground	NFPA – National Fire Prevention Association
EGS – Equipment Grounding System	Nm – Newton Meters
EPS – Emergency Power System	PC – Personal Computer
ESS – Energy Storage System	PCB – Printed Circuit Board
E-Stop – Emergency Stop	PE – Protective Earth (G or Ground)
E-Stop NO – Emergency Stop Normally Open	PPE – Personal Protective Equipment
FCC – Federal Communication Commission	PV – Photovoltaic
GE – Grounding Electrode	RSD – Rapid Shut Down
GEC – Grounding Electrode Conductor	SOC – State of Charge
GEN – Generator	STC – Standard Testing Conditions
GES – Grounding Electrode System	UL – Underwriters Laboratories
GFCI – Ground-Fault Circuit Interrupter	UPS – Uninterrupted Power Supply
GFDI – Ground-Fault Detector/Interrupter	V – Volt(s)
IEEE – Institute of Electrical and Electronic Engineers	Voc – Open-circuit Voltage
Imp – Maximum Power Point Current	Vmp – Voltage Maximum Power
Isc – Short-circuit Current	

3. INVERTER SAFETY

3.1 SAFETY INSTRUCTIONS

International safety regulations have been strictly observed in the design and testing of the inverter. Before beginning any work, carefully read all safety instructions, and always observe them when working on or with the inverter. The installation must follow all applicable national or local standards and regulations.

Incorrect installation may cause:

- Injury or death to the installer, operator or third party
- Damage to the inverter or other attached equipment

3.2 IMPORTANT SAFETY NOTIFICATIONS



DANGER: *Hazardous Voltage Circuits!*

There are various safety concerns that must be carefully observed before, during, and after the installation, as well as during future operation and maintenance. The following are important safety notifications for the installer and any end users of this product under normal operating conditions.

1. **Beware of high PV voltage.** Install an external DC disconnect switch or breaker and ensure it is in the “off” or “open” position before installing or working on the inverter. Use a voltmeter to confirm there is no DC voltage present to avoid electric shock.
2. **Beware of high grid voltage.** Ensure the AC switch and/or AC breaker are in the “off” or “open” position before installing or working on the inverter. Use a voltmeter to confirm there is no voltage present to avoid electric shock.
3. **Beware of high battery current.** Ensure that the battery module breakers and/or on/off switches are in the “open” or “off” position before installing or working on the inverter. Use a voltmeter to confirm there is no DC voltage present to avoid electric shock.
4. **Do not open the inverter while it is operating to avoid electric shock and damage from live voltage and current within the system.**
5. Do not make any connections or disconnections (PV, battery, grid, communication, etc.) while the inverter is operating.
6. An installer should make sure to be well protected by reasonable and professional insulative equipment [e.g., personal protective equipment (PPE)].
7. Before installing, operating, or maintaining the system, it is important to inspect all existing wiring to ensure that it meets the appropriate specifications and conditions for use.
8. Ensure that the PV, battery, and grid connections to the inverter are secure and proper to prevent damage or injuries caused by improper installation.
9. Some components of the system can be very heavy. Be sure to utilize team-lift among other safe lifting techniques throughout the installation.



WARNING: TO REDUCE THE RISK OF INJURY, READ ALL INSTRUCTIONS!

All work on this product (system design, installation, operation, setting, configuration, and maintenance) must be carried out by qualified personnel. To reduce the risk of electric shock, do not perform any servicing other than those specified in the operating instructions unless qualified to do so.

1. Read all instructions before installing. For electrical work, follow all local and national wiring standards, regulations, and these installation instructions.
2. Make sure the inverter is properly grounded. All wiring should be in accordance with the National Electrical Code (NEC), ANSI/NFPA 70.
3. The inverter and system can inter-connect with the utility grid only if the utility provider permits. Consult with the local AHJ (Authority Having Jurisdiction) before installing this product for any additional regulations and requirements for the immediate area.
4. All warning labels and nameplates on the inverter should be clearly visible and must not be removed or covered.
5. The installer should consider the safety of future users when choosing the inverter's correct position and location as specified in this manual.
6. Keep children from touching or misusing the inverter and relevant systems.
7. **Beware!** The inverter and some parts of the system can be hot when in use. Do not touch the inverter's surface or most of the parts when they are operating. During operation, only the LCD and buttons should be touched.



WARNING!

Cancer and Reproductive Harm – See www.P65Warnings.ca.gov for more details.

DISCLAIMER

EG4 reserves the right to make changes to the material herein at any time without notice. Please refer to www.eg4electronics.com for the most updated version of our manuals/spec sheets.

4. SÉCURITÉ DE L'ONDULEUR

4.1 INSTRUCTIONS DE SÉCURITÉ

Les réglementations internationales de sécurité ont été strictement observées lors de la conception et des tests de l'onduleur. Avant de commencer tout travail, lisez attentivement toutes les instructions de sécurité et respectez-les toujours lorsque vous travaillez sur ou avec l'onduleur. L'installation doit suivre toutes les normes et réglementations nationales ou locales applicables. Consultez l'autorité locale compétente et/ou le fournisseur d'électricité pour obtenir les permis et autorisations nécessaires avant l'installation.

Une installation incorrecte peut causer:

- Des blessures ou la mort de l'installateur, de l'opérateur ou d'un tiers
- Des dommages à l'onduleur ou à d'autres équipements connectés

4.2 NOTIFICATIONS DE SÉCURITÉ IMPORTANTES



DANGER: *Circuits à haute tension!*

Il y a divers problèmes de sécurité qui doivent être soigneusement observés avant, pendant et après l'installation, ainsi que pendant l'exploitation et la maintenance futures. Les notifications de sécurité suivantes sont importantes pour l'installateur et tout utilisateur final de ce produit dans des conditions normales de fonctionnement.

1. **Attention à la haute tension PV.** Installez un interrupteur ou disjoncteur externe de déconnexion DC et assurez-vous qu'il est en position "off" ou "ouvert" avant d'installer ou de travailler sur l'onduleur. Utilisez un voltmètre pour confirmer qu'il n'y a pas de tension DC présente afin d'éviter les chocs électriques.
2. **Attention à la haute tension du réseau.** Assurez-vous que l'interrupteur AC et/ou le disjoncteur AC sont en position "off" ou "ouvert" avant d'installer ou de travailler sur l'onduleur. Utilisez un voltmètre pour confirmer qu'il n'y a pas de tension présente afin d'éviter les chocs électriques.
3. **Attention au courant élevé de la batterie.** Assurez-vous que les disjoncteurs des modules de batterie et/ou les interrupteurs on/off sont en position "ouvert" ou "off" avant d'installer ou de travailler sur l'onduleur. Utilisez un voltmètre pour confirmer qu'il n'y a pas de tension DC présente afin d'éviter les chocs électriques.
4. **Ne pas ouvrir l'onduleur pendant qu'il fonctionne pour éviter les chocs électriques et les dommages dus à la tension et au courant en direct dans le système.**
5. Ne pas effectuer de connexions ou de déconnexions (PV, batterie, réseau, communication, etc.) pendant que l'onduleur fonctionne.
6. Un installateur doit s'assurer d'être bien protégé par un équipement isolant raisonnable et professionnel (par exemple, équipement de protection individuelle (EPI)).
7. Avant d'installer, d'exploiter ou de maintenir le système, il est important d'inspecter tous les câblages existants pour s'assurer qu'ils répondent aux spécifications et conditions appropriées pour l'utilisation.
8. Assurez-vous que les connexions PV, batterie et réseau à l'onduleur sont sécurisées et appropriées pour éviter les dommages ou les blessures causés par une installation incorrecte.
9. Certains composants du système peuvent être très lourds. Assurez-vous d'utiliser des techniques de levage en équipe parmi d'autres techniques de levage sûres tout au long de l'installation.



AVERTISSEMENT : POUR RÉDUIRE LE RISQUE DE BLESSURE, LISEZ TOUTES LES INSTRUCTIONS !

Tous les travaux sur ce produit (conception du système, installation, exploitation, réglage, configuration et maintenance) doivent être effectués par du personnel qualifié. Pour réduire le risque de choc électrique, ne réalisez aucun entretien autre que ceux spécifiés dans les instructions de fonctionnement, sauf si vous êtes qualifié pour le faire.

10. Lisez toutes les instructions avant d'installer. Pour les travaux électriques, suivez toutes les normes et réglementations locales et nationales de câblage, ainsi que ces instructions d'installation.
11. Assurez-vous que l'onduleur est correctement mis à la terre. Tous les câblages doivent être conformes au Code National de l'Électricité (NEC), ANSI/NFPA 70.
12. L'onduleur et le système peuvent se connecter au réseau électrique uniquement si le fournisseur d'électricité le permet. Consultez l'autorité locale compétente avant d'installer ce produit pour toute réglementation et exigence supplémentaire pour la zone immédiate.
13. Toutes les étiquettes d'avertissement et les plaques signalétiques sur l'onduleur doivent être clairement visibles et ne doivent pas être retirées ou couvertes.
14. L'installateur doit tenir compte de la sécurité des futurs utilisateurs lors du choix de la position et de l'emplacement corrects de l'onduleur, comme spécifié dans ce manuel.
15. Empêchez les enfants de toucher ou de mal utiliser l'onduleur et les systèmes pertinents.
16. **Attention !** L'onduleur et certaines parties du système peuvent être chauds lorsqu'ils sont utilisés. Ne touchez pas la surface de l'onduleur ou la plupart des pièces lorsqu'elles fonctionnent. Pendant le fonctionnement, seuls l'écran LCD et les boutons doivent être touchés.



AVERTISSEMENT !

Cancer et dommages reproductifs – Voir www.P65Warnings.ca.gov pour plus de détails.


DISCLAIMER

EG4® se réserve le droit de modifier le contenu de ce document à tout moment sans préavis. Veuillez consulter www.eg4electronics.com pour la version la plus récente de nos manuels/fiches techniques.


5. BRIEF INTRODUCTION

5.1 INVERTER FEATURES

- Applicable for purely off-grid inverter/backup power situations.
- Integrated with 2 MPPT solar charge controllers with maximum PV input of 480V with an optimal range of 120VDC-385VDC.
- Additional safety features such as PV Arc Fault Protection and PV Ground Fault Protection.
- Rated for 6kW output, with a power factor of 1.
- Able to run without battery in off-grid mode.
- Able to utilize generators with dedicated generator terminals.
- Supports paralleling for up to 16 inverters.
- Supports CAN/RS485 for lithium battery communications.
- Features remote monitoring and firmware updates via mobile phone app or monitoring system website.

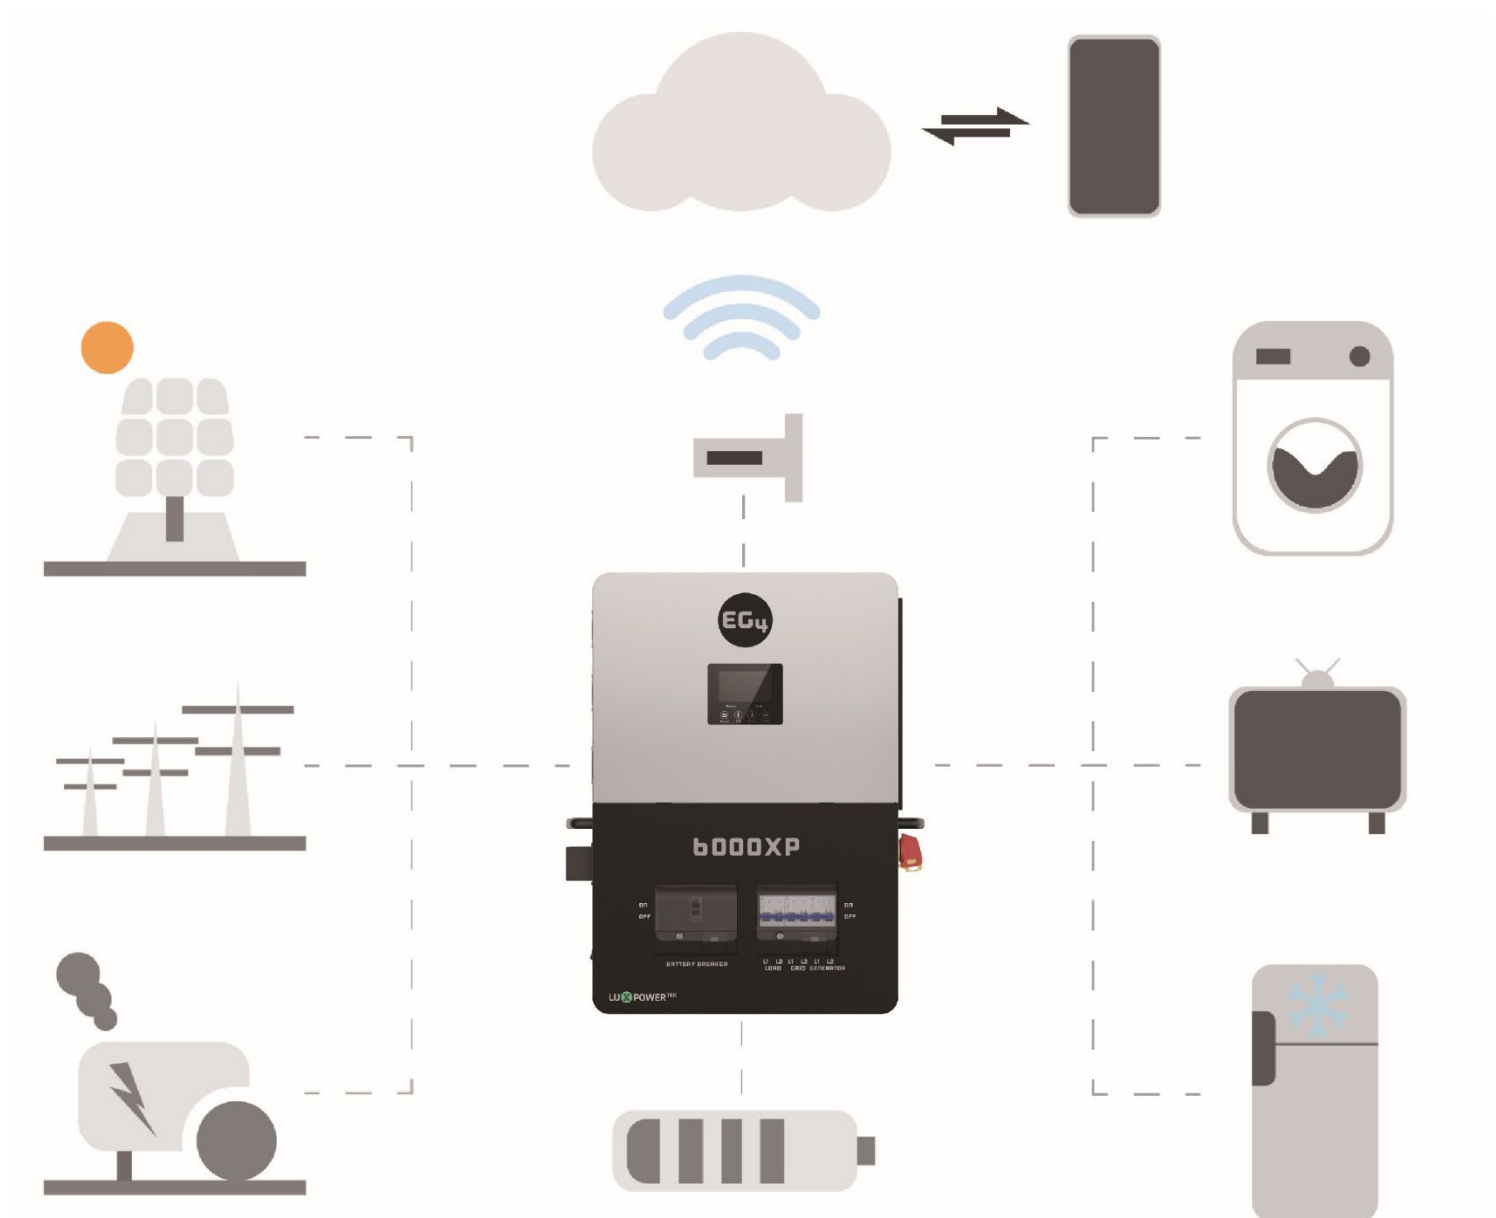

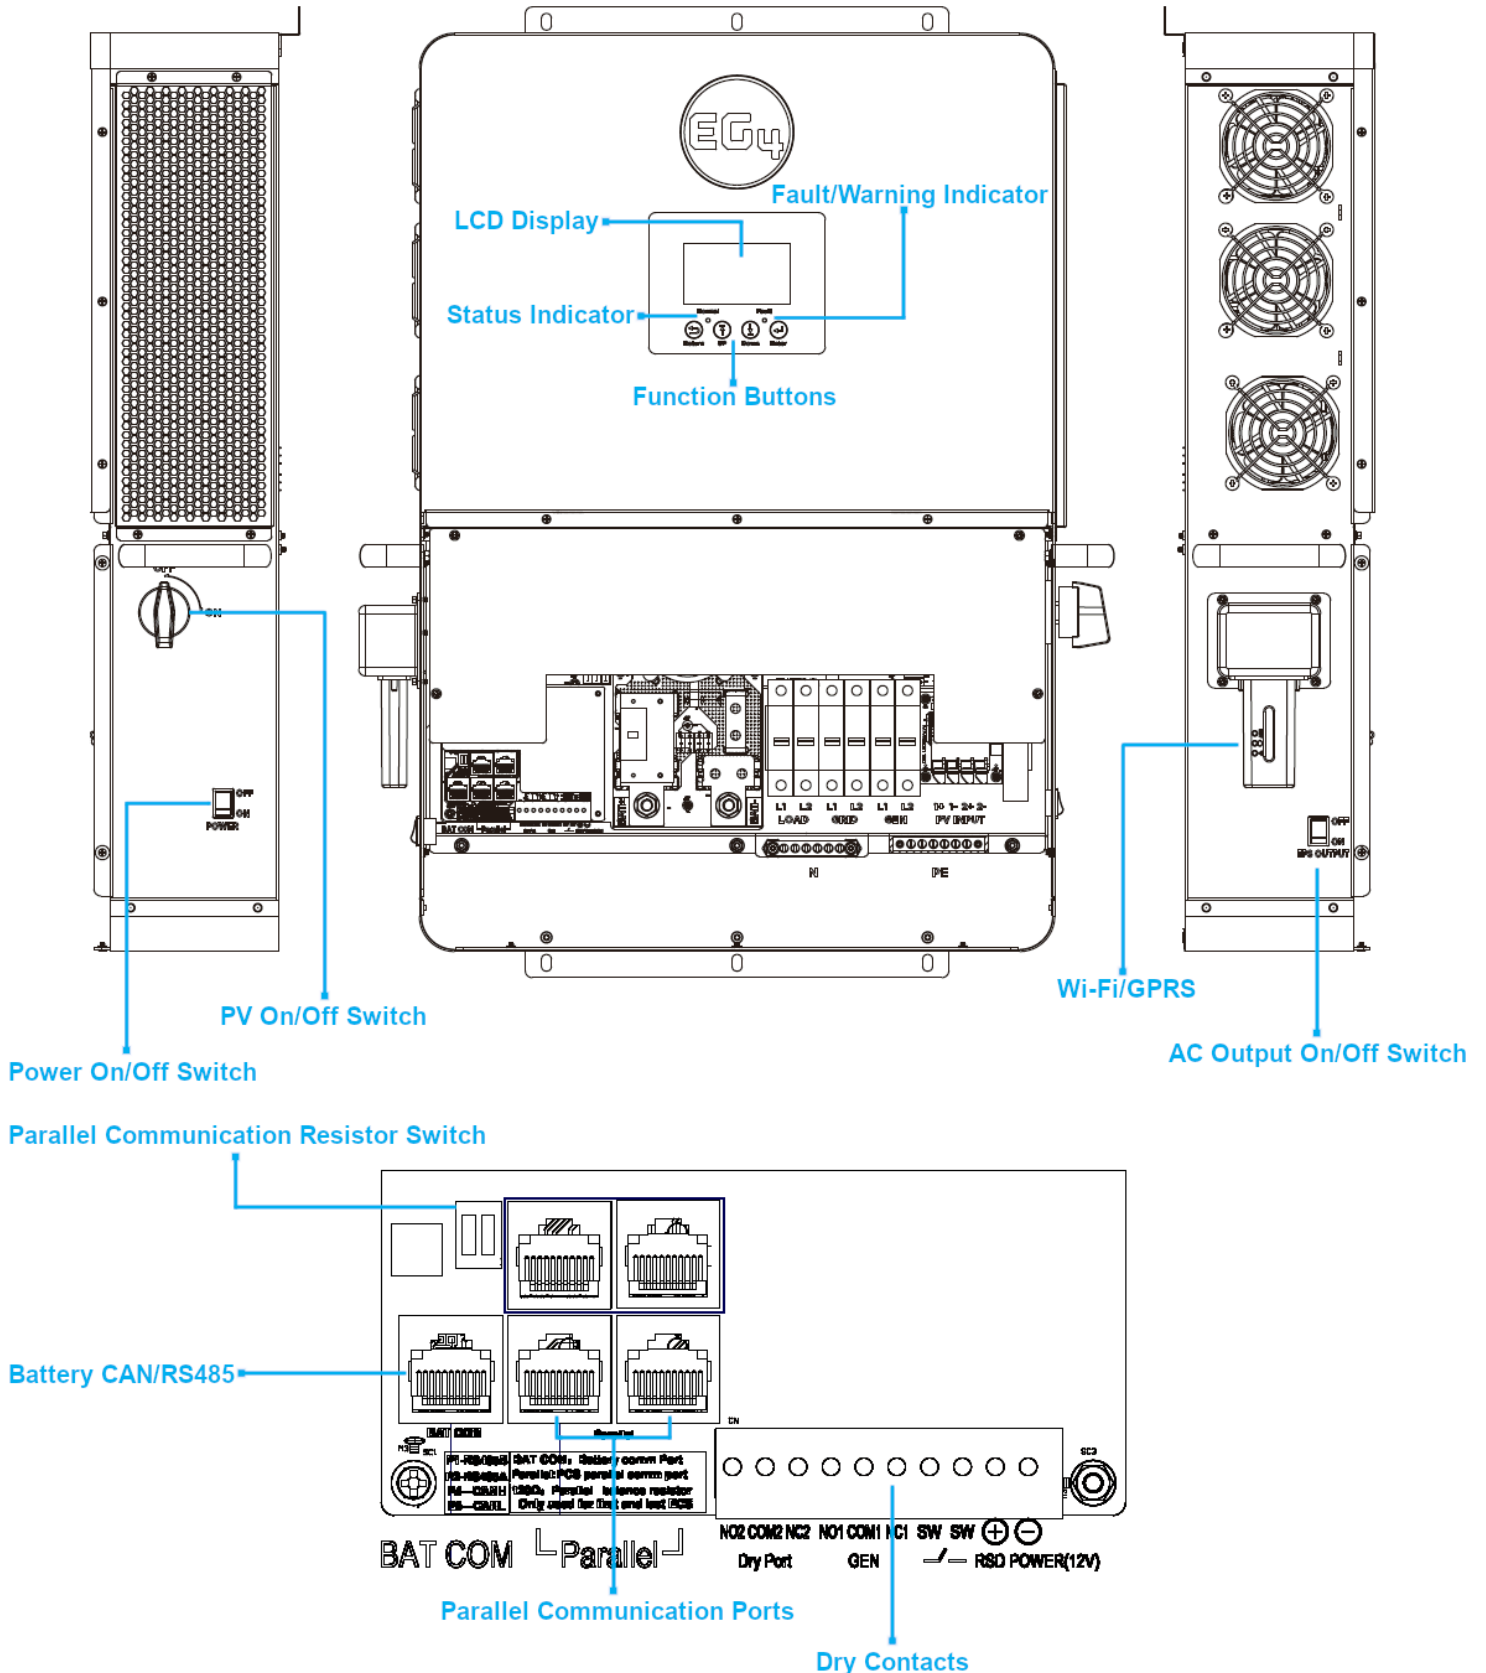







5.2 INVERTER INTERFACE



6. INSTALLATION

6.1 PACKING LIST

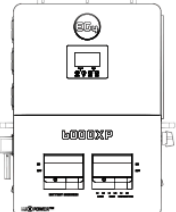When the product is unpacked, the contents should match those listed below:

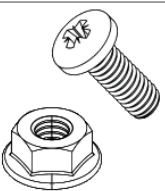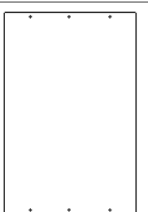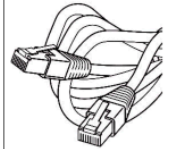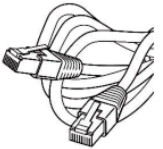
 6000XP Inverter	 User Manual	 Expansion Screws and Tubes (6)	 Wi-Fi Module (1)
 Cross-Head Screws M8 Flange Nut (2) M3 x 10 (4)	 Mounting Template	 Inverter to Battery Comm. Cable (78in. length) (1)	 Inverter to Inverter Comm. Cable (78in. length) (1)

Pictures are for reference only.


6.2 LOCATION SELECTION AND INSTALLATION

1. The mounting wall should be strong enough to bear the weight of the inverter.
2. Please maintain the minimum clearances presented below for adequate heat dissipation.
3. The inverter should be installed upright on a vertical surface.

Inverter Spacing Diagram

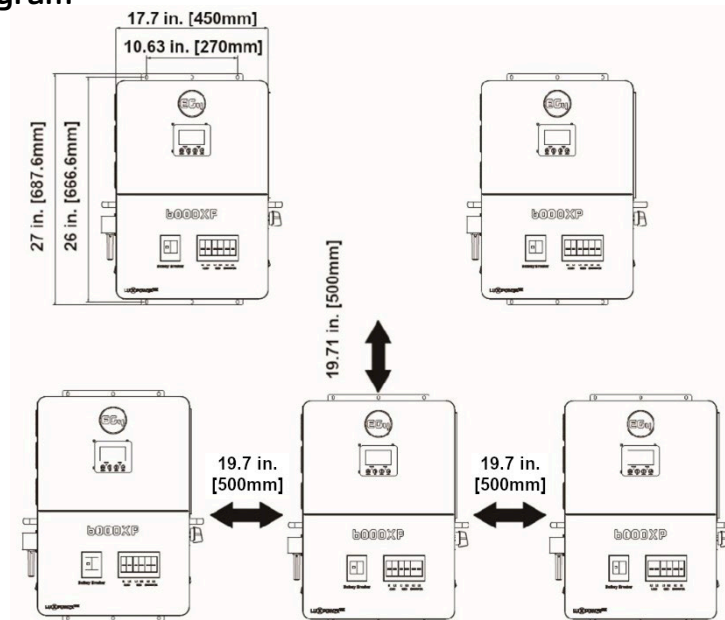


Inverter Angle Placement

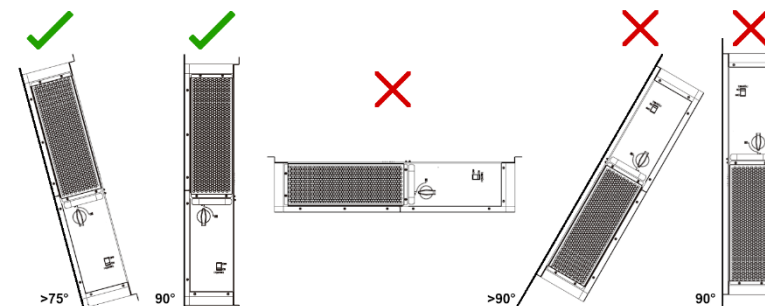

6.3 STORAGE INFORMATION


If placing the inverter into storage before installation, please keep the following factors in mind when selecting a storage location.

1. The inverter and its components must be stored in its original packaging.
2. The storage temperature should remain within 5 – 140°F (-15 – 60°C), and humidity within 0-85%.
3. The package should remain upright.
4. **Do not** store the inverter or its packaging in direct sunlight or where there is potential for water to accumulate.
5. See diagram below for an example.

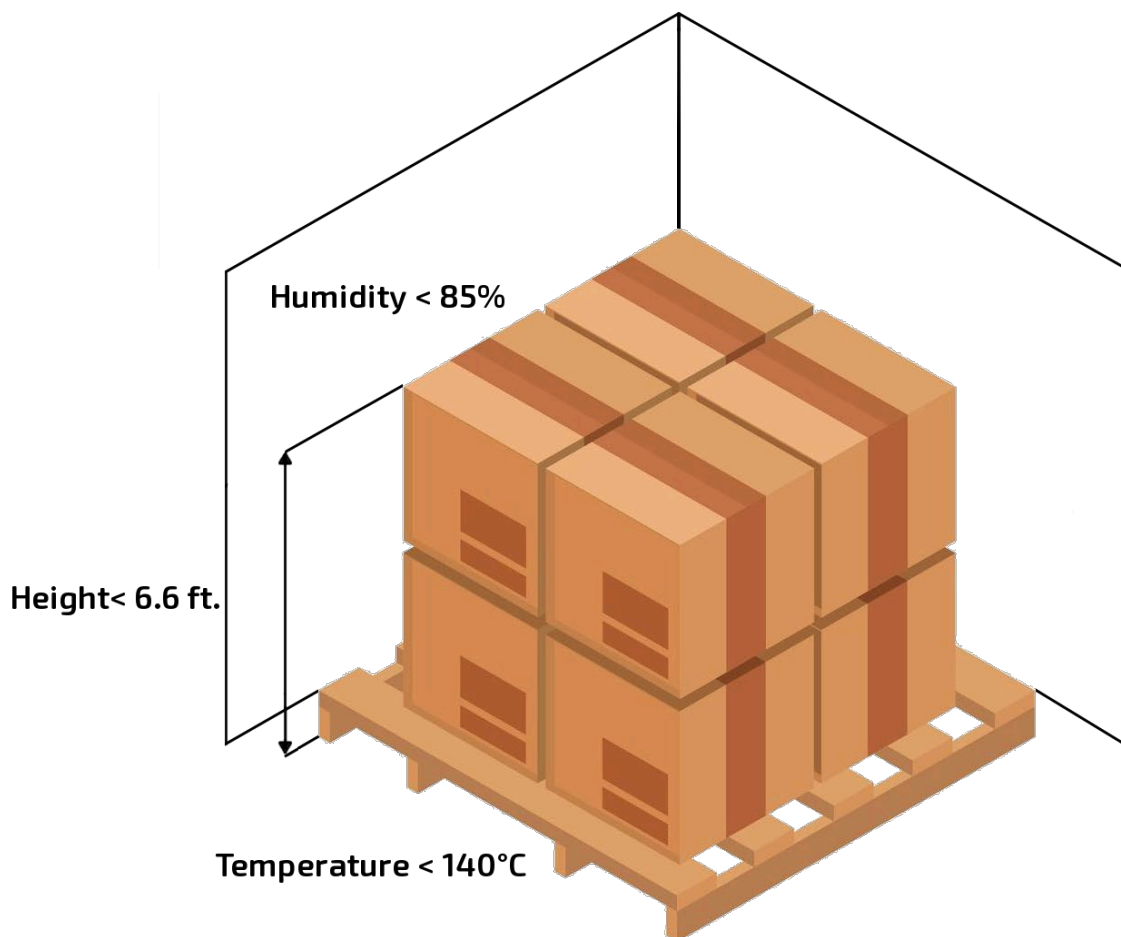

6.3.1 INSTALLING THE INVERTER

The inverter is designed to be wall-mounted and should be installed on a vertical, solid, mounting surface, such as brick, concrete, or other **non-combustible** material. Two or more people may be needed to install the inverter due to its weight (≈ 53 lbs.).

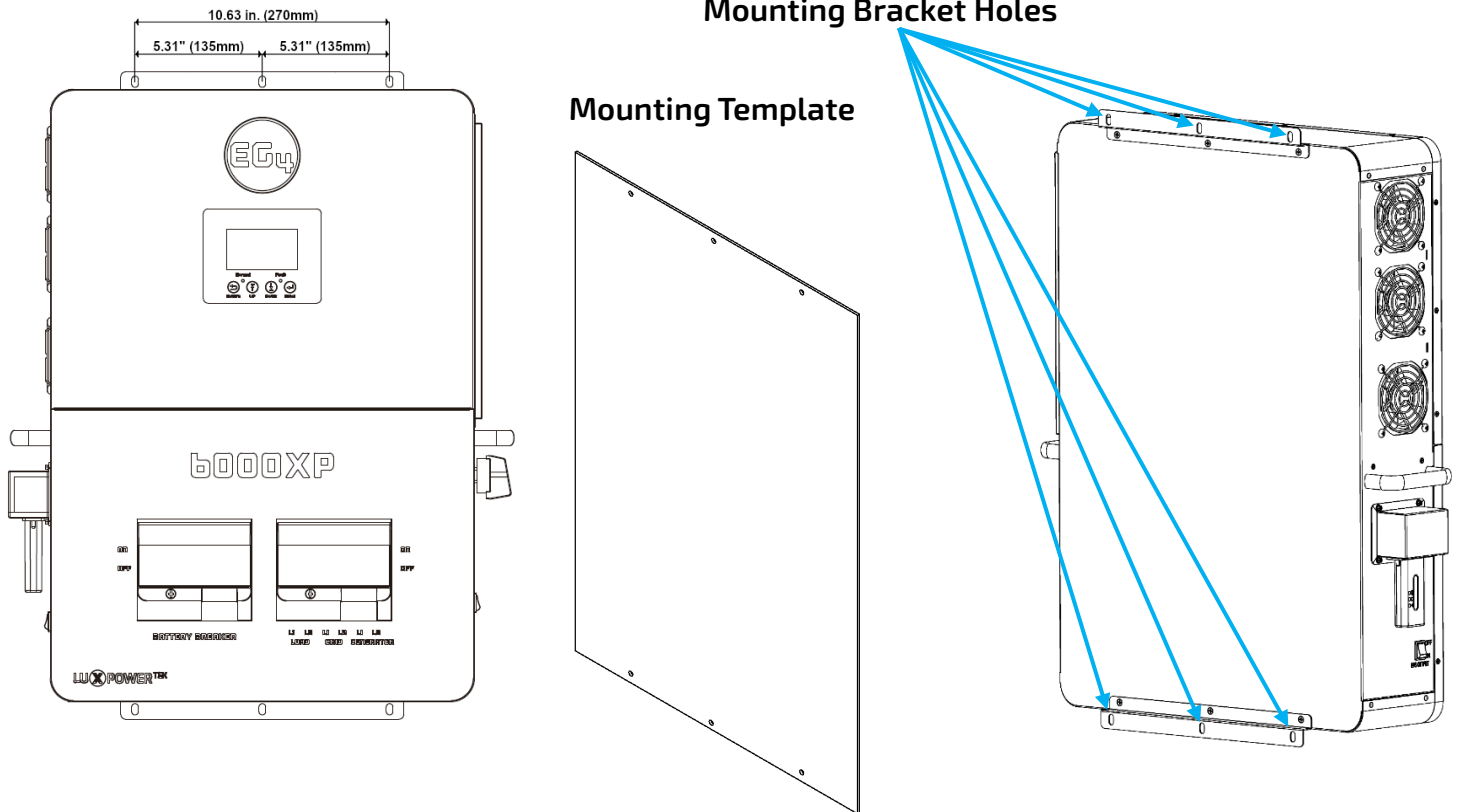

NOTE:

Ensure the surface the inverter is being mounted to is able to support the weight of the unit and has proper spacing as per the diagram on the previous page.


Mounting Steps

1. Identify where the inverter's final placement will be.
2. Use the included cardboard template to mark where the mounting screws will be installed.
3. Using a ruler, ensure the top left to top right marks are ≈ 10.63 in. apart, along with the bottom left to bottom right marks.
4. Using a ruler, ensure the top left to bottom left marks are ≈ 26.2 in., along with the top right to bottom right marks.
5. Place the inverter over the holes to ensure they line up with the bracket plate. Upon confirmation, proceed to the next step.
6. Drill $5/16$ in. (8 mm) diameter holes on the marks, making sure the holes are deeper than 2 in. (50 mm).
7. Insert the expansion bolts into the drilled holes.
8. Use the corresponding nuts and washers (packaged together with the expansion bolts) to install and affix the inverter onto the wall. Use the team-lift technique to ensure the users' safety.

6.4 CONNECTION OVERVIEW

6.4.1 SYSTEM CONNECTIONS

Before connecting wiring, please remove the bottom cover by removing the 7 screws as shown below.

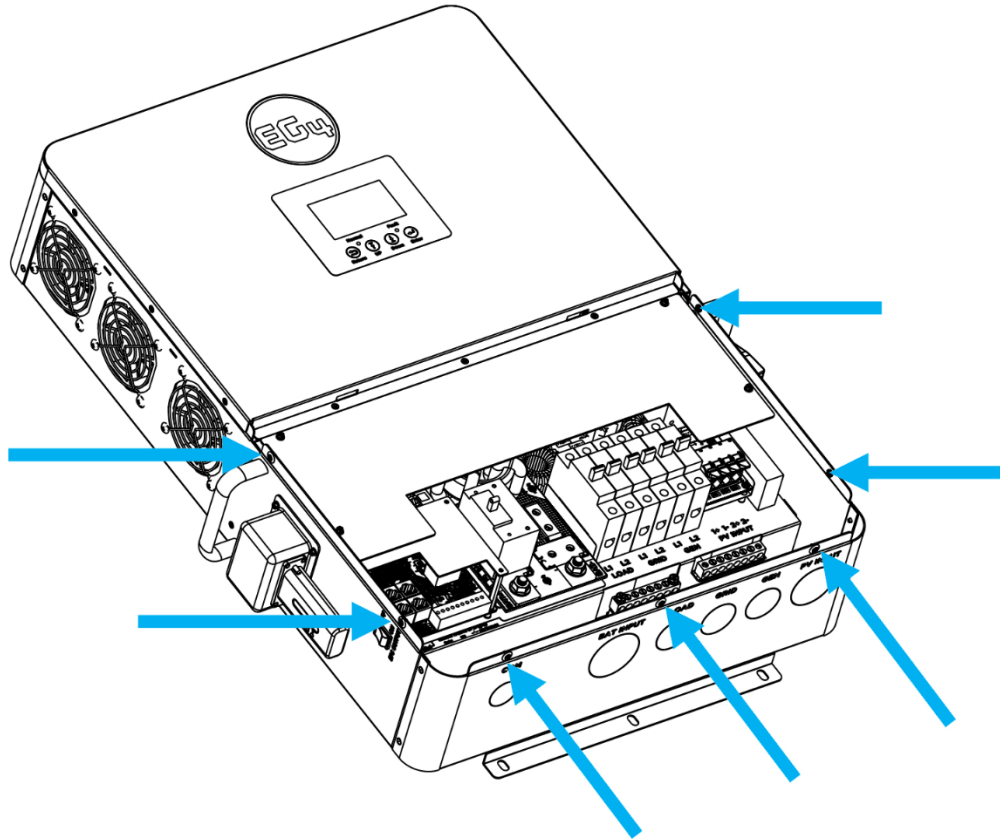

6.5 PV CONNECTION

6.5.1 CONNECTING PV TO THE INVERTER

Install a separate DC circuit breaker/isolator between the inverter and PV module(s). The recommended DC breaker is a 4-pole 600V/20A, which is the minimum sized isolator switch to house both positives and both negatives if using two independent strings. If only using 1 string, a 2 pole 600V/20A isolator/breaker is recommended. The recommended cable size for the PV connection(s) is 10 AWG (4mm²) torqued to 10.6 in-lbs. (1.2 Nm).



NOTE:

The inverter will not charge with PV with the inverter in standby and the EPS switch turned OFF. If you put the inverter into “normal” mode, and turn off the EPS switch, you will be able to charge with PV.

PV Cable Size	Min. PV Disconnect/Isolator Spec	Torque Specs
10 AWG – 6 AWG (Max) (6mm ² - 16mm ²)	600V/20A	10.6 in-lbs. (1.2 Nm)

Consult with the installer to ensure that appropriate cable sizing is used due to various factors such as voltage drop and Voc.



REMINDER

Verify the lowest ambient temperature of the installation location. The rated Voc on the solar module nameplate is obtained at STC (Standard Testing Conditions = 77°F/25°C). As the ambient temperature drops, the solar module Voc increases. Please ensure the maximum solar string voltage, corrected at the lowest temperature, **does not exceed** the inverter's maximum input voltage of 480VDC.

PV Input Data	Description	Parameter
DC Input Voltage Range	Range required for the unit to operate up to max input	100–480VDC
Load Output Minimum Voltage	Minimum voltage needed to output power on Load side	>140VDC
MPP Operating Voltage Range	Range where the MPPT can track	120–385VDC
Nominal MPPT Voltage	The MPPT will operate most optimally at this voltage	320VDC
Nominal MPPT Amperage	The MPPT will operate most optimally at this amperage	17A
Maximum MPPT Amperage	The MPPT can accept up to this amperage (clipping will occur past this value)	25A
Maximum Utilized Solar Power	Wattage the unit can utilize from array after considering all power loss factors	8kW

6.5.2 STRING SIZING

When solar modules are put in a series string, the voltage multiplies times the number of modules and the amperage stays the same as each module.



NOTE:

Each MPPT is rated for 4kW of solar input which leads to 8kW PV input in total. Size the PV strings accordingly for maximum gain.

For example: Using solar modules that have a 40VDC Voc (@77°F) with a Max Power amperage of 10 Amps (Imp) - 10 modules wired in a series string would have a Voc of 400VDC (@77°F) and a string amperage of 10 Amps. When the temperature lowers, the voltage can rise above the maximum allowed by the inverter and damage will result.

To determine how many modules per string; first verify the lowest possible ambient temperature of the installation location. Next, find the rated Voc, Vmp, Isc and Imp of the solar module at 77°F and the temperature coefficients for voltage and power. Then, calculate highest possible Voc for the entire string when the ambient temperature falls to the lowest possible ambient temperature upon sunrise. To make this calculation, use a string calculator or consult a solar designer or solar electrician.



CAUTION! FOR ALL MODULES, THE CALCULATIONS NEED TO BE PERFORMED OR VERIFIED BY USING A STRING CALCULATOR OR CONSULTING A PROFESSIONAL.

Finally, calculate the maximum current of the string (Isc) so as not to exceed the inverter's MPPT circuit ratings of 25A (see note at end of section). Double check if the calculated Vmp range is within the 120–385VDC optimal MPPT circuit operating range. It is recommended to consult a solar designer for assistance.



DANGER: Damage WILL occur if the string voltage exceeds the inverter's maximum input voltage of 480VDC!

The inverter has two MPPT PV charging circuits. MPPT #1 and #2 will utilize up to 17 amps, which means two strings can be paralleled for any modules having less than 8.5A (I_{mp}) rating.

When sizing strings for each MPPT, they **MUST** be the same model, brand and # per string (series and parallel).

All panels on a series/parallel string should face the same orientation and be exposed to roughly the same shading across the string. Consideration should be placed on string location and wiring order on the racking to minimize shading effects. One shaded module will disproportionately reduce the output of the entire string. This can be mitigated by avoiding linear strings in favor of rectangular strings, or by the use of string optimizers.

6.5.1 PV WIRING INSTRUCTIONS



NOTE: The array may have a higher I_{mp} than the 17A specified, but the MPPTs may not make full use of the extra current which could lead to component deterioration over time.



WARNING:

Please follow the steps listed below to ensure proper PV connections.

Step 1: Before installing PV wiring into the inverter, please ensure all breakers and disconnects are open (off) and confirm the PV strings are not energized by using a multimeter to ensure there is no DC voltage on the lines. Once that has been verified, please proceed to step 2.

Step 2: Strip off 1/4 - 5/16 in. (6 – 8mm) insulation from the PV strings' positive and negative conductors.



NOTE: If using fine stranded wire, use ferrules to secure the connections to the inverter


Step 3: Route the PV conductors through the conduit fitting and into the inverter.

Step 4: Locate the orange tabs (see image on next page) that hold the PV inputs and pull each tab that will be utilized up until it locks into an open position.

Step 5: Insert the conduit fitting into the openings for the PV connections and close (press down) the orange tab to lock the conductors in place.

Step 6: Ensure the conduit and conduit fittings are fastened reliably, and the cable entry holes are sealed.

Please see the diagram on the following page for PV terminal labeling:

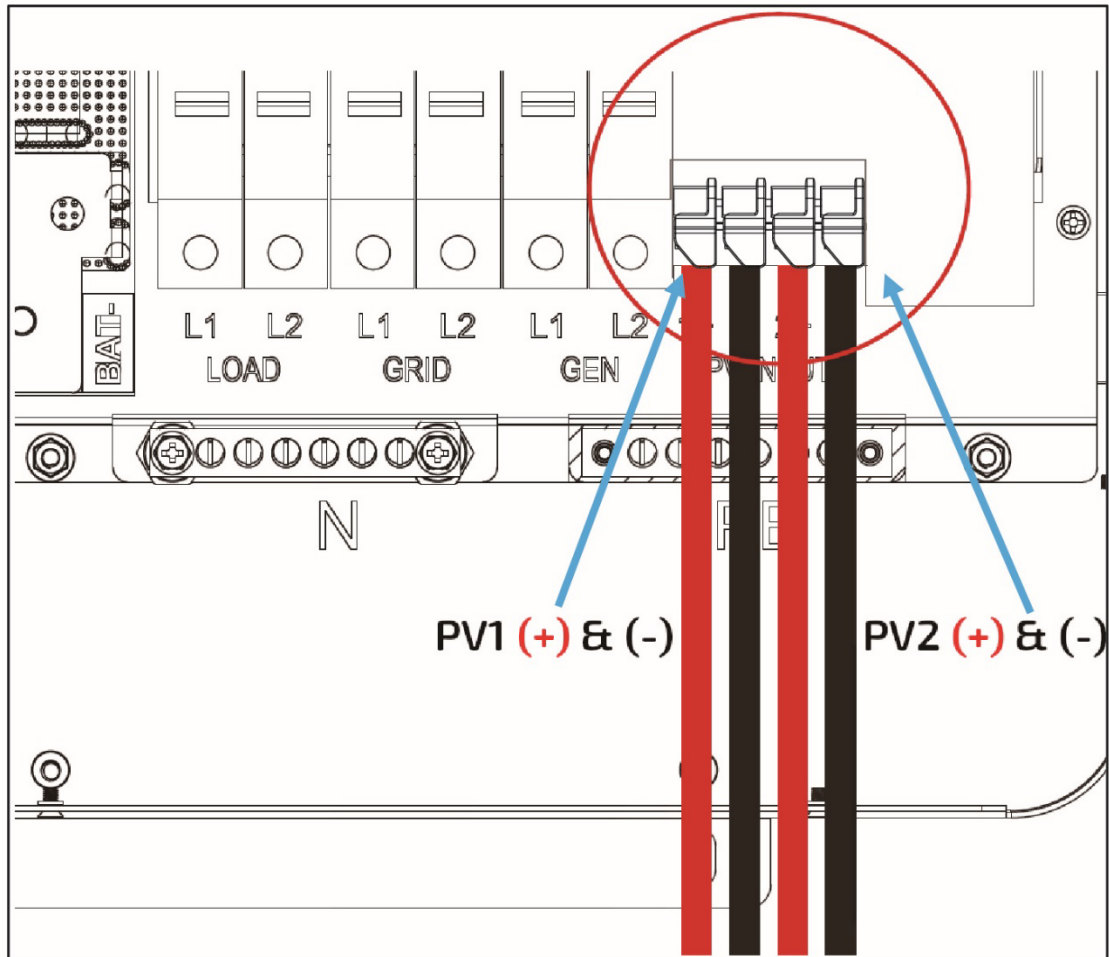

NOTE: All exposed metal parts of the system must be grounded regardless of voltage, including solar panel frames.

DO NOT GROUND NEGATIVE PV LINES, ONLY SOLAR PANEL FRAMES!

6.6 BATTERY CONNECTION

The EG4 6000XP can utilize either Lithium or Lead-Acid batteries. There is a combination of settings that need to be configured depending on the battery type.



NOTE: For Lead-Acid batteries, the recommended charge current is 0.2C

6.6.1 BATTERY CABLE CONNECTION

Follow the steps below to properly connect the battery wires.


Step 1: Place all breakers in the open (off) position before connecting or disconnecting wires. Ensure that there is no DC voltage present with a voltmeter.

Step 2: Assemble battery ring terminal based on recommended battery cable and terminal size (see table below).

Step 3: Connect all batteries as the unit requires.



NOTE: If using a battery rack, ensure that all battery connections are installed properly before proceeding. Please refer to battery manual for more information.

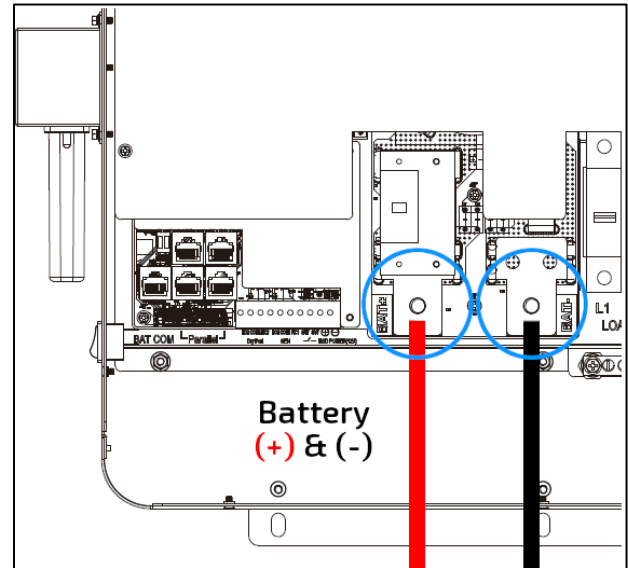

NOTE: The recommended battery capacity of one 6000XP inverter is $\geq 200\text{AH}$

Step 4: Connect the positive battery cable (Red) to the positive battery terminal (BAT+) and the negative battery cable (Black) to the negative battery terminal (BAT-) with a torque rating of $\approx 97 - 106$ in-lbs. (11 – 12 Nm) per connection.

Step 5: Be sure not to cross-polarize, as this **will damage** the equipment.

The recommended battery cable and terminal size are as follows:

Maximum Amperage	Battery Capacity	Wire Size	Ring Terminal			Torque Value	Terminal Temperature Rating
			Cable (mm²)	Dimensions			
				Depth	Length		
140A*	≥200AH	1 AWG	38	.25 in. (6.4mm)	1.5 in. (39.2mm)	97 – 106 in-lbs. (11 – 12 Nm)	-40 - +248°F (-40° - +120°C)


***Charging Current:** 115A @48VDC (AC), 125A @48VDC (PV)

***Discharging Current:** 140A

6.6.2 LITHIUM BATTERY COMMUNICATIONS

Upon successful installation of the batteries, follow the next steps to enable closed-loop communications (with compatible battery modules) between batteries and inverter.

1. Connect either the CAN or RS485 (depending on make/model of battery) communications cable between inverter and battery. See diagram below:

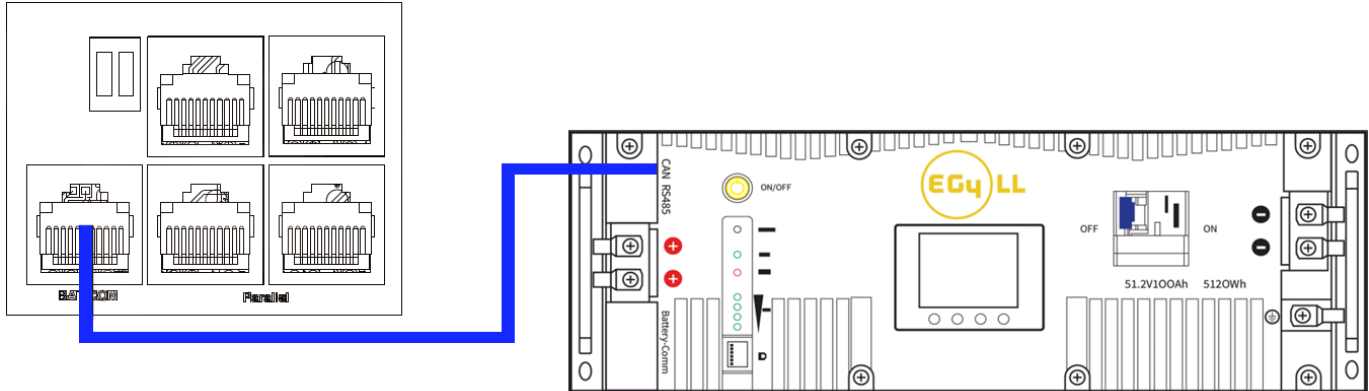

2. For the inverter to communicate with the battery BMS, setting 3 must be changed to “Lithium”. The inverter will then switch to a secondary setting. Here, select the make/model of battery and press enter to register the change. For EG4 batteries, select “1” after confirming “Lithium” as the battery type.



NOTE: If using EG4® LifePower4 V1 batteries in the system, a firmware update is required for closed-loop communications. Contact the distributor for this file or navigate to <https://www.eg4electronics.com/> for the most recent updates and documentation. For communication with EG4 batteries, select “Lithium” under “Battery Type” and then select “1” under “Lithium Type”.

- If using LifePower4 V1 batteries or RS485 communications, use “0:EG4” under “Lithium Type”.



NOTE: If needing to extend the inverter to battery communication cable, or to build a new one, please refer to the following table for the inverter pinout descriptions.

For battery specific pinouts, please refer to the respective battery user manual.

PIN #		1	2	3	4	5	6	7	8
CAN	Pin	X	X	X	BMS_CAN H	BMS_CAN L	X	X	X
RS485	Description	BMS_485 B	BMS_485 A	X	X	X			

6.7 AC WIRING INFORMATION

When sizing AC wires, please adhere to the following information.

AC Cable Requirements:

Terminal Connection	Wire Size	Torque Values
GRID	8 AWG (10mm ²)	18 in-lbs. (2 Nm)
GEN	8 AWG (10mm ²)	18 in-lbs. (2 Nm)
LOAD	8 AWG (10mm ²)	18 in-lbs. (2 Nm)

Ground-Neutral Bonding

The information below describes the nature of the ground and neutral in the inverter and their relationship to the system. Always consult with the installer or a licensed electrician to ensure that the right configuration is being used:

- The neutral line is a solid connection between AC input and AC output (known as a Common Neutral Architecture).
- The neutral line between the AC input and AC output is never disconnected.
- This architecture assumes there is a single neutral-ground bond in the system. Typically, the neutral-ground bond for a system will be at the first means of disconnect for the grid. However, if there is no neutral-ground bond in the system, the 6000XP can be configured to create the bond internally (*see setting 26*).



WARNING: This is not a dynamic bond. It is either always enabled or always disabled.



NOTE: Always be sure to connect the AC Output ground wire to the Ground terminal bus (labeled PE in the diagram) first before installing AC Outputs L1 and L2.

6.7.1 STEPS FOR AC CONNECTION

Please follow the steps outlined below to ensure proper AC Input/Output connections.


Step 1: Before installation of **any** wiring, please ensure all breakers are open (off) before making any connections. Use a multimeter to confirm the AC Input lines (L1, L2 and neutral) are not energized.

Step 2: Strip off 5/16-3/8 in. (8-10 mm) insulation from the AC cables.

Step 3: Fasten the AC Input wires into their respective terminals using the proper torque ratings.

Standard US Wiring

L1 – Black
L2 – Red
Neutral – White
Ground – Green

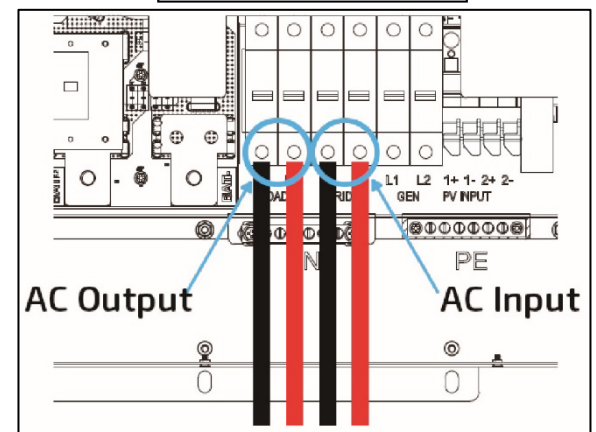

IMPORTANT:

Double check the neutral busbar for the inverter's internal neutral wire connection before making any connections. Do not install the neutral wire into the same lug as the inverter's neutral. This may disconnect the inverter's neutral from the bus and/or potentially create a double land scenario. This may lead to component damage.




NOTE:

After connecting all AC wiring, put the built-in LOAD breaker back to the ON position before providing power to the load.

AC Input/Output Connections for 240V Operation

The following steps detail how to wire AC power at 240V. When connecting the inverter in a 240V configuration, all three lines—L1 (black), L2 (red), and N (orange)—must be properly connected to their respective terminals. Follow these steps for safe installation:

1. Turn off the AC breaker and ensure the system is fully powered down before making AC input/output connections.
2. Prepare the AC input/output wires by stripping approximately 10mm (~3/8 in.) of insulation from the wire ends.
3. Connect L1 (black) and L2 (red) to their respective terminals marked as L1 and L2, and connect N (orange) to the neutral terminal.
4. Secure the PE (Ground) wire (yellow-green) to the PE terminal to ensure proper grounding.
5. Tighten all terminal screws to ensure a secure and reliable connection.
6. This 240V setup allows the inverter to operate at full capacity, supporting both 120V and 240V loads, and providing the maximum efficiency for battery charging.

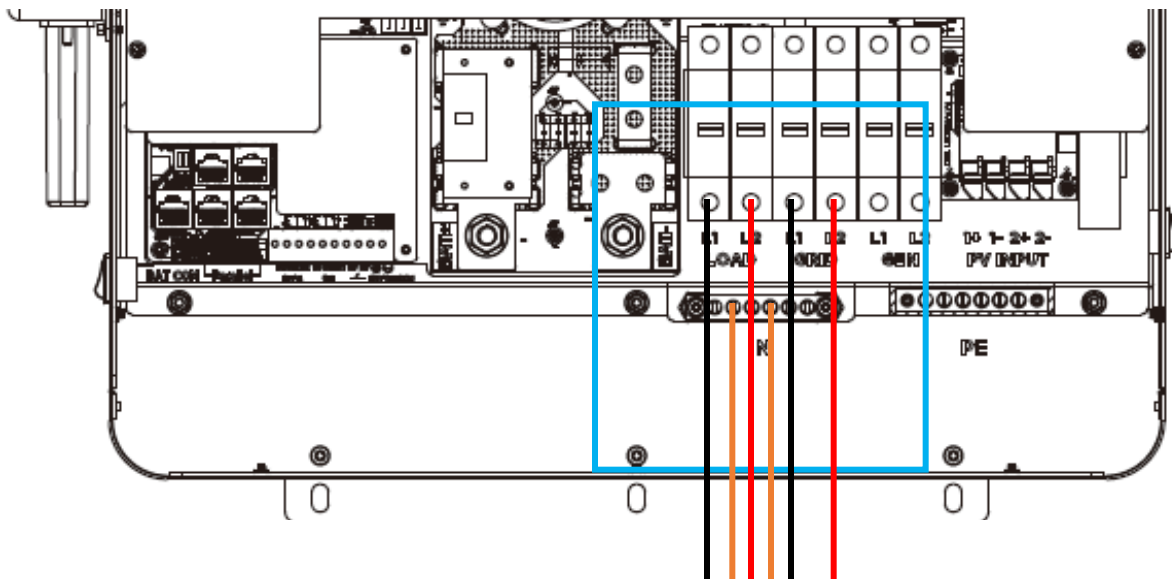

AC Input/Output Connection for 120V Operation


The following steps detail how to wire AC power at 120V. If only 120V power is available, only connect the L1 (black) and N (orange) wire to the inverter's respective terminals; the charging efficiency and output will be derated to half of the optimal operations. Follow these steps for safe installation:



IMPORTANT:

In order to achieve proper 120V operation, ensure that the inverter is on firmware update 190D0E or higher.

1. Turn off the AC breaker and ensure the system is powered down before making any connections.
2. Prepare the AC input/output wires by stripping approximately 10mm (~3/8 in.) of insulation.
3. Connect L1 (black) to the L1 terminal and N (orange) to the neutral terminal. Ensure the PE (Ground) wire is securely connected to the PE terminal.
4. Tighten all terminal screws to prevent any loose connections.
5. In this 120V configuration, the system will operate at reduced capacity, only supporting 120V loads. Additionally, the battery charging efficiency will be reduced by approximately 50% compared to the 240V configuration.

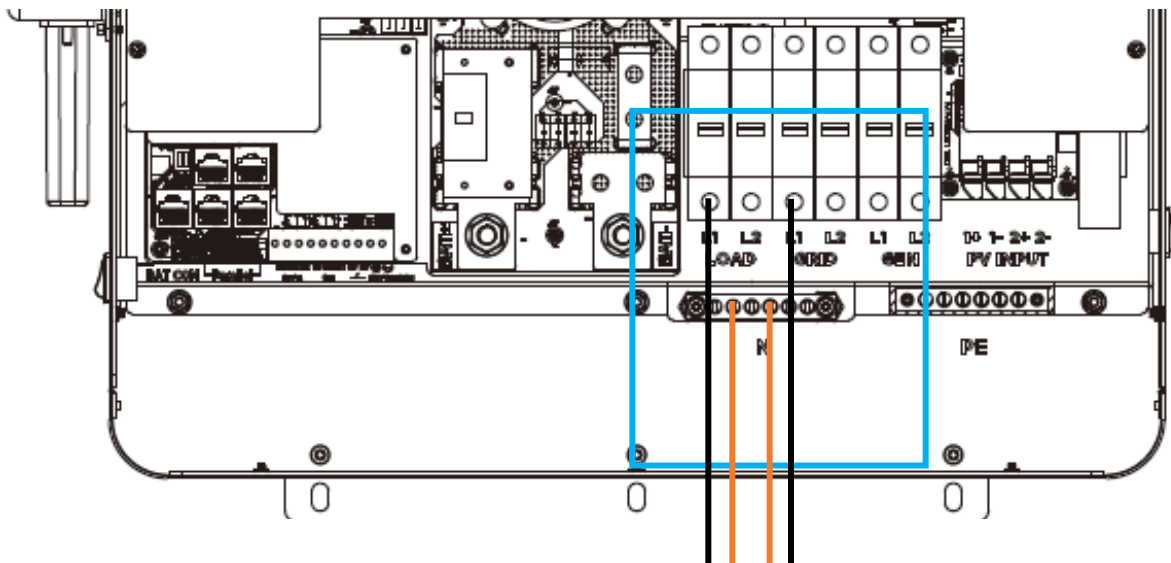

6.8 WORKING WITH A GENERATOR

6.8.1 GENERATOR SYSTEM CONNECTION

The EG4 6000XP can utilize a generator for backup power in the case of Grid failure. When sizing generators to provide both adequate power and frequency, keep in mind that the THD (Total Harmonic Distortion) of the generator must be <3%. It is a good rule of thumb to size the generator for **at least** 1.5x the output of the inverter to allow for powering loads and charging batteries. The table listed below shows the recommended generator capacity for optimal operations.

Number of Inverters in Parallel	Generator Capacity
1	>10kW
2	>15kW
3	>20kW
4	>25kW

When properly wired and configured, the generator, if compatible with remote start, will start automatically when the battery voltage/SOC is lower than the cut-off value or there is a charge request from the BMS. When the generator is running, it will charge the batteries and excess AC power will be diverted to the AC output (LOAD) to power loads. The pass-through relay on the inverter's generator terminal (GEN) is 50A. When the generator is on, please ensure the total load and charge current does not exceed 50A.

6.8.2 INTEGRATED TWO-WIRE START/STOP



This inverter has 2 two-wire start/stop contact connections that can be used to remotely enable external devices such as a generator. The Dry Port (NO2, COM2) can be used to remotely enable an external device when the battery voltage reaches a pre-set warning level. Similarly, the GEN Port (NO1, COM1) can be used to remotely start a generator. To do so, the generator start signal must be connected to the inverter GEN contacts, NO1 and COM1.



REMINDER: NO = Normally Open, COM = Common

Dry Port and GEN relay maximum specification: 250VAC, 5A

The following table shows the ports' status under various system conditions.

Inverter Status	Condition		Dry Port Status	GEN Port Status
				
Power Off	Inverter is off and no output is powered		Open	Open
Power On	Without Grid	Battery Voltage/SOC < Generator Charge Start Voltage/SOC	Closed	Closed
		Battery Voltage/SOC > Generator Charge Stop Voltage/SOC	Open	Open
	With Grid	Battery Voltage/SOC < Generator Charge Start Voltage/SOC	Closed	Open
		Battery Voltage/SOC > Generator Charge Stop Voltage/SOC	Open	Open



NOTE: If running more than one inverter in the system, the generator must be wired to provide power to every inverter running in parallel for the inverters to function as intended.

6.8.3 GENERATOR AC CONNECTIONS


Please follow the steps listed below to ensure the generator connections are properly installed.

Step 1: Before making any wiring connections, be sure to have the inverter(s) powered off, the generator powered off, and all circuit breakers open (off) to prevent damage to the unit.

Step 2: Properly identify the generator's output lines. By US wiring standards, L1 wire will be black, L2 will be red, Neutral will be white, and ground will be green. Once identified, remove $\approx 3/8$ in. (≈ 10 mm) from the insulation sleeve on the wires.

Step 3: Ground the generator's output ground to the Ground Bus (labelled PE) of the inverter.

Step 4: Install L1 to the GEN port's L1 terminal, then install L2 to the GEN port's L2 terminal. Next, fasten the Neutral wire from the generator into the N-BUS (Neutral Bus).

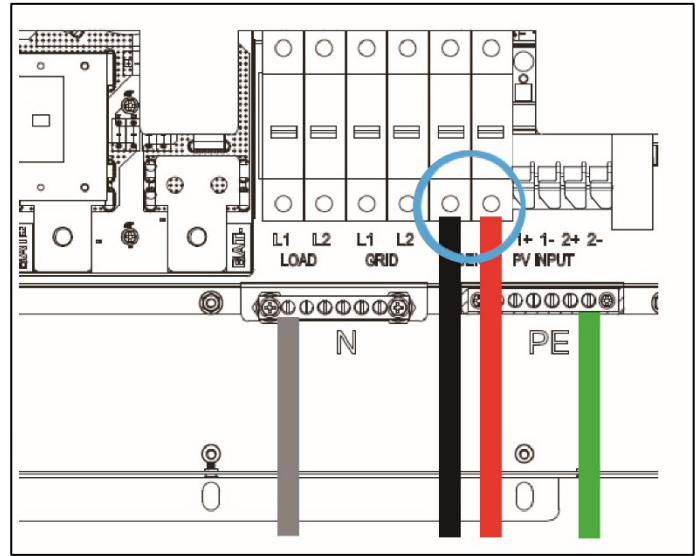

6.9 GENERATOR START AND STOP SETTINGS

Using the EG4 Monitoring Software, go to the “Maintenance” page where “Remote Set” will be selected automatically. Scroll to the “Generator Charge” section and select the “Generator Charge Type” (see screenshot below). Normally, lead-acid batteries are charged according to voltage and Lithium batteries are charged according to SOC.

Generator Start Conditions:

The generator will start when utility fails **and** one of the following conditions is met:

- The battery is discharged to the cut-off setting **or**
- There is a force charge request from battery **or**
- The battery voltage or SOC is lower than the “**Generator Charge Start Battery Volt/SOC**” setting

Generator Stop Conditions:

When battery voltage or SOC is higher than the “**Generator Charge End Battery Volt/SOC**” settings.

6.10 OFF-GRID

The 6000XP Inverter can fully function in off-grid only mode. It does not need the utility or generator to function. Purely off-grid systems that do not have access to the utility should strongly consider having a 2-wire start backup generator for extended cloudy periods (8-12 kW diesel recommended per 6000XP - 8kW **minimum** per inverter). Off-Grid systems should have robust battery banks sized to ensure multiple days of power and to reduce generator run time.

6.10.1 OFF-GRID WIRING

The 6000XP can accept up to 50 Amps (12kW) of generator power and will pass through all available power to the loads. Therefore, the loads subpanel can be sized up to the size of the backup generator with 50 Amps minimum per inverter.

6.11 AC COUPLING INSTALLATION CONNECTION

AC coupling allows the user to add onto an existing grid tied solar system. PV comes from the existing system while the AC coupled inverter controls battery charging and any extra PV coming into the system. This setting allows the user to still have power off grid. The inverter can accept PV inputs to both MPPT channels and AC coupled solar input simultaneously. The AC coupled solar input can be up to 50A of AC power while the MPPT channels can handle up to 8kW of solar. The existing solar system is connected to the inverter's GEN terminal.

To set AC coupling, ensure the inverter is in standby mode. Then navigate to setting 32 where AC coupling can be enabled and battery voltage or SOC can be set. Take the inverter out of standby mode afterwards.

After the AC couple function is enabled:

When battery SOC or voltage gets below the set parameters, AC coupling will engage and use PV from the existing solar system to charge the batteries. When the battery bank is charged to the set limit, the inverter will continue to control the loads without charging the battery bank. There will be about a 5-minute delay for AC coupling to turn on.

AC Coupling Settings:

The “AC couple” setting must be enabled when connecting an existing on-grid system to the GEN terminal.

Start SOC/Voltage (%/V): The battery SOC or Voltage at which the AC coupled inverters are turned on (50% to 70% recommended).

End SOC/Voltage (%/V): The battery SOC or Voltage at which the AC coupled inverters stop charging batteries (90% recommended).



NOTE:

- It is recommended to keep the Start V/SOC and the End V/SOC within 5 – 10% of each other for optimal operations when utilizing AC Coupling.
- If looking to frequency shift when AC Coupling, it is recommended to set the Start SOC to 99% and the End SOC to 100%.

6.12 PARALLELING INFORMATION & DIAGRAMS


6.12.1 PARALLEL CONNECTIONS

The EG4 6000XP inverter supports parallel connections to expand power and energy capacity to suit different usage scenarios. **Up to 16 units can be paralleled to reach a capacity of up to 96kW.** The parallel communication wiring diagrams are shown below. The bypass switch connects the loads to LOAD panel by default. If the inverters fail, users can switch the loads to utility.


Please contact the inverter supplier for more detailed guidance on paralleling systems.

The diagrams shown below are for representative purposes only! Wiring diagrams should only be generated by a licensed professional and approved by all AHJs.


3 x 6000XPs 120/240VAC Parallel Diagram:

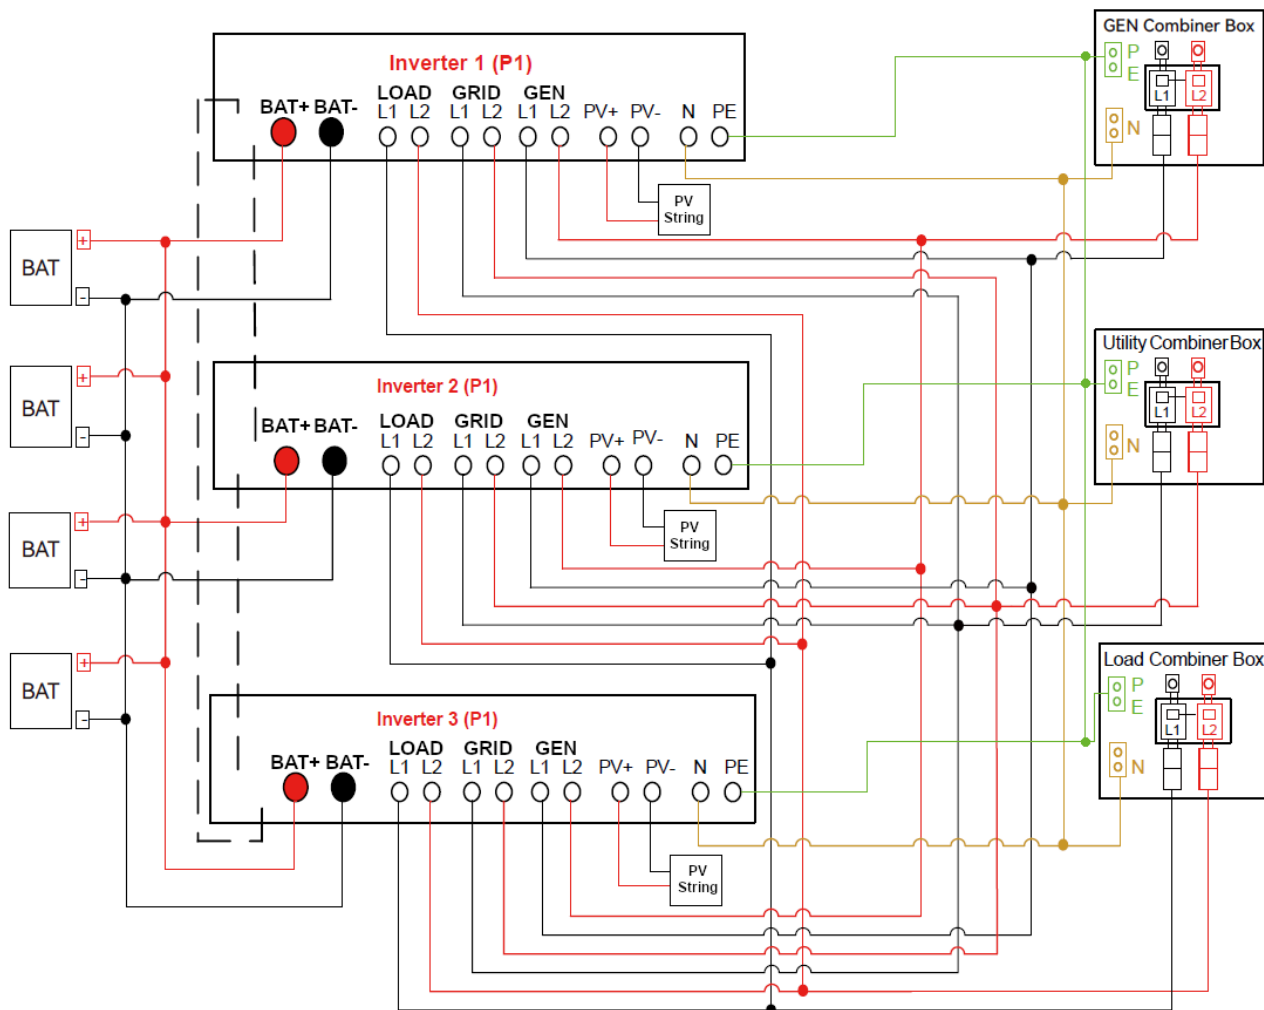

3 x 6000XPs 120/208VAC Parallel Diagram:

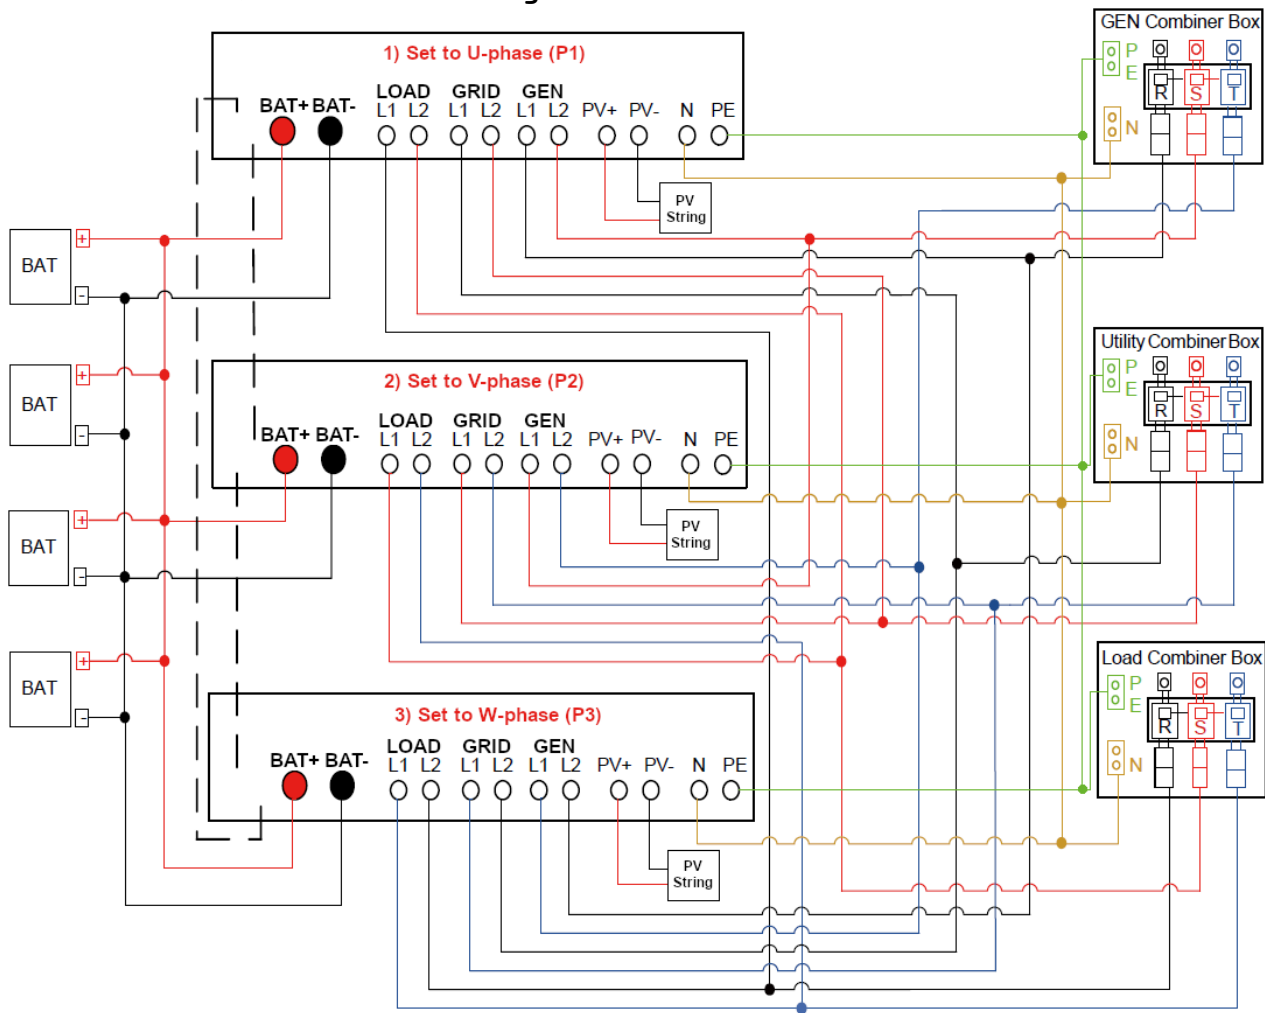

REMINDER: Put the CAN communication PIN to ON status for the first and the last inverter and OFF for inverters in between. Both switches in the “ON” position translates to address 1. Both switches in the “OFF” position translates to address 0.

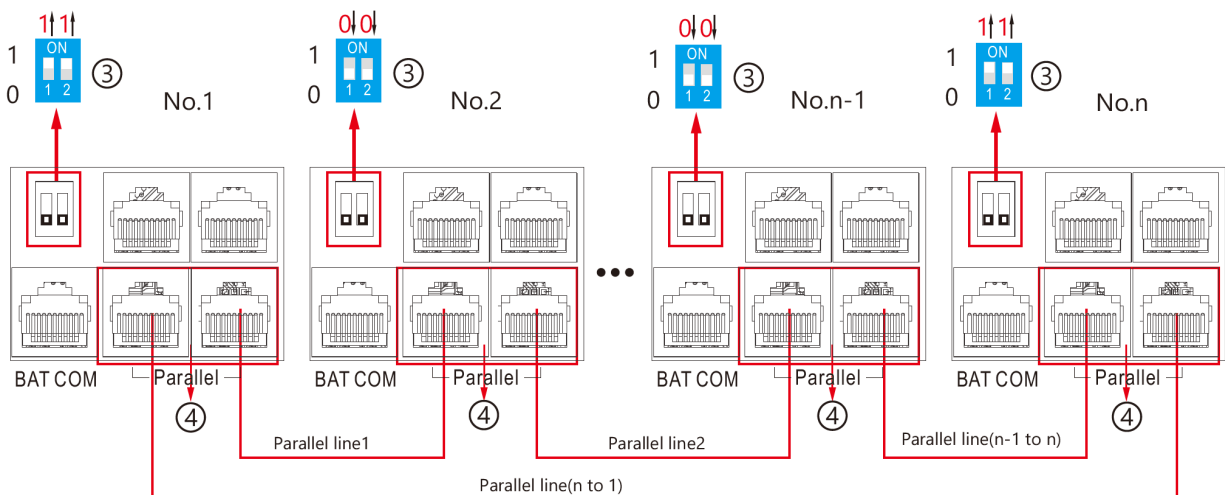

6.12.2 PARALLEL CONFIGURATION

Important notices for parallel system:

- If utilizing the generator input (GEN), ensure that the generator is connected to all inverters in parallel.
- If it is not possible to divide solar strings evenly per inverter, it is recommended to have more PV strings on the master inverter.
- The values shown on the LCD of each inverter displays the individual inverter's contribution to the system, **not the system's total**.

Before commissioning:

1. Verify that all inverters in the system are updated to the latest firmware. Please contact the distributor to confirm the latest version.
2. Make sure the power cables and parallel communications cables have been wired correctly and verify the DIP-switch settings are correct.
3. Ensure the LOAD breakers are off (open). Ensure there is no AC voltage present with a multimeter before proceeding to the next step.
4. Power on the inverters.
5. Navigate to setting 21 to configure phasing.
6. Starting with the primary inverter (the inverter communicating with the battery bank), change setting 21 to 1PH for split-phase parallel. The LCD will then switch to a secondary setting, Parallel Phase. Set the inverter to P1 for phase 1. Repeat this step for all paralleled inverters.
7. Enable **"Battery Shared"** on all inverters in parallel.
8. Ensure all inverters are set to **"P1"** phase.
9. Ensure the battery to inverter communications cable is properly connected from master battery to inverter.



NOTE: If commissioning a single inverter system, ensure setting 21 is set to NoPL (no parallel) and then finish the commissioning

Commissioning Steps:

1. Power on the system per the start-up sequence outlined in section 13.
2. Turn on the battery and make sure the communication works on all units.
3. Check the parallel info via the Home page on the LCD.
4. Before connecting loads to the load output terminal, check the output of L1 to N, L2 to N and L1 to L2 to ensure there is no voltage present.
5. Add some small loads to the load output and verify power output.
6. Perform a full system restart as outlined in section 13 to finish the commissioning.



NOTE: To determine proper host and slave definition of the inverters, provide power to each before turning on. Turn on the EPS Output (AC Output) on the host inverter first, to designate it as host. Power on each inverter paralleled past the host to define them as slaves. On the main inverter display, press "down" three times, then check the numbers & letters in the top left. Host inverter should read "1P-H:P1: 1", and slave should read "1P-S:P1: "X"", with the "X" representing the number of inverters in parallel.

7. END USER SETTINGS

The EG4 Monitor Software can be used to configure the desired functionality of the 6000XP Inverter. The following sections describe the different fields in the Monitor Software GUI and their definitions for those with an end-user account.

Application Setting

EPS Voltage Set(V) (?) 240/120 Set

EPS Frequency Set(Hz) (?) 60 Set

AC First (?)

AC first Start Time 1 (?) 00 : 00 Set

AC first Start Time 2 00 : 00 Set

AC first Start Time 3 00 : 00 Set

AC first End Time 1 (?) 00 : 00 Set

AC first End Time 2 00 : 00 Set

AC first End Time 3 00 : 00 Set

7.1 APPLICATION SETTING

- **EPS Voltage Set(V):** Set the voltage of the inverter's output.
- **EPS Frequency Set(Hz):** Set the frequency of the inverter's output.

AC First

- **AC first Start Time 1, 2, 3:** Set the start time for when inverter passes through from grid to loads.
- **AC first End Time 1, 2, 3:** Set the end time for when inverter passes through from grid to loads.

7.2 CHARGE SETTING

Charge Setting

Charge Current Limit(A) (?) [0, 140/4480] Set

Lead Acid

Charge Voltage(V) (?) [50, 59] Set

Floating Voltage(V) (?) [50, 56] Set

Equalization Voltage(V) (?) [50, 59] Set

Equalization Period(Days) (?) [0, 365] Set

Equalization Time(Hours) (?) [0, 24] Set

AC Charge

AC Charge Based On (?) <Empty> Set

AC Charge Battery Current(A) (?) [0, 125] Set

AC Charge Start Time 1 [0, 23] : [0, 59] Set

AC Charge Start Time 2 [0, 23] : [0, 59] Set

AC Charge Start Time 3 [0, 23] : [0, 59] Set

AC Charge End Time 1 [0, 23] : [0, 59] Set

AC Charge End Time 2 [0, 23] : [0, 59] Set

AC Charge End Time 3 [0, 23] : [0, 59] Set

AC Charge Start Battery Voltage(V) (?) [38.4, 57] Set

AC Charge End Battery Voltage(V) (?) [48, 59] Set

AC Charge Start Battery SOC(%) (?) [1, 90] Set

AC Charge End Battery SOC(%) (?) [20, 100] Set

Generator Charge

Generator Charge Type (?) <Empty> Set

Generator Charge Battery Current(A) (?) [0, 110] Set

Generator Charge Start Battery Voltage(V) (?) [38.4, 57] Set

Generator Charge End Battery Voltage(V) (?) [48, 59] Set

Generator Charge Start Battery SOC(%) (?) [1, 90] Set

Generator Charge End Battery SOC(%) (?) [20, 100] Set

Max. Generator Input Power(W) (?) [0, 7370/65534] Set

Generator Boost Enable Disable

Charge Current Limit(A): The maximum charge current limitation of the entire system in DC Amps.

Lead Acid

- **Charge Voltage(V):** Set bulk charging voltage for Lead Acid batteries.

AC Charge

- **AC Charge:** Utility charge configuration. If users want to use grid power to charge their battery, they can enable 'AC Charge'. Configure setting by Time, Voltage, SOC, Time & Voltage or Time & SOC. Up to 3 timeslots can be configured via the AC Charge Start Time 1, 2 and 3 settings shown above.
- **AC Charge Battery Current(A):** Set AC Charge Current limit for grid to batteries.
- **AC Charge Start Battery Voltage(V):** Begin charging from grid when batteries reach this voltage. (If set to charge by Voltage)
- **AC Charge End Battery Voltage(V):** Stop charging from grid when batteries reach this voltage. (If set to charge by Voltage)
- **AC Charge Start Battery SOC(%):** Begin charging from grid when batteries reach this SOC%. (If set to charge by SOC)
- **AC Charge End Battery SOC(%):** Stop charging from grid when batteries reach this SOC%. (If set to charge by SOC)

7.2.1 GENERATOR CHARGE

- **Generator Charge Type:** Set generator charge type by either Voltage or SOC%.
- **Generator Charge Battery Current(A):** Set maximum amperage charge from generator.
- **Generator Charge Start Battery Voltage(V):** Set Voltage which generator will start charging batteries.
- **Generator Charge End Battery Voltage(V):** Set Voltage which generator will stop charging batteries.
- **Generator Charge Start Battery SOC(%):** Set SOC% which generator will start charging batteries.
- **Generator Charge End Battery SOC(%):** Set SOC% which generator will stop charging batteries.
- **Max. Generator Input Power(W):** Set the maximum power(W) the inverter will pull from generator for charging.
- **Generator Boost:** When enabled, the inverter will pull supplemental power from both PV and battery whenever the generator power is not sufficient to handle the loads.

7.3 DISCHARGE SETTING

Discharge Setting

Discharge Control (?) According to SOC Set

Discharge Current Limit(Adc) (?) 140 Set

Discharge Cut-off Voltage(V) (?) 42 Set

Discharge Cut-off SOC(%) (?) 15 Set

On Grid EOD Voltage(V) (?) 42 Set

On Grid EOD SOC(%) (?) 15 Set

- **Discharge Control:** Set Voltage/SOC to configure stop time for battery discharge.
- **Discharge Current Limit(Adc):** Set the limit of battery discharge current.
- **Discharge Cut-off Voltage(V)/SOC(%):** Set when batteries stop discharging to power loads via Voltage/SOC.
- **On Grid EOD Voltage(V)/SOC(%):** Set when batteries stop discharging to power loads via Voltage/SOC and switch to have AC power loads/charge batteries. When battery voltage is > (EOD Voltage + 3V), the inverter will switch back to battery discharge mode. When battery SOC is > (EOD SOC+10%), the inverter will switch back to battery discharge mode.

7.4 AC COUPLE

AC Couple

AC Couple (?) Enable Disable

AC Couple Start Volt(V) [40, 59.5] Set

AC Couple End Volt(V) [42, 80] Set

AC Couple Start SOC(%) [0, 80] Set

AC Couple End SOC(%) [0, 100] Set

The inverter supports AC coupling connection with the existing grid-interactive solar system. The existing solar system is connected to the inverter's GEN terminal. Before engaging AC Coupling, the inverter must be in standby mode.

- **AC Couple Start Volt(V)/SOC (%):** AC Coupling will start at this set V/SOC.
- **AC Couple End Volt(V)/SOC (%):** AC Coupling will stop at this set V/SOC.

7.5 SMART LOAD

Smart Load

Smart Load (?) Enable Disable

Start PV Power(kW) (?) [0, 25.5] Set

Smart Load Start Volt(V) [40, 59] Set

Smart Load End Volt(V) [40, 59] Set

Grid Always On (?) Enable Disable

Smart Load Start SOC(%) [0, 100] Set

Smart Load End SOC(%) [0, 100] Set

- **Smart Load Enable/ Disable:** When the smart load function is enabled, the GEN terminal is reused to Smart Load, and the inverter will offer power to this load based on the setup values.
- **Start PV Power (kW):** This is the minimum PV power limit to function with smart load output.
- **On Grid Always On:** Once this function is enabled, smart load will always function when grid power is on.
- **Smart Load Start SOC (%) / Volt (V):** The high limit for battery bank to turn on smart load.
- **Smart Load Stop SOC (%) / Volt (V):** The low limit for battery bank to turn off smart load.

7.6 RESET

Reset

All to Default
Reset

- **Reset:** Reset all settings to factory default. Be sure to keep track of what changes need to be made before powering the system back on!

8. INSTALLER SETTINGS

The EG4 Monitor Software can be used to configure the desired functionality of the 6000XP Inverter. The following sections describe the different fields in the Monitor Software GUI and their definitions for those with Installer account access.

8.1 COMMON SETTING

Common Setting

Time (?)
yyyy-MM-dd HH:mm:ss
Set

PV Input Mode
0: DC source mode
Set

Model

Battery Type (?)
Lead-acid Capacity

Lithium Type
Set

Green Function Enable (?)
Enable
Disable

Normal / Standby (?)
Normal
Standby

Battery ECO Enable (?)
Enable
Disable

Restart Inverter
Reset

Buzzer Enable
Enable
Disable


ISO Enable
Enable
Disable

- **Time:** This is the local date and time.
- **PV Input Mode:** This allows the user to select the PV source for the Inverter. This can be: 0: DC source mode, 3: Two MPPT connects to same string, or 4: Two MPPT connects to different string.
- **Battery Type:** The type of battery being used. Can be set to - 0: No Battery, 1: Lead-acid, or 2: Lithium.



REMINDER: It is not recommended to run the system without battery backup.

- **Lead-acid Capacity:** Select the total battery capacity for lead-acid banks.
- **Lithium Type:** This setting allows the user to select from a list of compatible batteries for closed-loop communications.
- **Green Function Enable:** When enabled, if the inverter load reading is less than 60W for more than 10 minutes, the inverter output will be cut off.
- **Normal / Standby:** Select Normal for the inverter to operate normally. Select Standby to halt all power input and output.
- **Restart Inverter:** This restarts the inverter.
- **Battery ECO Enable:** When enabled, the inverter will switch to bypass mode if the battery has reached the On-Grid EOD value and AC charging is disabled. The inverter will stay in bypass mode until the battery is being charged again. Switch time can be up to 15ms.
- **Buzzer Enable:** Enable/disable the alarm buzzer.
- **ISO Enable:** Enable/disable PV ground fault circuit interrupter.

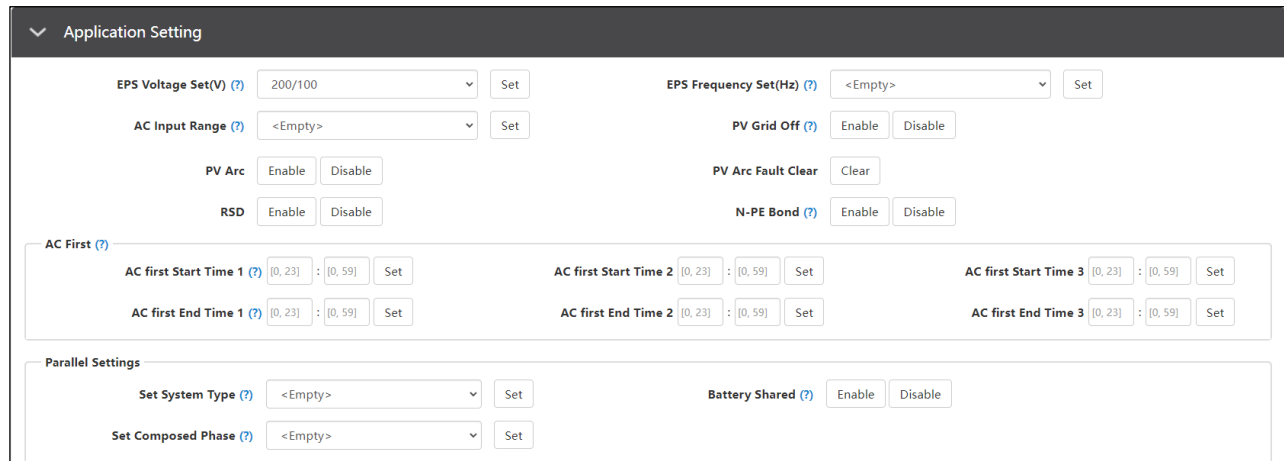

The screenshot shows the 'Application Setting' menu with the following options:

- EPS Voltage Set(V):** 200/100 (dropdown), Set button
- EPS Frequency Set(Hz):** <Empty> (dropdown), Set button
- AC Input Range:** <Empty> (dropdown), Set button
- PV Grid Off:** Enable, Disable buttons
- PV Arc:** Enable, Disable buttons
- PV Arc Fault Clear:** Clear button
- RSD:** Enable, Disable buttons
- N-PE Bond:** Enable, Disable buttons
- AC First:**
 - AC first Start Time 1:** [0, 23] : [0, 59] Set
 - AC first End Time 1:** [0, 23] : [0, 59] Set
 - AC first Start Time 2:** [0, 23] : [0, 59] Set
 - AC first End Time 2:** [0, 23] : [0, 59] Set
 - AC first Start Time 3:** [0, 23] : [0, 59] Set
 - AC first End Time 3:** [0, 23] : [0, 59] Set
- Parallel Settings:**
 - Set System Type:** <Empty> (dropdown), Set button
 - Set Composed Phase:** <Empty> (dropdown), Set button
 - Battery Shared:** Enable, Disable buttons



NOTE: The user must also establish the paralleling scheme using Setting 21 in the user interface. 'NoPL' (Not Parallel) or '1PH' (Single Phase). See Section 12, LCD Settings, for more details.

8.2 APPLICATION SETTING

- **EPS Voltage Set(V):** Set the inverter's output voltage.
- **EPS Frequency Set(Hz):** Set the inverter's output frequency.
- **AC Input Range:** Set the voltage range for AC Input.
- **PV Grid Off:** If the customer wants the system to have Off-Grid functionality without having battery backup, please enable PV Grid Off. Note that in this situation the AC Output power is supplied by solar and is not stable due to fluctuating voltages from the solar modules. We suggest the customer install battery/batteries to keep the inverter output voltage stable if they want to have Off-Grid function. (Allows system to access the Off-Grid mode when only solar input is available without battery storage).
- **PV Arc:** Enables detection of arcs on the PV input circuits to the inverter and provides protection from PV circuit arcs.
- **PV Arc Fault Clear:** Clears any fault detected due to arcs on the PV input circuit to the inverter.
- **RSD:** Enables the Rapid Shut Down feature.
- **N-PE Bond:** Enable for the AC Neutral (N) and AC Ground (PE) to be bonded.

AC First

- **AC first Start Time 1-3:** The time at which the Inverter will use only AC to power loads. The range is 00:00 to 23:59.
- **AC first Stop Time 1-3:** The time at which the Inverter will use only AC to power loads. The range is 00:00 to 23:59.

Parallel Settings

- **Set System Type:** The EG4 6000XP supports paralleling of multiple inverters. If installing in single-phase, set one inverter as "1 Phase Master". When composing a three-phase system, set one inverter to "3 Phase Master".
- **Battery Shared:** For parallel systems, if all inverters connect to same battery bank, Battery Shared must be enabled. The inverter with battery to inverter communication cable connected will broadcast the battery info to all other inverters.

- **Set Composed Phase:** If the system is connected to the grid, the inverter will detect the phase it connects to automatically, record it and output the phase as it detected. If the user setting is different from the phase the inverter detected, it will output the phase detected. The output phase record will be cleared if the customer clears it. If the system is not connected to the grid, the inverter will use the user output phase setting to compose the three-phase output. If the customer sets the wrong phase, i.e., 2 U phase and no W phase, the system will report errors.

8.3 CHARGE SETTING

The screenshot shows the 'Charge Setting' interface with the following fields and values:

- Charge Current Limit(Adc):** [0, 140/4480] Set
- Lead Acid:**
 - Charge Voltage(V): [50, 59] Set
 - Floating Voltage(V): [50, 56] Set
 - Equalization Voltage(V): [50, 59] Set
 - Equalization Period(Days): [0, 365] Set
 - Equalization Time(Hours): [0, 24] Set
- AC Charge:**
 - AC Charge Based On: [Empty] Set
 - AC Charge Battery Current(A): [0, 125] Set
 - AC Charge Start Time 1: [0, 23] - [0, 59] Set
 - AC Charge Start Time 2: [0, 23] - [0, 59] Set
 - AC Charge Start Time 3: [0, 23] - [0, 59] Set
 - AC Charge End Time 1: [0, 23] - [0, 59] Set
 - AC Charge End Time 2: [0, 23] - [0, 59] Set
 - AC Charge End Time 3: [0, 23] - [0, 59] Set
 - AC Charge Start Battery Voltage(V): [58.4, 57] Set
 - AC Charge End Battery Voltage(V): [48, 59] Set
 - AC Charge Start Battery SOC(%): [1, 90] Set
 - AC Charge End Battery SOC(%): [20, 100] Set
- Generator Charge:**
 - Generator Charge Type: [Empty] Set
 - Generator Charge Battery Current(A): [0, 110] Set
 - Generator Charge Start Battery Voltage(V): [58.4, 57] Set
 - Generator Charge End Battery Voltage(V): [48, 59] Set
 - Generator Charge Start Battery SOC(%): [1, 90] Set
 - Generator Charge End Battery SOC(%): [20, 100] Set
 - Max. Generator Input Power(W): [0, 7370/65536] Set
 - Generator Boost: Enable Disable

- **Charge Current Limit(Adc):** The maximum charge current limitation of the entire system in DC Amps.

Lead Acid

- **Charge Voltage(V):** Set this according to the battery requirements. Range is 50-59VDC.
- **Floating Voltage(V):** Set this according to the battery requirements. Range is 50-56VDC. When using lead-acid batteries, this must be set lower than the 'Charge Voltage' above. When using Lithium batteries in lead-acid mode, this can be set \leq 'Charge Voltage' above.
- **Equalization Voltage(V):** Range is 50-59VDC for lead-acid batteries. When using Lithium batteries in lead-acid mode, this should be set to 0 (zero).
- **Equalization Period(Days):** Range is 0-365 days for lead-acid batteries. When using Lithium batteries in lead-acid mode, this should be set to 0 (zero).
- **Equalization Time(Hours):** Range is 0-24 hours for lead-acid batteries. When using Lithium batteries in lead-acid mode, this should be set to 0 (zero).

AC Charge

- **AC Charge Based On:** If using AC to charge the battery; the customer must first select the method of charging. This can be set to charge by "Time", "Voltage", "SOC", "Battery Voltage and Time" or "Battery SOC and Time".
- **AC Charge Battery Current(A):** Set this according to the battery requirements. Range is 0-100 Amps.
- **AC Charge Start Time 1-3:** Start AC Charging according to these time settings.
- **AC Charge End Time 1-3:** Stop AC Charging according to these time settings.

- **AC Charge Start Battery Voltage(V):** Battery Voltage at which system will start charging batteries from AC. Set this according to the battery requirements. Range is 38.4-57VDC.
- **AC Charge End Battery Voltage(V):** Battery Voltage at which system will stop charging batteries from AC. Set this according to the battery requirements. Range is 48-59VDC.
- **AC Charge Start Battery SOC(%):** Battery% SOC at which system will start charging batteries from AC. Set this according to the battery requirements. Range is 0-90%.
- **AC Charge End Battery SOC(%):** Battery% SOC at which system will stop charging batteries from AC. Set this according to the battery requirements. Range is 20-100%.

Generator Charge

- **Generator Charge Type:** Set Generator charging according to Battery Voltage or Battery SOC.
- **Generator Charge Battery Current(A):** Set Generator battery charging current. Range is 0-60 Amps.
- **Generator Charge Start Battery Voltage(V):** Battery Voltage at which system will start charging batteries from the Generator. Set this according to the battery requirements. Range is 38.4-57VDC.
- **Generator Charge End Battery Voltage(V):** Battery Voltage at which system will stop charging batteries from the Generator. Set this according to the battery requirements. Range is 48-59VDC.
- **Generator Charge Start Battery SOC(%):** Battery% SOC at which system will start charging batteries from the Generator. Set this according to the battery requirements. Range is 0-90%.
- **Generator Charge End Battery SOC(%):** Battery% SOC at which system will stop charging batteries from the Generator. Set this according to the battery requirements. Range is 20-100%.
- **Max. Generator Input Power(W):** The inverter will limit the power from the generator to 90% of the total generator capability to prevent overloading. Range is 0-7,370 Watts for a single inverter and 0-65,534 Watts for parallel inverters.
- **Generator Boost:** When enabled, the inverter will pull supplemental power from both PV and battery whenever the generator power is not sufficient to handle the loads.

8.4 DISCHARGE SETTING

Discharge Setting

Discharge Control (?)
According to Voltage
Set

Battery Warning Voltage(V) (?)
[40, 50]
Set

Discharge Cut-off Voltage(V) (?)
[40, 50]
Set

On Grid EOD Voltage(V) (?)
[40, 56]
Set

Discharge Current Limit(Adc) (?)
[0, 110/4480]
Set

Battery Warning SOC(%) (?)
[0, 90]
Set

Discharge Cut-off SOC(%) (?)
[0, 90]
Set

On Grid EOD SOC(%) (?)
[0, 90]
Set

- **Discharge Control:** Set to 'According to Voltage' when using a lead-acid battery or a Lithium battery in lead-acid mode. Set to 'According to SOC' when using a compatible Lithium battery.
- **Discharge Current Limit(Adc):** Set this according to the battery requirements. Range is 1-110 Amps for a single battery and 1-4480 Amps for paralleled batteries.
- **Battery Warning Voltage(V):** Set this according to the battery requirements. The inverter will display a battery low warning when the battery voltage falls to this value. Range is 40-56VDC.

- **Battery Warning SOC(%):** Set this according to the battery requirements. The inverter will display a battery low warning when the battery SOC falls to this value. Range is 0-90%.
- **Discharge Cut-off Voltage(V):** Set this according to the battery requirements. Range is 40-56VDC.
- **Discharge Cut-off SOC*(%):** Set this according to the battery requirements. Range is 0-90%.



NOTE: * *It is recommended while using EG4 batteries to set this value no lower than 20% to maintain the 80% depth of discharge.*

- **On Grid EOD Voltage(V):** The inverter will stop discharging the battery at this voltage and will use AC to power loads. When battery voltage is > (EOD Voltage +3V), the inverter will switch back to battery discharge mode.
- **On Grid EOD SOC(%):** The inverter will stop discharging the battery at this SOC and will use AC to power loads. When battery SOC is > (EOD SOC+10%), the inverter will switch back to battery discharge mode.

8.5 AC COUPLE

AC Couple

AC Couple (?)

Enable
Disable

AC Couple Start Volt(V)

[40, 59.5]

Set

AC Couple Start SOC(%)

[0, 80]

Set

AC Couple End Volt(V)

[42, 80]

Set

AC Couple End SOC(%)

[0, 100]

Set

- **AC Couple Enable/Disable:** When there is an existing On-Grid PV inverter, and the 6000XP system needs to function in both On-Grid and Off-Grid mode, connect the AC output of the existing On-Grid PV inverter to the GEN terminal of the 6000XP and enable the AC Couple function.
- **AC Couple Start Volt(V)/SOC (%):** AC Coupling will start at this set Voltage/SOC.
- **AC Couple Stop Volt(V)/SOC (%):** AC Coupling will stop at this set Voltage/SOC.

8.6 SMART LOAD

Smart Load

Smart Load (?)

Enable
Disable

Start PV Power(kW) (?)

[0, 25.5]

Set

Grid Always On (?)

Enable
Disable

Smart Load Start Volt(V)

[40, 59]

Set

Smart Load Start SOC(%)

[0, 100]

Set

Smart Load End Volt(V)

[40, 59]

Set

Smart Load End SOC(%)

[0, 100]

Set

- **Smart Load Enable/ Disable:** When the smart load function is enabled, the GEN terminal is reused to Smart Load, and the inverter will offer power to this load based on the setup values.
- **Start PV Power (kW):** This is the minimum PV power limit to function with smart load output.
- **On Grid Always On:** Once this function is enabled, smart load will always function when grid power is on.
- **Smart Load Start SOC (%) / Volt (V):** The high limit for battery bank to turn on smart load.
- **Smart Load Stop SOC (%) / Volt (V):** The low limit for battery bank to turn off smart load.

8.7 OTHER SETTING

Other Setting

Batt Volt Sample Disable
Internal
Set

Fan 1 Max Speed(%)
[50, 100]
Set

Fan 2 Max Speed(%)
[50, 100]
Set

- **Batt Volt Sample Disable:** Set to Internal, External or Both Available.
- **Fan 1 Max Speed(%):** This sets cooling fan 1 max. speed. Range is 50-100%.
- **Fan 2 Max Speed(%):** This sets cooling fan 2 max. speed. Range is 50-100%.

8.8 RESET

Reset

All to Default
Reset

- **All to Default:** This resets all settings to factory default values.




NOTE: Be sure to keep track of the settings and what changes need to be made before outputting power from the inverter

9. MONITOR SYSTEM SETUP

9.1 WI-FI/4G/LAN DONGLE CONNECTION

A Wi-Fi/4G/LAN dongle can be used to monitor the inverter and remotely view the monitoring data on a computer or smart phone. This module can be attached by plugging it in to the 'Wi-Fi' connector on the inverter and securing it with the 4 Phillips head screws. See section 10 for more details regarding dongle setup.

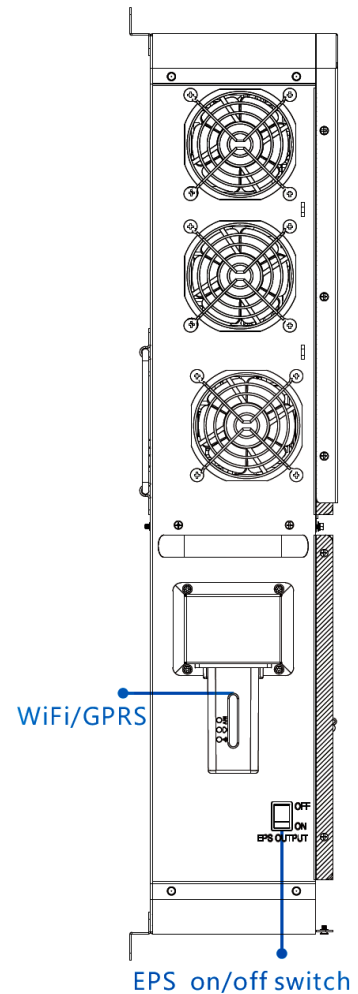

9.2 CONNECTIVITY REQUIREMENTS

Due to certain limitations of the Wi-Fi Dongle, please ensure that the home Wi-Fi network signal and security settings meet the following requirements:

- The Wi-Fi dongle only supports wireless networks in the 2.4GHz frequency band. If the router supports the 5GHz or 6GHz network frequencies, please confirm the router supports the 2.4GHz network frequency band and it is enabled.
- The Wi-Fi dongle is compatible with WPA1, WPA2, and WPA3 security protocols on the 2.4GHz network only.
- Ensure the Wi-Fi dongle can obtain an IP address by verifying the home Wi-Fi router has DHCP (Dynamic Host Configuration Protocol) setup and it is enabled.
- It is recommended the home Wi-Fi network name length does not exceed 19 characters, and the password length does not exceed 24 characters. It is *not* recommended to use any of the following special symbols in the password: @, #, \$, %, &, *, ?, _ , /, or using a space “keyboard spacebar”.

9.3 THIRD-PARTY RS485 COMMUNICATION

Meters 485B and 485A can be used when a meter is not connected. These two pins can be used to communicate with the inverter using the RS485 Modbus protocol.

INV485: This interface is shared with the Wi-Fi module. If the Wi-Fi module is not in use, this interface can be used to communicate with the inverter.

Please contact the distributor to get the Modbus protocol for third-party app development.

View data on smart phone:


A QR code with a link to our website with app installation steps can be found on the side of the inverter or visit our downloads page at www.eg4electronics.com for more information.

9.4 ONLINE MONITORING SYSTEM USER INTERFACE

The customer needs to register a monitor account in the monitor system and set a Wi-Fi password for the Wi-Fi dongle before using the EG4 monitor system. The monitoring system may change due to updates, so the following UI descriptions may vary from the current pages on the site. Please contact support@eg4electronics.com to create distributor or installer accounts. See section 10 for detailed instructions on how to access the EG4 Monitor App, how to register an account, and how to set a Wi-Fi password.

9.4.1 DASHBOARD (MONITOR TAB)

Once the account is created and the user is logged in, the main page (Monitor tab) of the interface will be displayed.

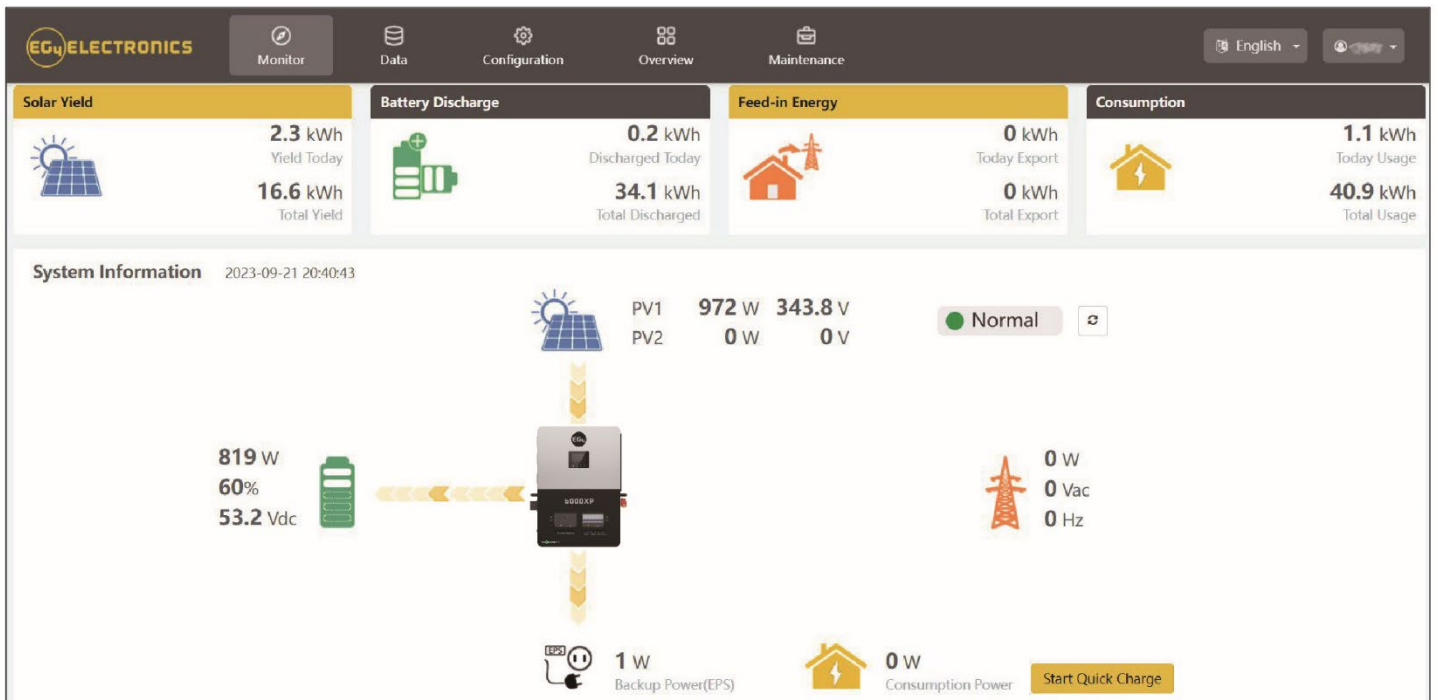

Name	Description
Select station first	Select which station to view, and then select which unit/dongle to view by choosing a serial number from the dropdown list. Note: Unchecking the box will only display serial numbers linked to the account.
Solar Yield	Shows power generated by the solar panels (for AC coupled inverters it shows the power generated by the on-grid inverter). The PV CT clamp will have to be installed to be able to show the data correctly. When the picture of the solar yielding is clicked, it will display how the solar energy has been used that day. A second click will show the totals since commissioning.
Battery Discharge	Shows the charge and discharge energy from the battery/batteries. When the battery picture is clicked, the display will switch between battery discharging and battery charging, showing totals for that day and since commissioning.
Consumption	Shows the total energy consumption of the property for that day and since commissioning.
System information	Displays power sources and energy flow, voltage, and amperage from lines to loads. Clicking the button beside the status will refresh the information to reflect real time data. Note: When the battery's color is yellow or red it means there is a warning or fault with the battery.
GEN Quick Start	Send a start signal to the generator.
Start Quick Charge	Clicking this will direct the inverter to charge batteries faster for one hour . It will then default back to its original setting.
Language and User	English – Clicking this will allow the user to change the language of the page. (Username) – Clicking this will open a list with User Center (used for editing the profile), Modify password (used to change the account password), and Logout (to logout of this account)

Input & Output Power and Energy Overview can also be viewed via the Monitoring Software. See following page for examples.



Name	Description
Input Power	<p>This chart shows the power curve for each day, including solar power, battery charge/discharge power and grid import power and consumption. Hovering over an item name will highlight it in the chart. Clicking it will remove it from the list.</p>
Energy Overview	<p>This chart shows energy production and consumption for each day, including solar production, battery, and consumption. Hovering over an item name will highlight it in the chart. Clicking it will remove it from the list.</p> <p>Selecting 'Month' will show the energy statistics for each day. Selecting 'Year' will show energy for each month. Selecting 'Total' will show energy for each year.</p>


9.4.2 DASHBOARD (DATA TAB)

The Data Tab displays additional detailed data including technical details for PV, battery, grid, and loads, that is helpful for analysis and maintenance.

Five categories make up the Data Tab view: "Chart", "Energy", "Data History", "Local data", and "Event History." For more details on each category, please see the following tables.

Chart

Displays various parameters in chart format over a 24-hour period. There are separate charts for "PV Side", "Battery", "AC Side" and "Backup Output".

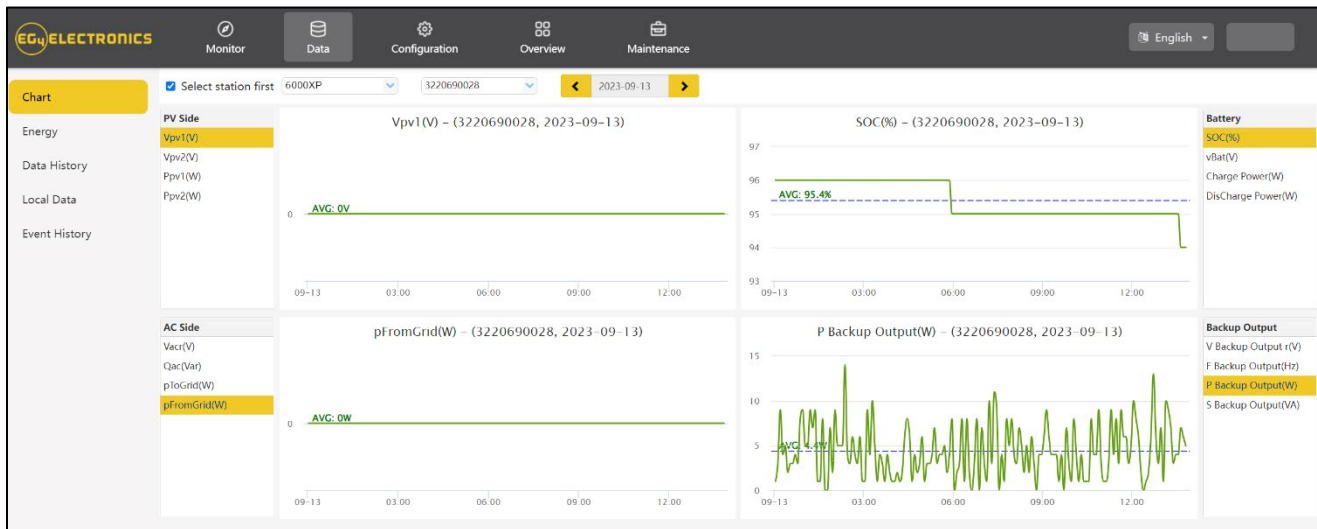


Vpv 1-2 (V)	Voltage of solar input
Ppv 1-2 (V)	Power of solar input
SOC (%)	Battery state of charge
vBat (V)	Battery voltage
Charge Power (W)	Battery charging power
Discharge Power (W)	Battery discharging power
Vacr (V)	Voltage of AC output
pFromGrid (W)	Power feed from grid to inverter
V Backup Output r (V)	Load rated voltage
F Backup Output (Hz)	Load frequency
P Backup Output (W)	Load output power
S Backup Output (VA)	Load apparent power

Energy

Displays how key energy parameters have varied over time.

- Selecting 'Month' will show the energy statistics for each day.
- Selecting 'Year' will show energy for each month.
- Selecting 'Total' will show energy for each year.

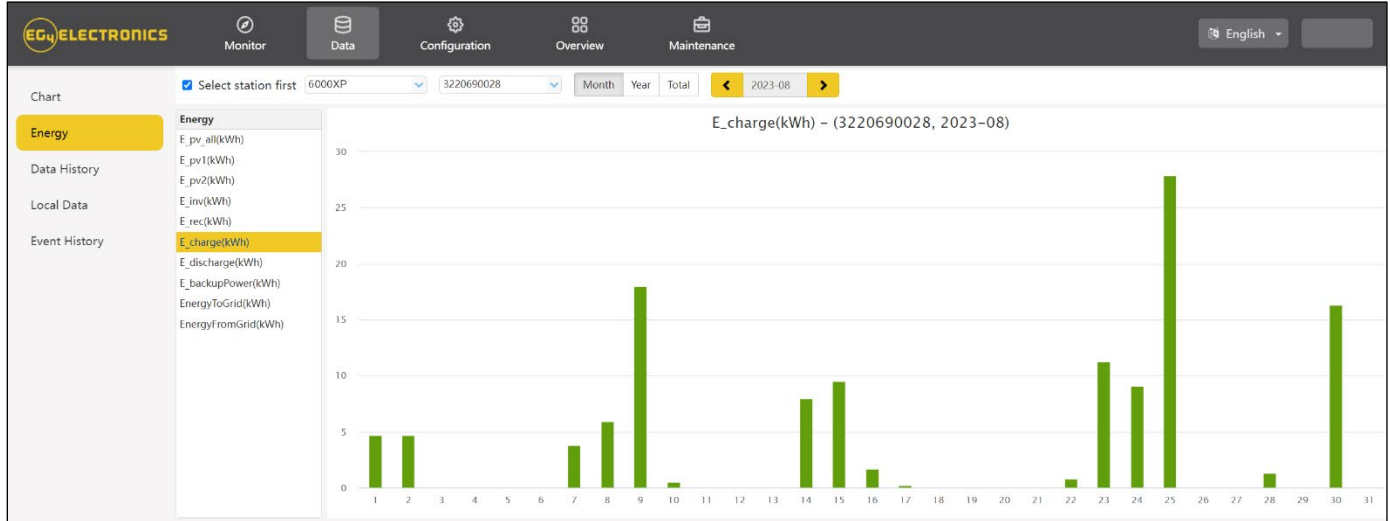

Name	Description
E_pv1(kWh)	Energy generated by PV string 1
E_pv2(kWh)	Energy generated by PV string 2
E_inv(kWh)	Energy output via AC output
E_rec(kWh)	Energy of AC charge
E_charge(kWh)	Energy used for battery charge
E_discharge(kWh)	Energy output by battery discharging
E_backupPower(kWh)	Load energy output
EnergyToUser(kWh)	Energy import from grid

Data History

Displays the measured technical characteristics of PV, battery, load, and grid for users or their distributor's examination to promptly address any potential issues.

Advanced technical knowledge is necessary to properly comprehend this table. End users are advised to concentrate solely on the "Monitor" view, "Chart" and "Energy" sections as these only offer simple to comprehend performance data.



HELPFUL TIP: Data can be exported to an Excel file to provide to the distributor for technical support. Distributors can then analyze the following factors to perform quick troubleshooting for their end users.

EG4ELECTRONICS

Monitor

Data

Configuration

Overview

Maintenance

English

Chart

Select station first

6000XP

3220690028

2023-09-13

Export data

Export data(2023-09-13 - 2023-09-06)

Energy

Serial number Time

Status

Vpv1(V)

Vpv2(V)

vBat(V)

SOC(%)

Ppv1(W)

Ppv2(W)

pCharge(%)

pDisCharge

Vacr(V)

Fac(Hz)

Pinv(W)

Prec(W)

PF

Vepsr(V)

Feps(Hz)

Peps(W)

Seps(W)

pToGrid

pToUser

pLoad(V)

ePv1(Dar)

ePv2(Dar)

elmDay

ek

1

3220690028

2023-09-13 13:49:03

0x40

0

0

53.1

94%

0

0

0

7

0

0

0

0

[0]

240

60.02

5

86

0

0

0

0

0

0

2

3220690028

2023-09-13 13:43:59

0x40

0

0

53.1

94%

0

0

0

6

0

0

0

0

[0]

240

59.99

6

80

0

0

0

0

0

0

0

3

3220690028

2023-09-13 13:38:58

0x40

0

0

53.1

94%

0

0

0

10

0

0

0

0

[0]

240.2

60.01

7

78

0

0

0

0

0

0

0

4

3220690028

2023-09-13 13:33:59

0x40

0

0

53.1

95%

0

0

0

5

0

0

0

0

[0]

239.9

59.98

4

78

0

0

0

0

0

0

0

5

3220690028

2023-09-13 13:28:58

0x40

0

0

53.1

95%

0

0

0

6

0

0

0

0

[0]

240

60.02

4

102

0

0

0

0

0

0

0

6

3220690028

2023-09-13 13:23:59

0x40

0

0

53.1

95%

0

0

0

4

0

0

0

0

[0]

240

60

3

84

0

0

0

0

0

0

0

7

3220690028

2023-09-13 13:18:57

0x40

0

0

53.1

95%

0

0

0

10

0

0

0

0

[0]

240.2

60

7

102

0

0

0

0

0

0

0

8

3220690028

2023-09-13 13:13:57

0x40

0

0

53.1

95%

0

0

0

13

0

0

0

0

[0]

240

60

9

72

0

0

0

0

0

0

0

9

3220690028

2023-09-13 13:08:56

0x40

0

0

53.1

95%

0

0

0

14

0

0

0

0

[0]

240.1

59.99

10

75

0

0

0

0

0

0

0

10

3220690028

2023-09-13 13:03:55

0x40

0

0

53.1

95%

0

0

0

2

0

0

0

0

[0]

240

60.01

1

94

0

0

0

0

0

0

0

11

3220690028

2023-09-13 12:58:52

0x40

0

0

53.1

95%

0

0

0

9

0

0

0

0

[0]

240

59.96

7

103

0

0

0

0

0

0

0

12

3220690028

2023-09-13 12:53:54

0x40

0

0

53.1

95%

0

0

0

4

0

0

0

0

[0]

240.1

60.02

3

84

0

0

0

0

0

0

0

13

3220690028

2023-09-13 12:48:51

0x40

0

0

53.1

95%

0

0

0

9

0

0

0

0

[0]

240.2

59.98

6

103

0

0

0

0

0

0

0

14

3220690028

2023-09-13 12:43:53

0x40

0

0

53.1

95%

0

0

0

14

0

0

0

0

[0]

240

59.98

13

103

0

0

0

0

0

0

0

15

3220690028

2023-09-13 12:38:50

0x40

0

0

53.1

95%

0

0

0

9

0

0

0

0

[0]

239.9

60.02

6

78

0

0

0

0

0

0

0

16

3220690028

2023-09-13 12:33:50

0x40

0

0

53.1

95%

0

0

0

2

0

0

0

0

[0]

240

59.98

2

86

0

0

0

0

0

0

0

17

3220690028

2023-09-13 12:28:49

0x40

0

0

53.1

95%

0

0

0

2

0

0

0

0

[0]

240

60

1

95

0

0

0

0

0

0

0

18

3220690028

2023-09-13 12:23:48

0x40

0

0

53.1

95%

0

0

0

1

0

0

0

0

[0]

240.1

60.02

0

91

0

0

0

0

0

0

0

19

3220690028

2023-09-13 12:18:47

0x40

0

0

53.1

95%

0

0

0

3

0

0

0

0

[0]

240

59.98

2

94

0

0

0

0

0

0

0

20

3220690028

2023-09-13 12:13:45

0x40

0

0

53.1

95%

0

0

0

8

0

0

0

0

[0]

240.1

59.99

6

106

0

0

0

0

0

0

0

21

3220690028

2023-09-13 12:08:46

0x40

0

0

53.1

95%

0

0

0

9

0

0

0

0

[0]

240

59.98

8

98

0

0

0

0

0

0

0

22

3220690028

2023-09-13 12:03:45

0x40

0

0

53.1

95%

0

0

0

11

0

0

0

0

[0]

240.1

60.02

10

105

0

0

0

0

0

0

0

23

3220690028

2023-09-13 11:58:45

0x40

0

0

53.1

95%

0

0

0

5

0

0

0

0

[0]

240.2

60.01

5

81

0

0

0

0

0

0

0

24

3220690028

2023-09-13 11:53:42

0x40

0

0

53.1

95%

0

0

0

4

0

0

0

0

[0]

239.9

59.98

3

88

0

0

0

0

0

0

0

25

3220690028

2023-09-13 11:48:42

0x40

0

0

53.1

95%

0

0

0

6

0

0

0

0

[0]

240.1

60.02

6

110

0

0

0

0

0

0

0

Name	Description
Vpv/Ppv	To check the MPPT
Vo/Po/So	To check the load type and if there is an overload when in load mode
Vb/SOC	To check the current state of charge and if the battery is overcharged or overly discharged.
Vac/Fac	To evaluate Grid performance and to check if working voltage and frequency range is adjusted to comply with grid
E-xxday	To evaluate energy distribution
E-xxall	To check if the system is working well under off grid mode

Local Data

The data captured during the offline periods are displayed in the "Local data" section (loss of Internet or Wi-Fi). The only distinction from "Data History" is that it is used for offline data recording. Local data is recorded while the system is offline for more than 20 minutes and is taken every 5 minutes. Data can be stored in the system for a maximum of 90 days.

Chart

Energy

History data

Local data

History event

☒ Select station first

R&D 18Kpv

☒ Show all local data

<

2023-04-

>

[1, 90]

Read

Clear

Export data

Serial number	Time	Status	Vpv1(V)	Vpv2(V)	vBat(V)	SOC(%)	Ppv1(W)	Ppv2(W)	pCharge(pDisCharge	Vacr(V)	Fac(Hz)	Pinv(W)	Prec(W)	PF	Vepsr(V)	Feps(Hz)	Peps(W)	Seps(W)
---------------	------	--------	---------	---------	---------	--------	---------	---------	----------	------------	---------	---------	---------	---------	----	----------	----------	---------	---------

Event History

The "Event History" section displays a timeline of events. (Notice and Fault events) If there is not a record of a "historical event," the inverter is properly connected and working without any issues.

Chart	<input checked="" type="checkbox"/> Select station first 6000XP ▼ ▼ All Event ▼ Export data					
Energy	Station	Serial number	Event Type	Event	Start Time	Time Recovered
Data History	1 6000XP	32788000000000000000	Notice	Battery voltage low	2023-09-11 12:51:43	2023-09-12 08:24:16
Local Data	2 6000XP	32788000000000000000	Notice	EPS Over load	2023-09-07 10:56:17	2023-09-07 11:06:20
Event History	3 6000XP	32788000000000000000	Notice	EPS Over load	2023-09-07 10:56:16	2023-09-07 11:06:14
	4 6000XP	32788000000000000000	Notice	Battery voltage low	2023-09-07 09:26:27	2023-09-07 09:46:26
	5 6000XP	32788000000000000000	Notice	Battery voltage low	2023-09-07 09:24:14	2023-09-07 09:44:19
	6 6000XP	32788000000000000000	Notice	EPS Over load	2023-09-07 08:06:43	2023-09-07 09:01:34
	7 6000XP	32788000000000000000	Notice	EPS Over load	2023-09-07 08:04:01	2023-09-07 08:59:12
	8 6000XP	32788000000000000000	Notice	EPS Over load	2023-09-06 16:28:16	2023-09-06 16:43:15
	9 6000XP	32788000000000000000	Notice	EPS Over load	2023-09-06 15:33:28	2023-09-06 16:23:18
	10 6000XP	32788000000000000000	Notice	EPS Over load	2023-09-06 15:33:27	2023-09-06 16:43:39
	11 6000XP	32788000000000000000	Notice	Battery voltage low	2023-09-06 09:13:52	2023-09-06 10:48:34
	12 6000XP	32788000000000000000	Notice	Battery voltage low	2023-09-06 09:09:32	2023-09-06 10:44:45
	13 6000XP	32788000000000000000	Notice	Communication failure with battery	2023-09-05 10:08:53	2023-09-05 10:11:41
	14 6000XP	32788000000000000000	Notice	Communication failure with battery	2023-09-05 09:58:16	2023-09-05 10:03:51
	15 6000XP	32788000000000000000	Fault	Internal CT offset out of range	2023-09-05 09:51:42	2023-09-05 12:12:13
	16 6000XP	32788000000000000000	Notice	Communication failure with battery	2023-09-05 09:32:20	2023-09-05 09:52:26
	17 6000XP	32788000000000000000	Notice	Communication failure with battery	2023-09-05 09:23:40	2023-09-05 09:27:20
	18 6000XP	32788000000000000000	Fault	Internal communication fault 1	2023-09-05 09:15:59	2023-09-05 09:51:42
	19 6000XP	32788000000000000000	Fault	Internal CT offset out of range	2023-09-05 09:13:28	2023-09-05 12:12:12
	20 6000XP	32788000000000000000	Notice	Battery voltage low	2023-09-01 11:54:55	2023-09-01 13:59:36
	21 6000XP	32788000000000000000	Notice	Battery voltage low	2023-09-01 11:54:40	2023-09-01 14:00:00
	22 6000XP	32788000000000000000	Notice	Battery voltage low	2023-09-01 10:14:27	2023-09-01 10:19:26

9.4.3 DASHBOARD (CONFIGURATION TAB)

The "Configuration" page is used for users to manage their station, dataloggers and user information.

Stations


The Stations section will show all stations linked to the account. Clicking on a station name will display all inverters under that station or location.

Clicking the Add Station button creates another site if the user has more than one station under the same account. This is useful for distributors who have multiple customers that would like assistance with monitoring/troubleshooting their inverters.

<div> <div>EG4 ELECTRONICS</div> <div> <div>Monitor</div> <div>Data</div> <div>Configuration</div> <div>Overview</div> <div>Maintenance</div> </div> <div>English ▼</div> </div>						
Stations	<div> <div>➕ Add Station</div> <div>Search by station name</div> <div>✕</div> <div>Q</div> </div>					
Dongles	Station name	Country	Timezone	Daylight saving time	Create date	Action
Devices	1 6000XP	United States of America	GMT -5	No	2023-07-24	Station Management
Users						

Dongles

Users can add the datalogger Serial Number (SN) in the station if they have more than one inverter in the station. The inverter will be shown on the system immediately when powered on after adding the datalogger and configuring the proper password for the Wi-Fi datalogger. Dongles can also be searched by individual serial number.

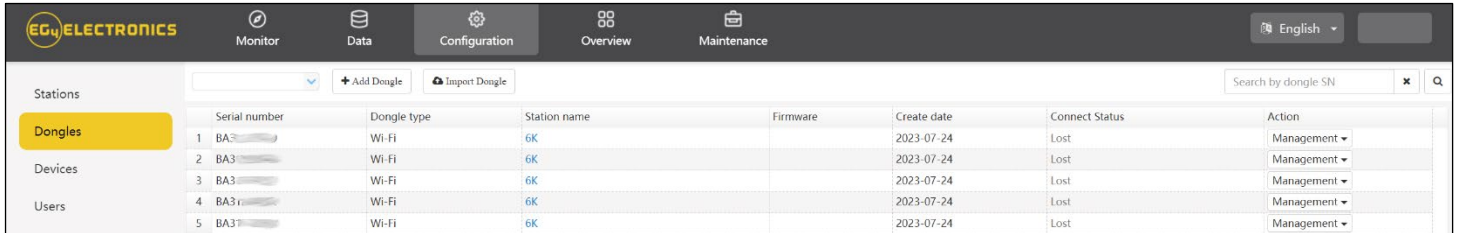


Serial number	Dongle type	Station name	Firmware	Create date	Connect Status	Action
1 BA3	Wi-Fi	6K		2023-07-24	Lost	Management
2 BA3	Wi-Fi	6K		2023-07-24	Lost	Management
3 BA3	Wi-Fi	6K		2023-07-24	Lost	Management
4 BA3	Wi-Fi	6K		2023-07-24	Lost	Management
5 BA3	Wi-Fi	6K		2023-07-24	Lost	Management



REMINDER: Before configuring the password for the Wi-Fi datalogger, please add the datalogger to the monitor system.

Devices

Users can see the entire inverter list connected to the account and check if the inverter is online. Data can be exported to an Excel file for record keeping or to view specific inverter stats.

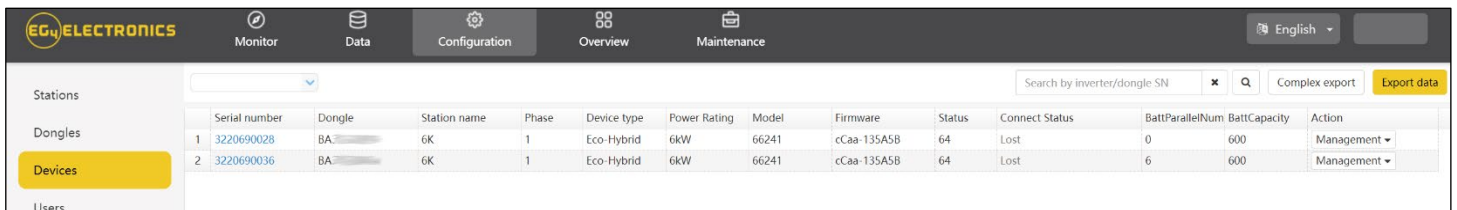

Serial number	Dongle	Station name	Phase	Device type	Power Rating	Model	Firmware	Status	Connect Status	BattParallelNum	BattCapacity	Action
1 3220690028	BA	6K	1	Eco-Hybrid	6KW	66241	cCaa-135A5B	64	Lost	0	600	Management
2 3220690036	BA	6K	1	Eco-Hybrid	6KW	66241	cCaa-135A5B	64	Lost	6	600	Management

Users

This tab shows a full list of users, distributors and any other roles linked to the account.


End users can edit password and personal information in the user page. Distributors can add an installer account and end user account on this page.

9.4.4 DASHBOARD (OVERVIEW TAB)

"Overview" allows EG4 or its distributors to quickly monitor system-wide data for their end users, such as solar yields, battery discharging, and other factors.

Station Overview

All the stations linked to the account can be found here. Clicking a station name will switch the main page to show the real time data.

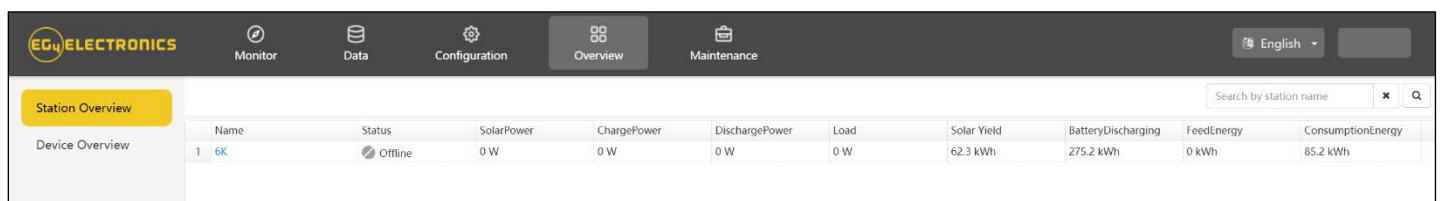

Name	Status	SolarPower	ChargePower	DischargePower	Load	Solar Yield	BatteryDischarging	FeedEnergy	ConsumptionEnergy
1 6K	Offline	0 W	0 W	0 W	0 W	62.3 kWh	275.2 kWh	0 kWh	85.2 kWh

Device Overview

All the inverters linked to the account can be found here. Clicking a serial number will switch the main page to show the real time data for that inverter.

Serial number	Status	SolarPower	ChargePower	DischargePower	Load	Solar Yield	BatteryDischarging	FeedEnergy	ConsumptionEnergy	Station name	Parallel	Action
1	Offline	0 W	0 W	0 W	0 W	46.3 kWh	153.3 kWh	0 kWh	57.4 kWh	6K		
2	Offline	0 W	0 W	0 W	0 W	16 kWh	121.9 kWh	0 kWh	27.8 kWh	6K		

9.4.5 DASHBOARD (MAINTENANCE TAB)

The "Maintenance" view is used for firmware updates and to remotely change settings on the inverter by selecting a station and then an inverter serial number.

Distributors can manage all settings for all inverters at once with the help of the batch setting capability supported by EG4's monitor system.



IMPORTANT: Advanced technical knowledge is necessary to properly make changes. End users will only be able to see the "Remote Set" tab to make changes to their inverter.

10. FIRMWARE UPDATES

10.1 FIRMWARE UPDATE VIA EG4 ELECTRONICS APP

When updating the firmware through the EG4 App, be sure to have plenty of battery life on the mobile device and do not close the application. Make sure the Wi-Fi dongle is connected securely and correctly configured for the inverter before performing the following steps.

Step 1: Open the EG4 Electronics App on the mobile device and select the "DOWNLOAD FIRMWARE" button.

Step 2: Choose the correct firmware file (contact the distributor for most up to date files) and select "DOWNLOAD" on the right side to download the file to the mobile device.


Step 3: Keep the app running and go to the phone's Wi-Fi settings. Connect the mobile device to the Dongle's network. The Dongle's Network ID will be the same as the Dongle's Serial Number.

Step 4: Return to the home screen of the app and select "LOCAL CONNECT". Select the "Set" button on the bottom right side and proceed to the next step.

Step 5: After completing step 4, the Local Set Interface as shown above will appear. Swipe upward on the phone screen until the "Update Firmware" button is visible at the bottom of the app's display.

Step 6: Choose the correct installation package in the dropdown box and click "UPDATE FIRMWARE" to begin the updating process.

After clicking the, "UPDATE FIRMWARE" button, the update will begin. Update progress can be viewed via the app as well as the inverter's LCD screen. Once the update is completed, a notification will appear confirming that the firmware has been successfully updated (as shown in photo). After successfully updating firmware, the inverter will restart itself.

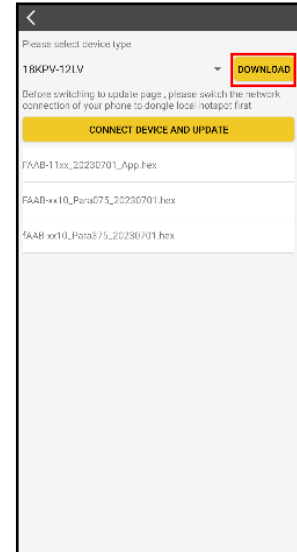

Make sure to update all inverters installed in the same ESS to the latest firmware.

10.2 FIRMWARE UPDATE VIA MONITOR CENTER (WEBSITE)

Step 1: Distributors and installers can update the firmware for their inverters by using the EG4 Electronics website monitoring system. Please contact EG4 to ensure the latest version is applied.

Serial number	Dongle	FW Code	Connect Status	Action
1 1234567890	XX12345678	? XXXX-XXXX	Connected	Update Standard Update
2		?		Update Standard Update
3		?		Update Standard Update
4		?		Update Standard Update
5		?		Update Standard Update
6		?		Update Standard Update
7		?		Update Standard Update
8		?		Update Standard Update
9		?		Update Standard Update

Step 2: Log into the EG4 Electronics Monitor System. Select "Maintenance," and then select "Remote Update."

Step 3: Choose the inverter the user is attempting to update and then select “Standard Update”. The Monitor Center will begin updating both firmware files in the inverter. The latest version of the firmware will be displayed in the bottom right window.

The screenshot shows the EG4 Electronics Monitor Center interface. The top navigation bar includes Monitor, Data, Configuration, Overview, and Maintenance. The left sidebar lists Remote Set, Batch Set, Set Record, Remote Update (highlighted), Update Record, and UL Compliance. The main content area shows the Remote Set section with a search bar for Station and Online Device, and a table of devices. The 'Standard Update' button is highlighted in the 'Update' column of the table.

Serial number	Dongle	FW Code	Connect Statu	Action			
1	1234567890	XX12345678	?	XXXX-XXXX	Connected	Update	Standard Update
2			?			Update	Standard Update
3			?			Update	Standard Update
4			?			Update	Standard Update
5			?			Update	Standard Update
6			?			Update	Standard Update
7			?			Update	Standard Update
8			?			Update	Standard Update
9			?			Update	Standard Update

11. SMARTPHONE APP SETUP

A monitoring account must be registered and the Wi-Fi password for the Wi-Fi dongle must be set **before** using EG4's monitoring system.


1. Register an account

Visit <https://monitor.eg4electronics.com/> or download the 'EG4 Monitor' App to register for an end-user account. Please contact support@eg4electronics.com for distributor or installer accounts.


2. When registering the account, provide the following information:

- Customer code: This is the code for a distributor or installer. Please contact the distributor or installer to obtain this code.
- Dongle SN: The serial number is attached to the Wi-Fi/LAN shell.
- Dongle PIN: PIN is attached to the Wi-Fi/LAN shell below the SN.

3. Set the Wi-fi password

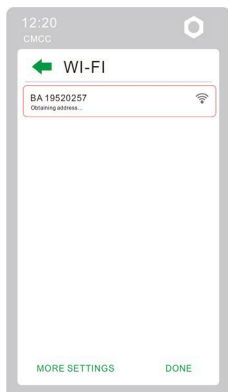

- Plug in the Wi-Fi dongle, and power on the inverter.
- Wait until any LED on the Wi-Fi module is flashing, and then connect the phone to the Wi-Fi hotspot. The hotspot name is the same as the Wi-Fi dongle serial number. (See image on left)
- Open the app. Click on "Dongle Connect". Click the Yellow refresh button to display a list of available networks. Select the home wireless network name and enter the password.
- After clicking Home Wi-Fi Connect, the Wi-Fi dongle will reset. After setting the correct password, three lights will be solid ON, which means the inverter is connected to the server. Return to the login page and input the account and password to begin monitoring the system.

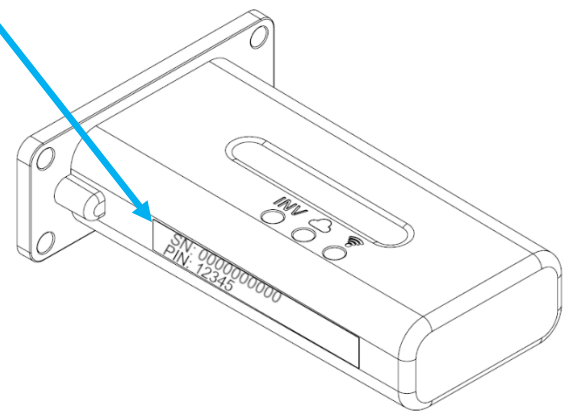



IMPORTANT: When following the steps above, if unable to link the dongle with the system using the Wi-Fi options, use the "Set with Bluetooth" (see image to the right) option located beneath the "Home WiFi Connect" selection to configure the dongle using Bluetooth. Remain near the device when configuring to ensure no data loss.

Local Monitoring Setup with the EG4 Monitor App

If there is no Wi-Fi available at the location, the user can use the Bluetooth function on Bluetooth compatible mobile devices to monitor or set up the system.

1. Download the EG4 Monitor App.
2. Select “Local Connect.” The user can now monitor and set up the system via Bluetooth or TCP Connect.
3. Click “Local Connect.” Select “Bluetooth Connect.” On the next page, select the serial number of the unit that has the dongle connected.




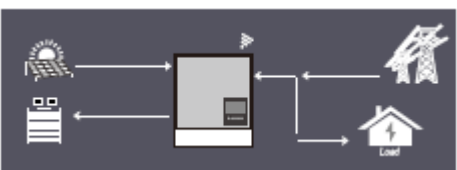
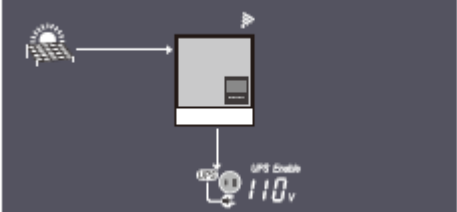
Now the user may view the system information through Bluetooth connection on the mobile device.

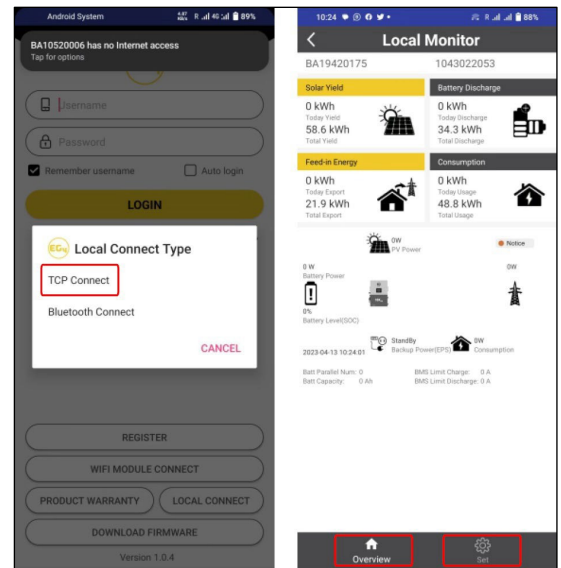

12. WORKING MODES

The table below describes how the inverter's LCD will display the different modes of operation per any given scenario.

Mode	Diagram	Comments
Bypass Mode		AC powers the load
PV Charge Bypass		PV charges the battery while AC powers the load
BAT Off-Grid		Battery powers the load
PV+BAT Off-Grid		PV & Battery power the load

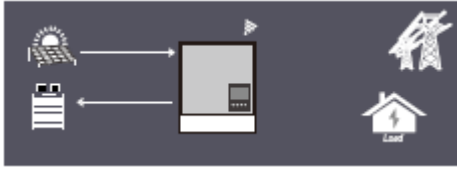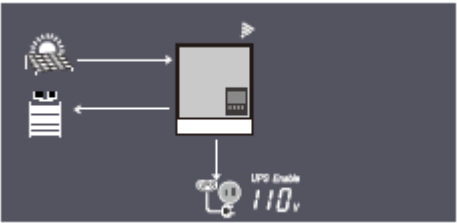PV Charge		<ol style="list-style-type: none"> 1. With EPS output switch off, the inverter charges the battery only. The inverter must NOT be in standby. 2. With battery power off, PV can wake up the battery automatically
PV Charge+Off-Grid		PV charges the battery and powers the load
AC Charge		<ol style="list-style-type: none"> 1. AC powers the battery from AC Input (Grid) or Generator Input (GEN) 2. When batteries reach low threshold, charge bank with Grid/GEN
PV+AC Charge		PV & AC charge the battery. AC is from AC Input (Grid) or Generator Input (GEN)
PV Off-Grid		<p>PV powers the load.</p> <p>NOTE: Load power depends on PV energy input and may be unstable</p>

12.1 RAPID SHUTDOWN (RSD)

The inverter supports a rapid shutdown system that complies with 2017 and 2020 NEC 690.12 requirements. A rapid shutdown switch should be connected to the RSD terminals on the master inverter and mounted in a readily accessible location outdoors (check with the local AHJ for specific requirements). For paralleled systems, the RSD needs only to connect to the master inverter. When the switch is engaged, it will shut down all inverters in parallel past the master.



NOTE: When using supported EG4 batteries in closed-loop communications with the inverter, the RSD also initiates ESS Disconnect as required by NEC code


The system can utilize an External E-Stop Switch if the AHJ deems it necessary. When doing so, setting 28 must be set to Enable to engage the function.

Type of External E-Stop Switch for RSD Requirements:

The external switch must be “Normally Open” by default, and “Closed” when the button is pressed for emergency shutdown.

12.1.1 EXTERNAL RSD WIRING INSTRUCTIONS


The image below showcases an example diagram using a Tigo RSD Transmitter (not included). Wire the E-Stop Switch into the RSD terminals on the master inverter, as shown below, following the specific switch's specifications. Please refer to the switch's manual for exact specifications and wiring instructions.

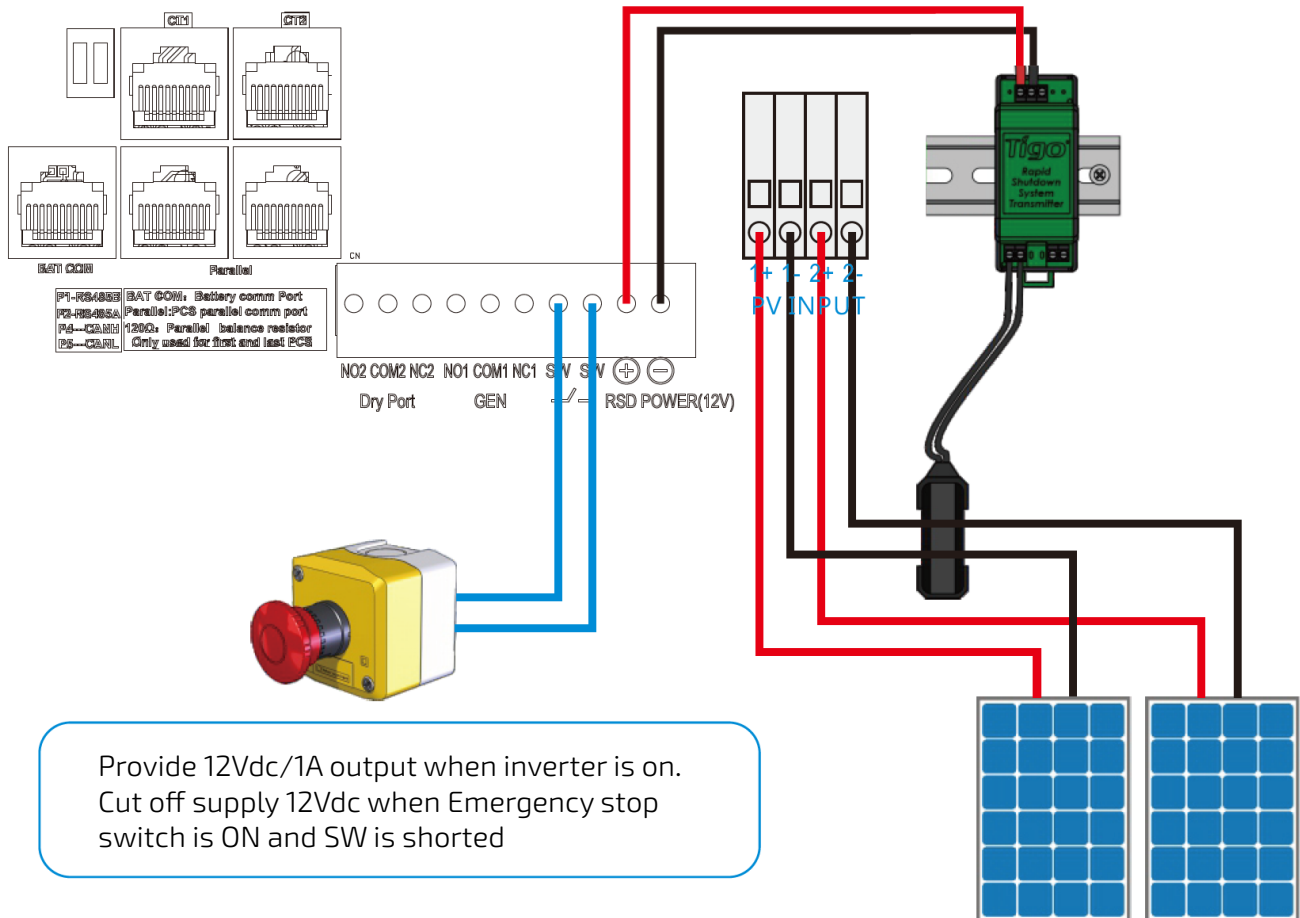


12.2 LCD DISPLAY AND SETTINGS

The user can wake up the LCD screen by simply pressing the Enter button. System status, real-time power, and daily and accumulated energy information can all be conveniently viewed on the inverter's LCD screen. Additionally, users can check the alarm and fault record on the display for troubleshooting.

LED Indicator			Info
1 (Normal)	Green	Solid ON	Working normal
		Flashing	Fast: Warning Slow: Firmware Update
2 (Fault)	Red	Flashing	Fault detected in the inverter

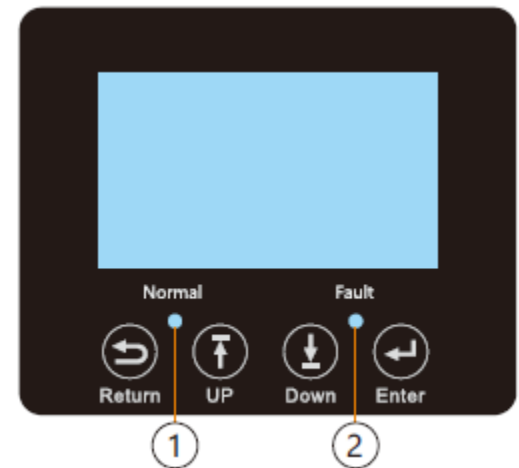

12.2.1 LCD DISPLAY

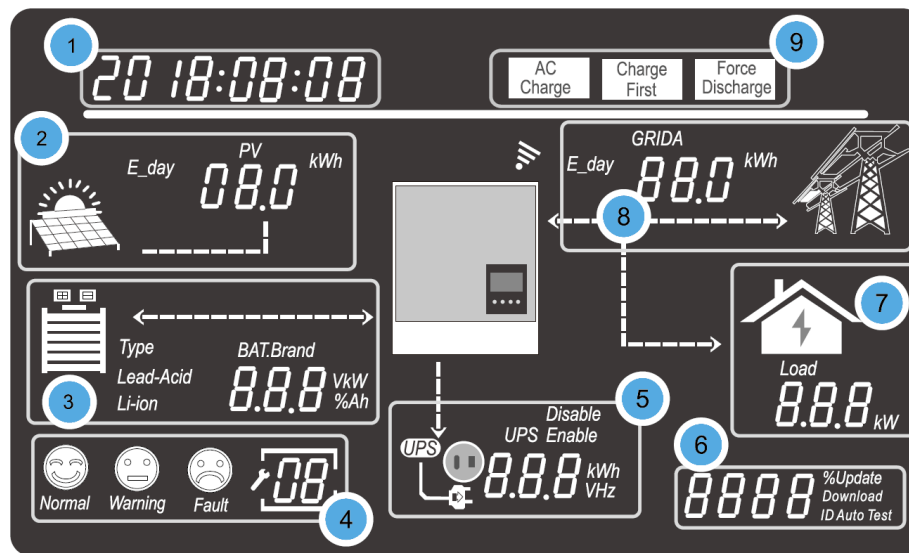


The data on the LCD screen updates every 3 seconds as various information is displayed in each section. See table on next page for more details.

No.	Description	Comments
1	General Information Display Area	Displays the current system status by default. Pressing the Up/Down buttons will cycle through Time, Date, Single/Parallel Inverter Setting, Inverter Serial Number, and Firmware Version. When entering new settings, the selection information is displayed in this area.
2	Photovoltaic (PV) Data	Cycles every 3 seconds through: PV1 Voltage, PV2 Voltage, PV1 power, PV2 Power, PV1 Energy (day), PV2 Energy (day), PV1 Energy (total to-date), and PV2 Energy (total to-date).
3	Battery Information and Data	Displays the battery type and brand. For lead-acid batteries, this area will cycle every 3 seconds through the CV voltage, Float Charge Voltage, Cut-off Voltage, and Discharge End Voltage. For Lithium-ion batteries, this area will cycle every 3 seconds through the Voltage (V), SOC (%), Power (kW), and Capacity (Ah).


4	System Status and Codes	<p>There are three system status icons: Normal, Warning and Fault, and a 2-digit field that displays codes.</p> <ul style="list-style-type: none"> Status = 'Normal': nothing is displayed in the 2-digit field Status = 'Warning': warning code is displayed in the 2-digit field. Status = 'Fault': fault code is displayed in the 2-digit field. System in 'Setting' mode: current Setting is displayed in the 2-digit field.
5	UPS/EPS output information and data	When the UPS function is enabled, this area will cycle through UPS1 V, UPS1 Hz, UPS1 kW, UPS2 V, and UPS2 kW. There is no UPS2 Hz, because it will always be the same as UPS1 frequency by default. UPS1=Phase1=L1, UPS2=Phase2=L2.
6	Programming & the percentage of AC output power	When in Off-Grid mode, this area will display the percentage of the maximum AC output power. Relevant information is displayed during firmware updates
7	Load consumption	Displays the power consumption by the load in the On-grid Mode.
8	Grid and Generator information	Cycles through: Grid1 Voltage, Grid2 Voltage, Grid Hz, Gen1 Voltage, Gen2 Voltage, Gen Hz, Grid Power, Grid Energy (day), and Grid Energy (total to-date). Grid1=Phase1=L1, Grid2=Phase2=L2; Gen1=Phase1=L1, Gen2=Phase2=L2
9	Working mode area	When the user makes changes to the 6000XP inverter through the LCD, this area will display the AC Charge, Charge First and Force Discharge settings. Otherwise, this area displays nothing.

Inverter Status Displays


Normal/Running Status:

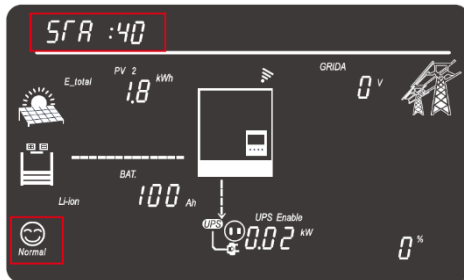


Warning Status:

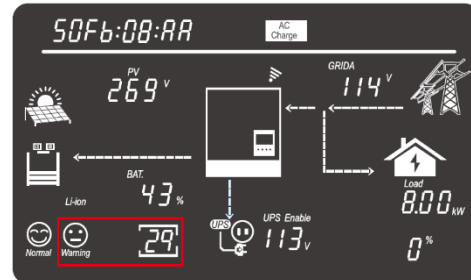


Fault Status:

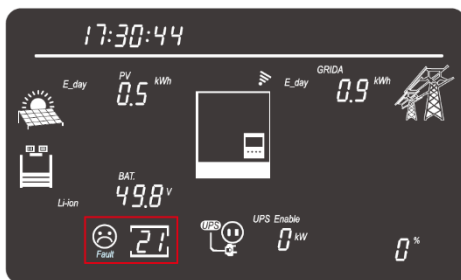

Flash Status:

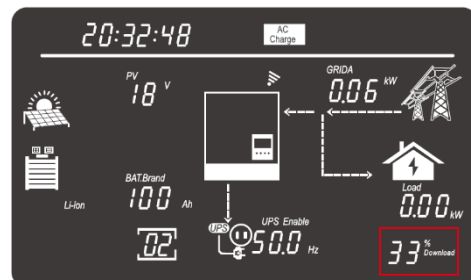


Grid Status for GRIDA (Utility):

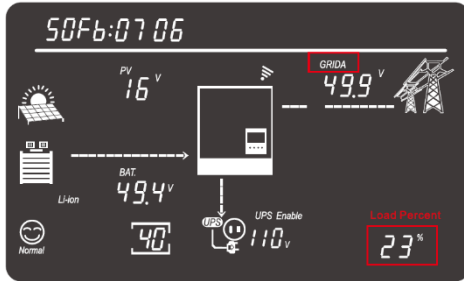

NOTE: When GRIDA is displayed, AC utility information is displayed. Percent at bottom right is load% (e.g., 23%).

Grid Status for GRIDB (Generator):

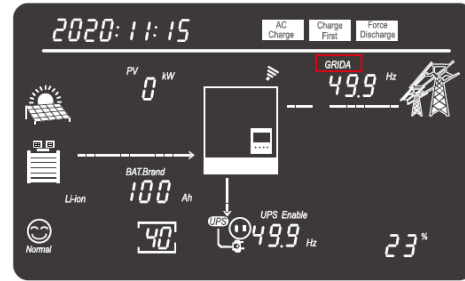

NOTE: When GRIDB is displayed, Generator information is displayed. Percent at bottom right is load% (e.g., 23%).

13. LCD SETTINGS

There are four (4) buttons on the LCD screen used to select various modes and make changes to settings:




Step 1: Press the Enter button for ≈3 seconds to enter the **setting mode**. The data in the 'General Information Display Area' will flash and the 2-digit Setting field will be displayed.




Step 2: Press Up/Down to cycle through the settings (1-32).









Step 3: Press Enter to confirm the desired setting.


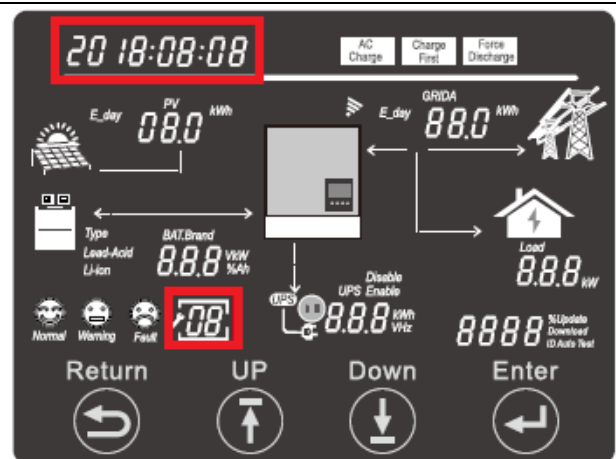


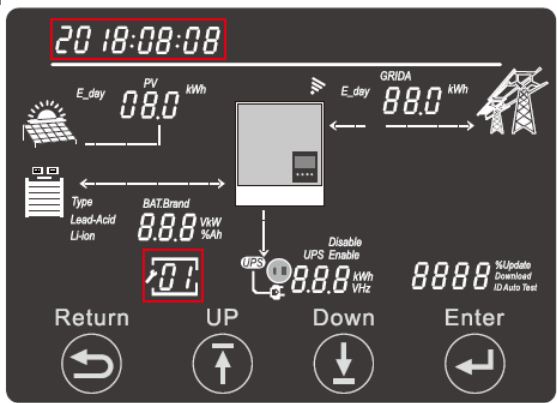
Step 4: Press Up/Down to cycle through the settings.




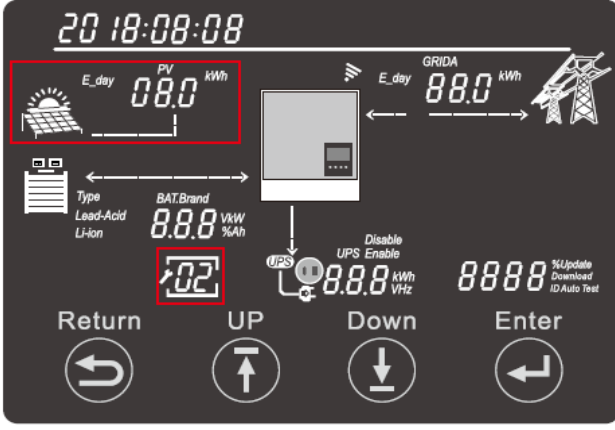
Step 5: Press Enter to confirm the desired setting.





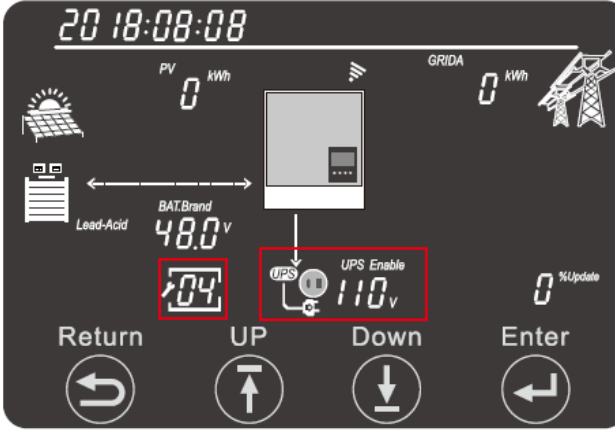
#	DESCRIPTION	SETTING OPTION(S)
1	Date & Time	 <p>Setting Year/Month/day</p>  <p>Setting hour/minute/second</p>  <p>This setting allows the user to set the Local Date and Time.</p>

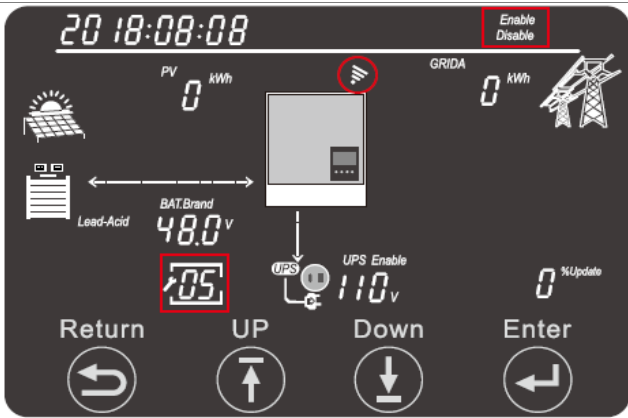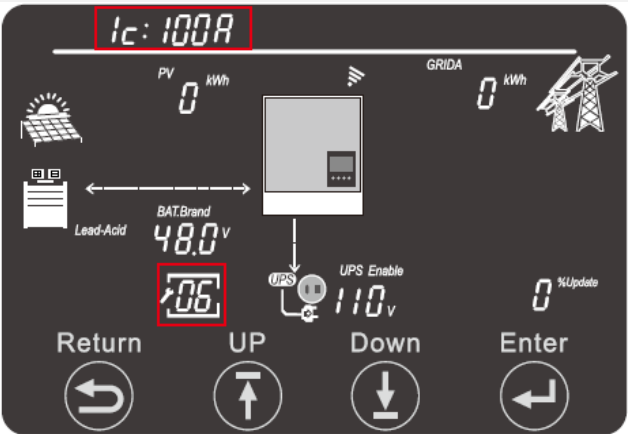
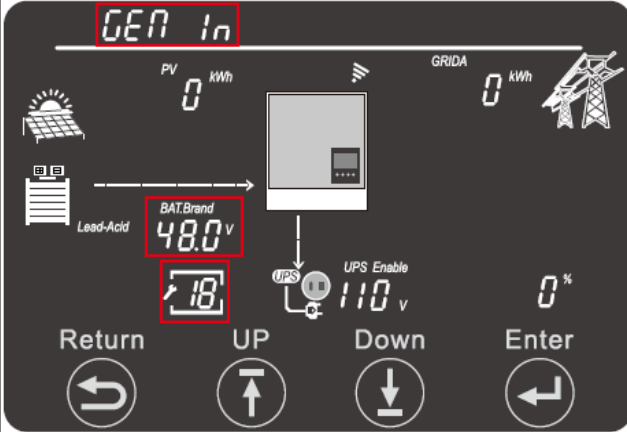
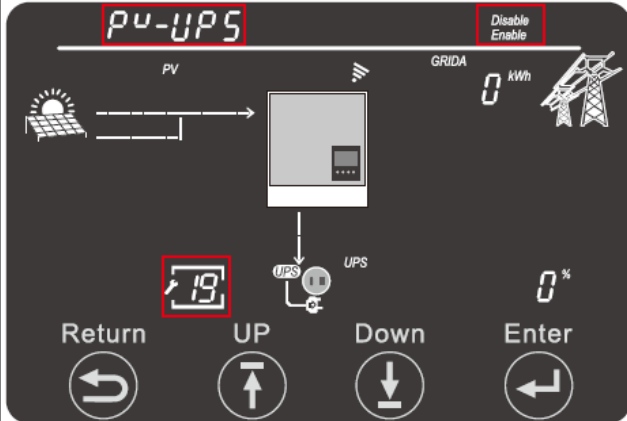
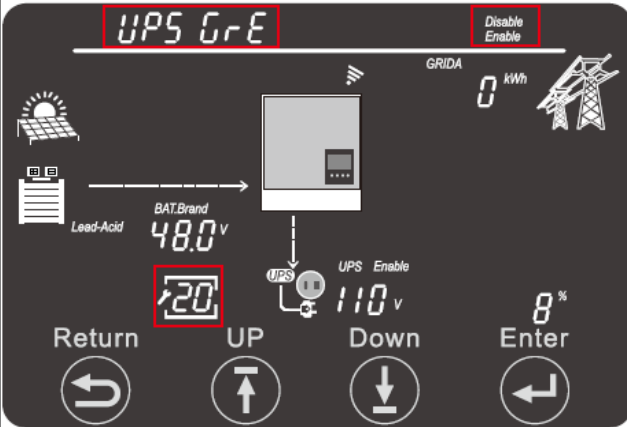
2	PV Input Mode		<p>This setting allows the user to set the PV Input Mode.</p> <p>PV Input Type: S=two independent strings, P=same string input for 2 MPPTs Default: S</p>
3	Battery	<p>This setting allows the user to identify if Batteries will be used in the system and, if yes, the type of batteries (Lead-Acid or Lithium).</p> <p>Operate with No Battery</p> <p>Step 1: Choose battery type first. When “no” begins flashing, select Enter to operate with No Battery</p> <p> REMINDER: It is NOT recommended to operate without batteries</p>	
		<p>Operate with Lead-Acid Battery</p> <p>Step 1: Choose battery type first. When “Lead-Acid” begins flashing, select Enter to operate with Lead-Acid Batteries.</p> <p>Step 2: Enter the Battery Capacity (Ah)</p>	 
		<p>Operate with Lithium Battery</p> <p>Step 1: Choose battery type first. When “Li-ion” begins flashing, select Enter to operate with Lithium Batteries.</p> <p>Step 2: Enter the Battery Brand (e.g., 0=EG4, 2=Pylon, 6=LuxPower, 8=Dyness)</p>	 
4	UPS Output Voltage and Frequency		<p>This setting allows the user to set the inverter output voltage and frequency.</p> <p>AC Output Voltage: 200VAC, 208VAC, 220VAC, 230VAC, 240VAC Default: 240VAC</p> <p>AC Output Frequency: 50Hz, 60Hz Default: 60Hz</p>


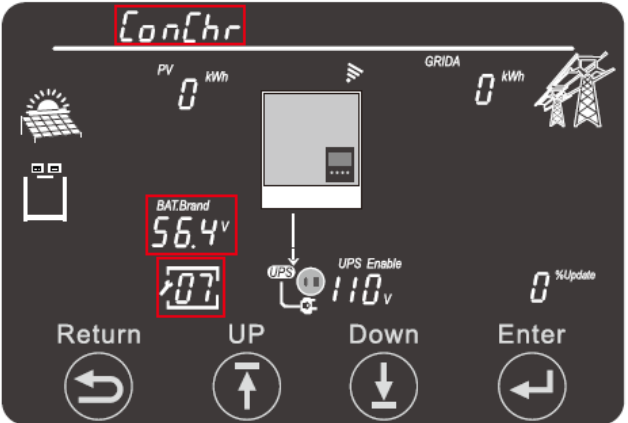
5	Buzzer Enable		<p>This setting allows the user to enable or disable the inverter buzzer.</p> <p>Inverter Buzzer: Enable/Disable Default: Enable</p>
6	Ic: Maximum Charge Current (Utility+Solar)		<p>This setting allows the user to set the maximum charge current.</p> <p>Total Charge Current: Range: 0 – 125A Default: 125A</p> <p>AC Charge Current:  Range: 0 – 125A Default: 30A</p> <p>Generator Charge Current:  Range: 0 – 110A Default: 30A</p>
7	ConChr: CV Voltage (Lead-Acid Only)		<p>This setting allows the user to set the Charging Voltage for Lead-Acid batteries only.</p> <p>Lead-Acid Charging Voltage: Range: 50.0 – 59.0VDC Default: 56.4VDC</p>

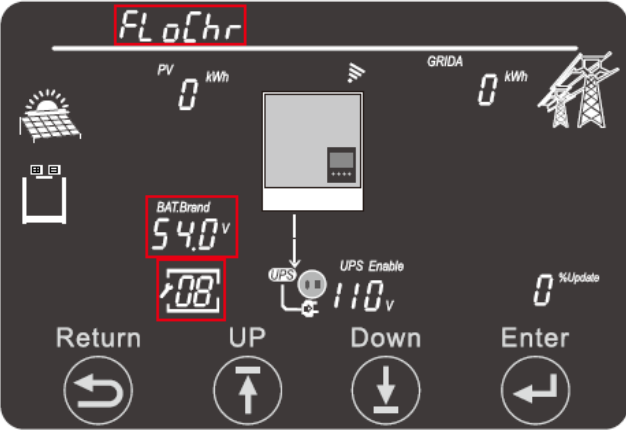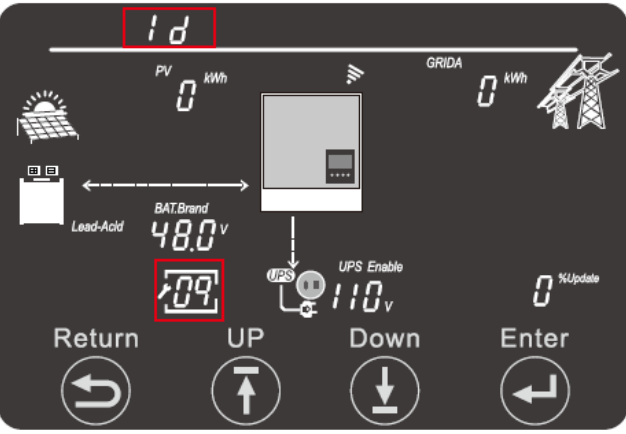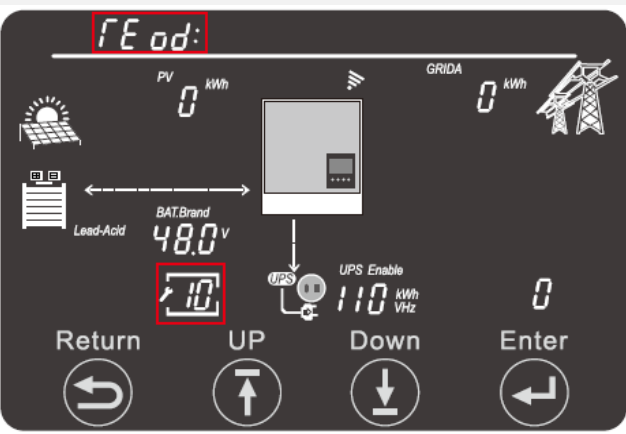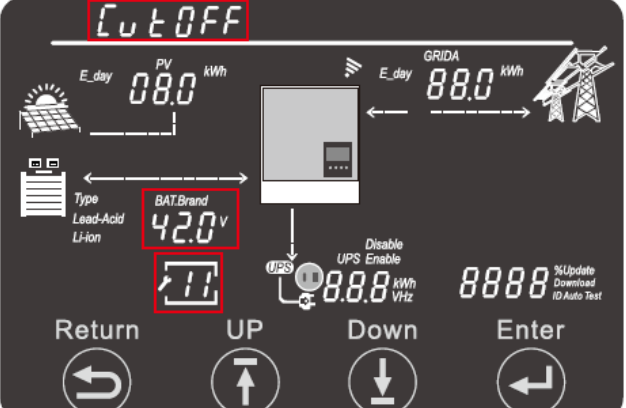


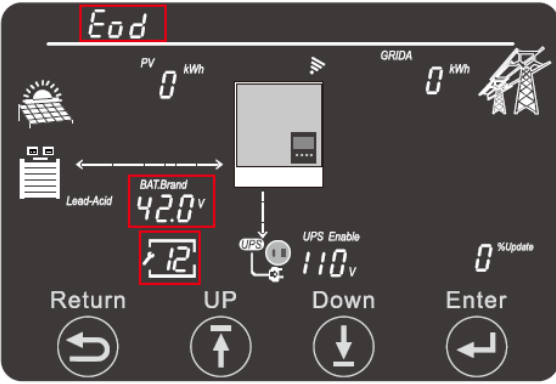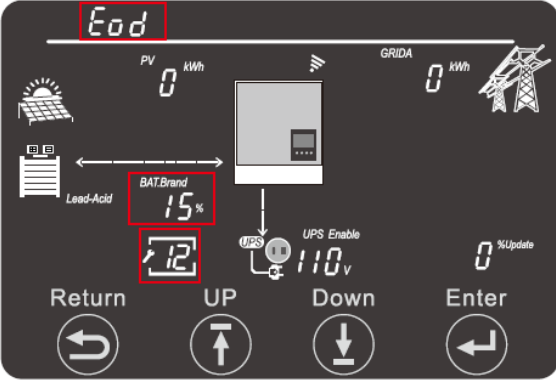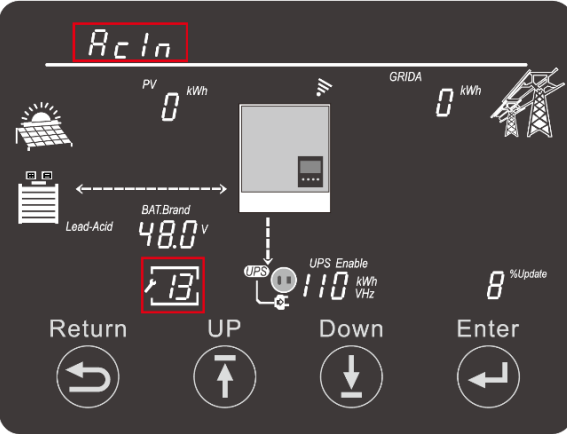




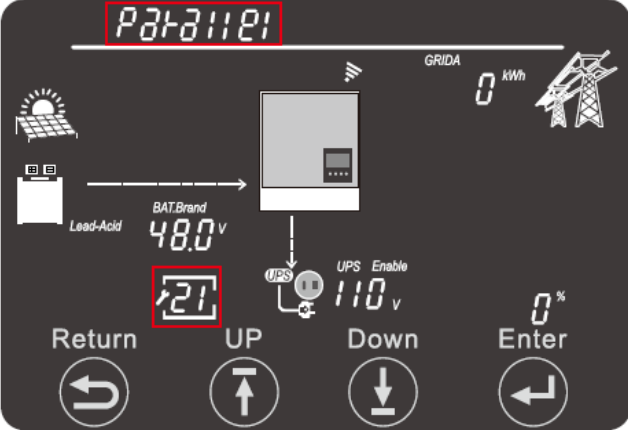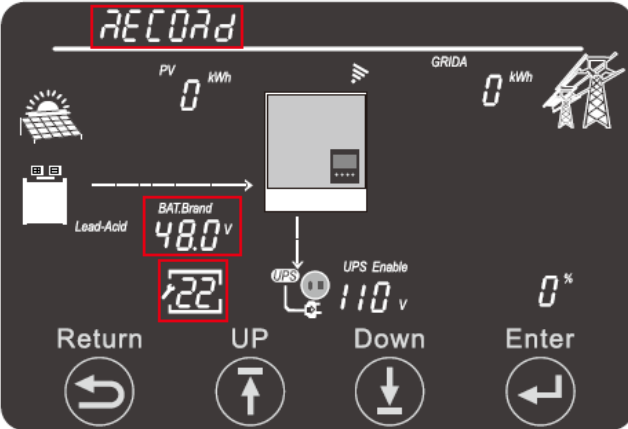


8	FloChr: Floating Charge Voltage (Lead-Acid Only)		<p>This setting allows the user to set the Lead-Acid Battery Float Charge Voltage.</p> <p>Lead-Acid Floating Charge Voltage: Range: 50.0 – 56.0VDC Default: 54.0VDC</p>
9	Id: Maximum Discharge Current		<p>This setting allows the user to set the Maximum Discharge Current.</p> <p>Maximum Discharge Current: Range: 10 – 140A Default: 140A</p>
10	TEOd: Discharge Control Type (Volt/SOC)	 <div data-bbox="1133 1220 1373 1419"> <p>TEOd:VOL</p> <p>TEOd:SOC</p> </div>	<p>This setting allows the user to select Voltage or SOC as the trigger for battery discharge.</p>
11	CutOFF: Cut off Voltage/SOC		<p>This setting allows the user to set the cutoff Voltage or SOC based on the selection made in Setting 10, TEOd.</p> <p>Cutoff Voltage: 40.0 – On-Grid EOD Voltage Default: 42V</p> <p>Cutoff SOC: Range: 0 – On-Grid EOD SOC% Default: 15%</p>



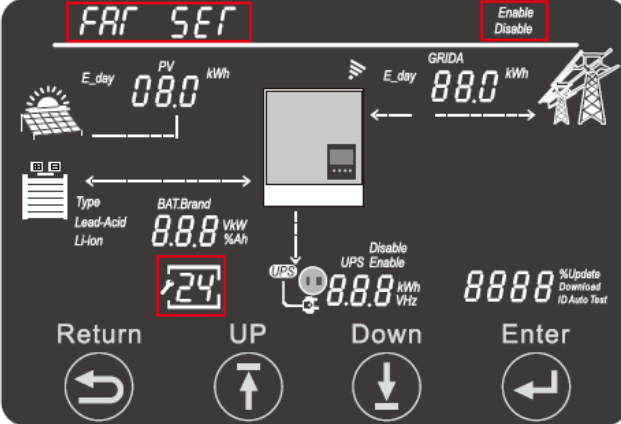
<div>12</div>	<div>Eod: Battery Discharge Cutoff</div>	<div> </div>	<div><p>This setting allows the user to set the End-Of-Discharge Voltage and SOC parameters.</p><p>End of Discharge Cutoff Voltage: Range: Cutoff Voltage – 58V Default: 42V</p><p>End of Discharge Cutoff SOC: Range: Cutoff SOC – 90% Default: 15%</p></div>
<div>13</div>	<div>AC In: AC Voltage Range Setting</div>	<div></div>	<div><p>This setting allows the user to set the AC Input Voltage Range</p><p>AC In Voltage Range: APL – 90-280VAC UPS – 170-280VAC</p><div><div>AC In:APL</div><div>AC In:UPS</div></div></div>

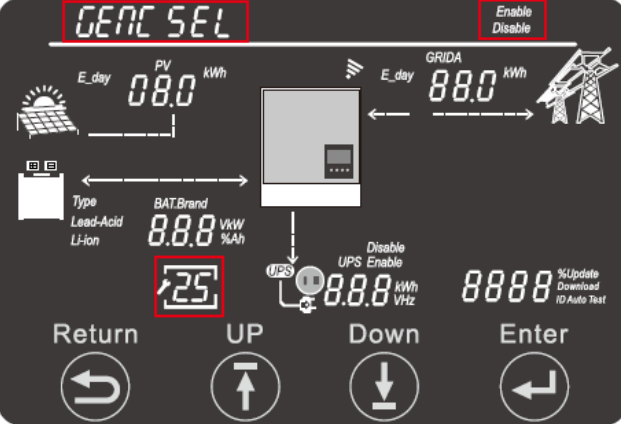14	AC Charge Setting	<div data-bbox="472 149 1073 600"> </div> <div data-bbox="1114 180 1463 495"> <div>P1:00:00 start AC Charge</div> <div>P1:23:59 end AC Charge</div> <div>P2:00:00 start AC Charge</div> <div>P3:00:00 start AC Charge</div> </div> <p>To configure AC charging, the user must first enable AC Charging, confirm the full battery SOC value, and set the confirmation time periods 1, 2, and 3.</p> <div data-bbox="472 730 902 810"> <p>AcCh: d 15</p> </div> <div data-bbox="1000 730 1430 810"> <p>AcCh: u0L start AC Charge</p> </div> <p>AC Charge Control Settings for Voltage and SOC:</p> <p>Voltage: Start Voltage: 35.4 – 52V End Voltage: 48 – 59V</p> <p>SOC: Start SOC: 1 – 90% End SOC: 20 – 100%</p> <p>AC Charge Control Settings for Start/End Times:</p> <p>Start Time1-3: Range: 00:00 – 23:59 Default: 00:00 – 00:00</p> <p>End Time1-3: Range: 00:00 – 23:59 Default: 00:00 – 00:00</p> <div data-bbox="1279 863 1430 942"> <p>BAT. 15 %</p> </div>
15	AC Input Load Timer Settings	<div data-bbox="472 1304 1073 1724"> </div> <p>This setting allows the user to set the Start/End times for the Grid/Utility to supply power to the load.</p> <p>Start Time1-3: 00:00 – 23:59 Default: 00:00 – 00:00</p> <p>End Time1-3: 00:00 – 23:59 Default: 00:00 – 00:00</p>


17	Battery Wakeup		<p>This setting allows the user to enable or disable the battery wakeup feature. It is not applicable if no battery type is defined.</p> <p>Range: Enable/Disable</p>
18	Max Generator Input Power		<p>This setting allows the user to set the maximum generator input power.</p> <p>Range: 0-7369W Default: 7369</p>
19	PV Off-Grid Enable/Disable		<p>This setting allows the user to configure the system to only use PV for loads. Due to voltage fluctuation, power output may be inconsistent.</p> <p>Range: Enable/Disable Default: Disable</p>
20	Power Save Function		<p>This setting allows the user to enable or disable the Power Save Functions, 'Green Function' and 'ECO Mode'.</p> <p>Range: Enable/Disable</p> <p>The default settings for both functions are set to disabled.</p>

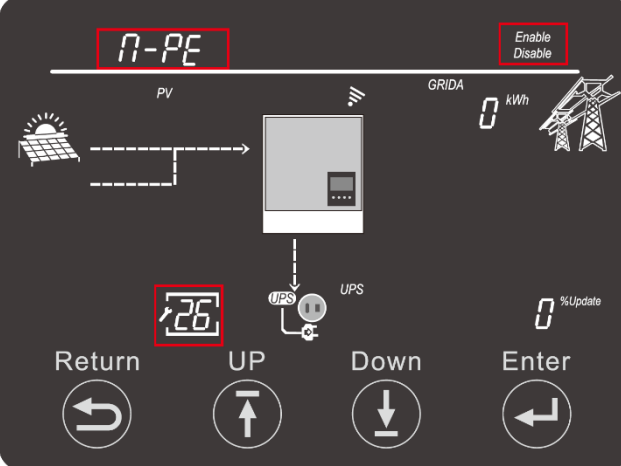21	Parallel Setting	 <div data-bbox="495 604 742 695">P2:P1:1PH</div> <div data-bbox="794 604 1040 695">PHAS:P1</div> <p>Parallel Type: NoPL (Not Parallel), 1PH (Single Phase), 3PH (Three Phase) Default: NoPL</p> <p>Parallel Phase: P1 (U-Phase), P2 (V-Phase), P3 (W-Phase) Default: P1 (U-Phase)</p> <p>Battery Share Enable/Disable: Disable/Enable Default: Disable</p>	<p>This setting allows the user to select the inverter paralleling configuration.</p>
22	Error/Alarm Record		<p>This setting allows the user to see Error and Alarm records.</p> <div data-bbox="1166 974 1419 1064">Err REC</div> <div data-bbox="1172 1169 1425 1260">ALB REC</div> <p>Error Record:->Record Setting->Record Message (Year:Month:Day; Hour:Min:Sec; Error Code)</p> <p>Alarm Record:->Record Setting->Record Message (Year:Month:Day; Hour:Min:Sec; Alarm Code)</p>


24	Fan Speed Setting	 <p>Fan1/2 Slope: Enable/Disable Default: Disable</p> <p>Range: 20 – 100% Default: 70%</p>	<p>This setting allows the user to adjust the operation of the Inverter's two fans. The user can set the speed (20-100%) and enable or disable the slope (Enabling the slope allows the fans to ramp up/down to/from the fan speed setting).</p>  
25	Generator Charge Setting	 <p>Generator Charge Control Type: VOL or SOC Default: VOL</p> <p>Generator Charge Control Value (Volts): Start Voltage: 38.4 – 52V, End Voltage: 48 – 59V</p> <p>Generator Charge Control Value (SOC): Range: Start SOC: 1 – 90%, End SOC: 20 – 100%</p>	<p>This setting allows the user to select the Generator charge control parameter (Voltage or SOC) and the associated Start/End Voltage or SOC.</p>    
26	Neutral-Ground Bonding Function		<p>This setting allows the user to enable or disable the internal neutral-ground bond. The inverter must be in standby to make this change. Turn the “EPS Output” switch to off to engage standby mode.</p> <p>Range: Enable/Disable Default: Enable</p>  

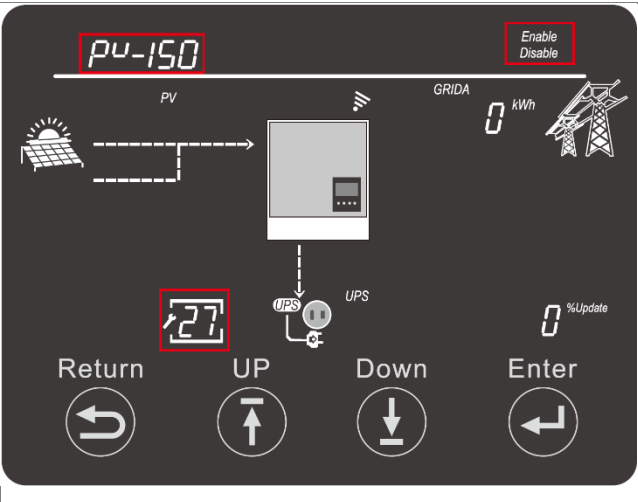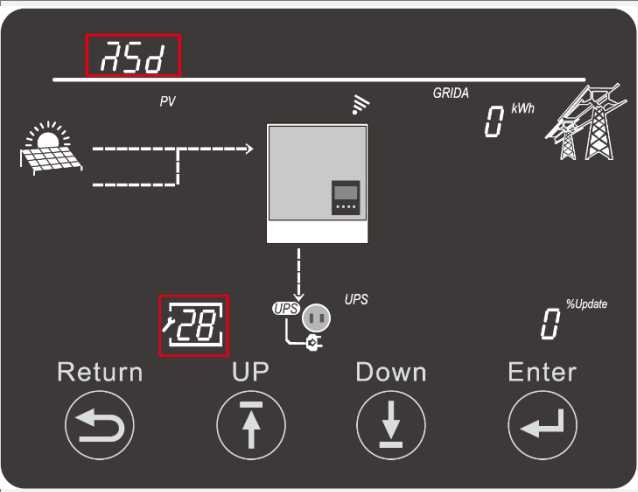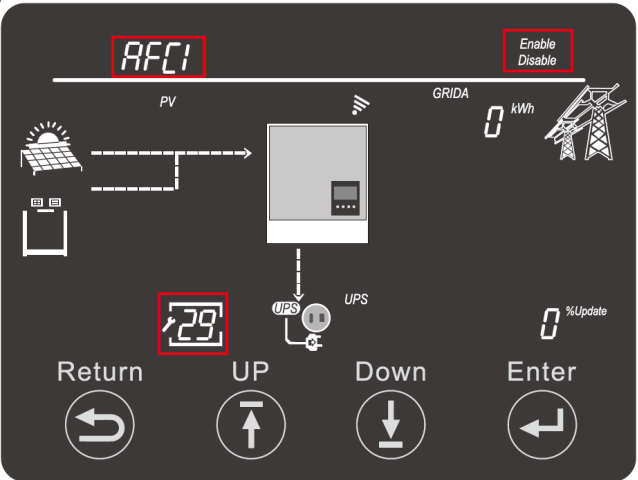27	PV Isolation Protection	 <p>The screen displays 'PV-ISO' in the top left. In the top right, there is a toggle switch labeled 'Enable' and 'Disable'. The background shows a schematic of a PV system connected to an inverter, which is connected to a grid (GRIDA) and a battery (UPS). At the bottom, there are four navigation buttons: 'Return' (left arrow), 'UP' (up arrow), 'Down' (down arrow), and 'Enter' (right arrow). The 'UP' button is highlighted with a red box.</p>	<p>This setting allows the user to enable or disable the PV Isolation Protection of the MPPT.</p> <p>Range: Enable/Disable Default: Disable</p> <div data-bbox="1161 394 1417 487" data-label="Text"> <p><i>Enable</i></p> </div> <div data-bbox="1161 514 1417 606" data-label="Text"> <p><i>Disable</i></p> </div>
28	RSD Function	 <p>The screen displays 'RSD' in the top left. The background shows a schematic of a PV system connected to an inverter, which is connected to a grid (GRIDA) and a battery (UPS). At the bottom, there are four navigation buttons: 'Return' (left arrow), 'UP' (up arrow), 'Down' (down arrow), and 'Enter' (right arrow). The 'UP' button is highlighted with a red box.</p>	<p>This setting allows the user to enable or disable the RSD function of the inverter.</p> <p>Range: Enable/Disable Default: Enable</p> <div data-bbox="1161 856 1417 949" data-label="Text"> <p><i>Enable</i></p> </div> <div data-bbox="1161 976 1417 1068" data-label="Text"> <p><i>Disable</i></p> </div>
29	AFCI Protection	 <p>The screen displays 'AFCI' in the top left. In the top right, there is a toggle switch labeled 'Enable' and 'Disable'. The background shows a schematic of a PV system connected to an inverter, which is connected to a grid (GRIDA) and a battery (UPS). At the bottom, there are four navigation buttons: 'Return' (left arrow), 'UP' (up arrow), 'Down' (down arrow), and 'Enter' (right arrow). The 'UP' button is highlighted with a red box.</p> <div data-bbox="686 1642 1266 1757" data-label="Text"> <p><i>AFCICLA</i></p> <div data-bbox="1161 1686 1234 1734" data-label="Text"> <p><i>Enable</i> <i>Disable</i></p> </div> </div>	<p>This setting allows the user to enable or disable the Arc-Fault Circuit Interrupter protection of the inverter.</p> <p>Range: Enable/Disable Default: Enable</p> <div data-bbox="1161 1402 1417 1495" data-label="Text"> <p><i>Enable</i></p> </div> <div data-bbox="1161 1522 1417 1614" data-label="Text"> <p><i>Disable</i></p> </div>


30	GEN Boost	<div data-bbox="462 216 1096 695"> </div> <div data-bbox="1117 216 1481 352"> <p>This setting allows the user to enable or disable the GEN Boost function of the inverter.</p> <p>Range: Enable/Disable</p> </div> <div data-bbox="1125 390 1377 590"> <div>Enable</div> <div>Disable</div> </div>
31	Smart Load Enable/Disable	<div data-bbox="479 772 1107 1245"> </div> <div data-bbox="1125 772 1481 909"> <p>This setting allows the user to enable or disable the Smart Load function of the inverter.</p> <p>Range: Enable/Disable Default: Disable</p> </div> <div data-bbox="1125 1010 1377 1209"> <div>Enable</div> <div>Disable</div> </div> <div data-bbox="475 1289 1107 1388"> </div> <div data-bbox="1125 1289 1481 1388"> <p>Grid On Range: Enable/Disable Default: Disable</p> </div>

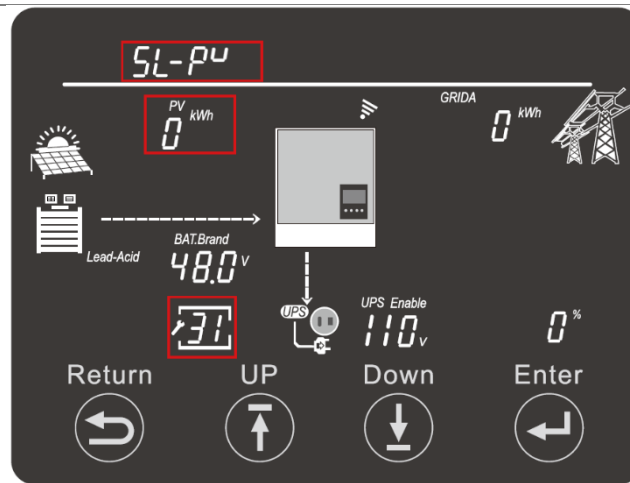

PV Power Range: 0 – 25.5kW
Default: .05kW

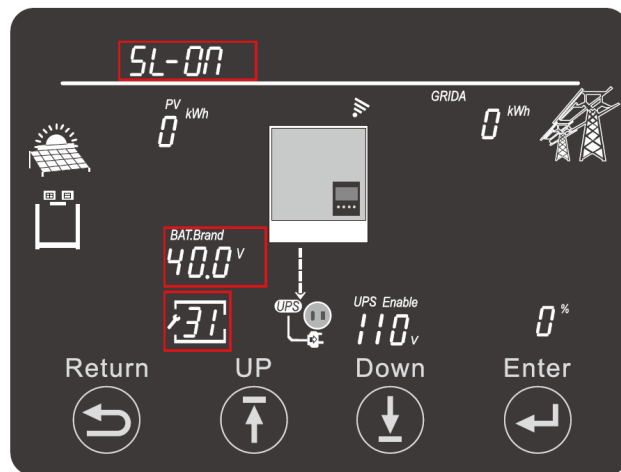


Smart Load On Range:
VOLT: 40 – 59V
Default: 54V
SOC 0 – 100%
Default: 90%

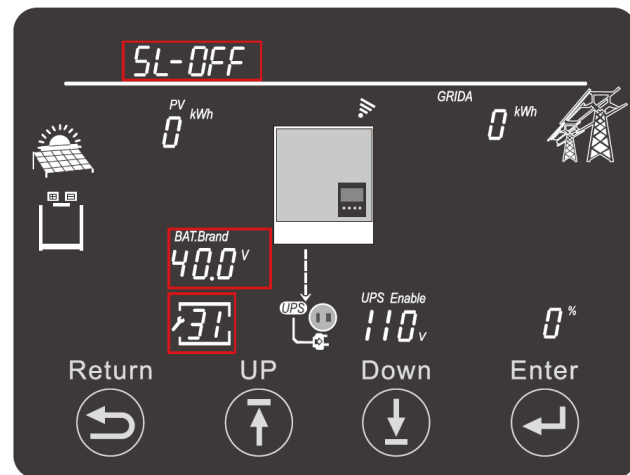

Smart Load Off Range:
Volt: 40 – 59V
Default: 48V
SOC: 0 – 100%
Default: 60%

32 AC Couple

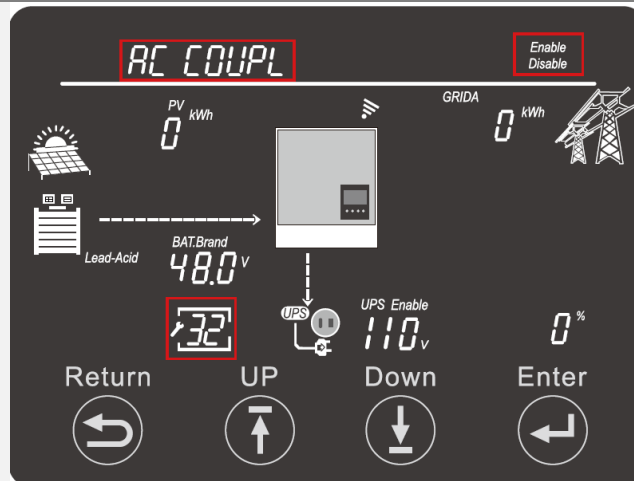


This setting allows the user to enable or disable the AC Couple function of the inverter.

Range: Enable/Disable
Default: Disable

Enable

Disable

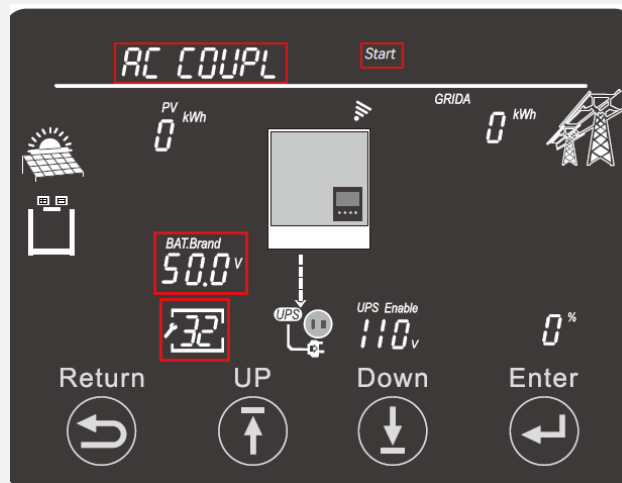


AC Couple Start Range:


Volt: 40 – 59B

Default: 50V

SOC: 0 – 101%

Default: 50%

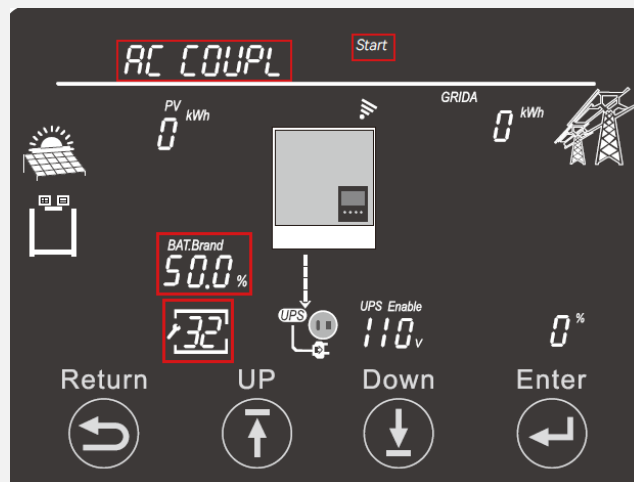

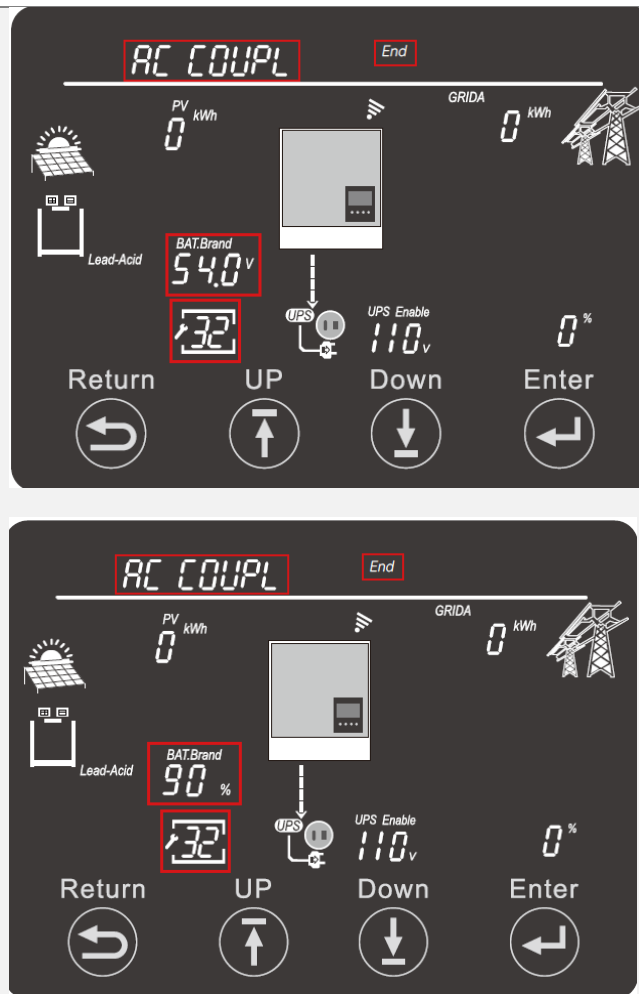

AC Couple End Range:

Volt: 40 – 59V

Default: 54V

SOC: 0 – 101%

Default: 90%

14. INVERTER START-UP AND SHUT-DOWN PROCEDURE

14.1 START-UP

Follow the steps outlined below to ensure proper start-up and shut-down procedures to avoid potential component damage.

1. Ensure all circuit breakers are in the open (OFF) position.
2. Using a multimeter, check the battery bank to ensure no voltage (DC) is present.
3. Check the external PV Isolator Switch via multimeter to ensure the voltage (DC) is in the MPPT's optimal operating range.
4. If utilizing AC input, double check each hot line to neutral coming into inverter to ensure voltage is in operating range of the unit.
5. Upon confirming all voltages are within the inverter's operating range, close (ON) the battery breaker on the front of the unit. Close the external battery breaker between bank and inverter (if equipped).
6. Begin powering batteries on one at a time, starting with the master, in ≈ 5 second intervals.
7. Close the external PV isolator switch (if equipped). Close PV breaker on the side of the unit.
8. If using AC input, close external breaker between panel and inverter. Next, close the GRID breaker on the front of the unit.
9. Power on the inverter via the power switch on the side of the unit.
10. Close external AC Output breaker (if equipped) going to panel. Turn ON EPS Output (AC Output) switch on side of unit to begin powering loads.



DANGER: Never disconnect battery, PV, or AC input power under loads. If there is an emergency and users must shut down the inverter, please follow the steps outline below.


14.2 SHUT-DOWN

1. Turn OFF EPS Output on side of inverter.
2. Open (OFF) GRID/GENERATOR breaker on front of unit.
3. Open LOAD breaker on front of unit. Open external AC output breaker (if equipped).
4. Open external PV isolator switch. Open PV breaker on side of the unit.
5. Open Battery Breaker on front of unit. Open external battery breaker (if equipped).
6. Power down batteries one at a time starting with the master.
7. Turn power switch on side of unit to OFF.

15. STATUS, WARNING, & ERROR CODES

15.1 STATUS CODES


Under normal operating conditions, the inverter LCD will display a smiling face (Normal) icon in the lower left corner along with the status code in the upper left corner. View the table below for a list of status codes and explanations.

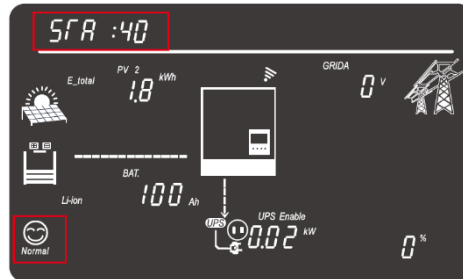

CODE	STATUS	DESCRIPTION
00	Standby	Inverter is in standby status.
02	FW Updating	Inverter is updating firmware.
08	PV Charge	Solar power exclusively charges the battery, with a maximum capacity limited by the battery's charging power. This mode commonly activates when the EPS switch is off. The inverter must not be in standby.
10	Battery On-grid	Grid power is on with no PV input. Inverter is set in AC First or inverter is set in AC Charge while AC Charge requirement not met.
11	Bypass	Inverter is in one of three modes and supplies load in AC only: <ol style="list-style-type: none"> 1. Inverter is in standby mode 2. Inverter is in ECO mode 3. Inverter is in fault mode
14	PV & Battery On-Grid	When there is PV current, the inverter will operate in option 1 or 2 below: <ol style="list-style-type: none"> 1. Inverter is set to use AC First, grid AC will take load first and PV will charge the battery. 2. Inverter is set to use AC Charge; grid AC will take load first and then AC charge if PV is not sufficient.
19	PV Charge + Bypass	The load is supplied by grid power. Solar power is dedicated solely to charging the battery and is limited to the maximum charging capacity of the battery.
20	AC Charge	Grid power is supplying load and charging battery simultaneously.
40	Battery Off-grid	Grid power is off, and the inverter supplies the load with only battery power.
80	PV Off-grid	Grid power is off, and the inverter supplies the load with available solar power.
C0	PV & Battery Off-grid	Grid power is off. Inverter supplies the load with a combination of solar and battery power. Solar will charge batteries while supplying loads if PV input is greater than loads.
88	PV Charge Off-grid	Grid power is off. Solar power is used to supply the load and charge batteries simultaneously.

15.2 WARNING CODES

When the inverter detects errors, the LCD will display a neutral face (warning) icon in the lower left corner along with the warning code. View the table below for a list of warning codes and explanations.

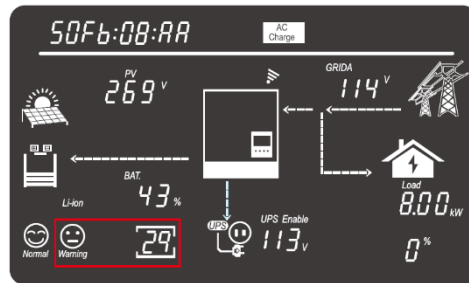


CODE	WARNING INFO	DESCRIPTION	TROUBLESHOOTING
00	Communication failure with battery	The battery is not receiving CAN or RS485 data	<ol style="list-style-type: none"> 1. Check the PIN layout of the Comm cable on both the inverter and battery side. 2. Check if the Comm cable is connected in the correct comm port (CAN or RS485). 3. Check the battery DIP switch settings. 4. Verify a supported battery protocol is configured using the battery compatibility list.
01	AFCI Com failure	Inverter does not communicate with AFCI module.	Restart Inverter. If the error persists, contact the distributor.
02	AFCI High	PV arc fault is detected	Check each PV string for correct open circuit voltage and short circuit current. If the PV string voltage and current are within inverter specifications, please clear the fault on inverter LCD. If the error persists, please contact the distributor.
03	Meter communication failure	Inverter failed to communicate with the meter.	Restart the inverter to clear the error. If the error persists, please contact the distributor.
04	Battery fault	Battery communication is normal, but the BMS is not allowing charging and discharging	<ol style="list-style-type: none"> 1. Check the PIN layout of the Comm cable on both the inverter and the battery end. 2. Using the battery compatibility list, verify a supported battery protocol is being used. 3. Check if there is fault on battery's indicator. If there is a fault, please contact the distributor. 4. Restart batteries and ensure the communication cables are installed correctly. If the error persists, please contact the distributor.
06	RSD Active	Rapid shutdown is activated.	Check if the RSD switch is pressed.

08	Firmware mismatch	Firmware version is mismatch between the microprocessors.	<ol style="list-style-type: none"> 1. If a firmware update was performed, verify the firmware update successfully completed. 2. Update to the latest firmware (all inverters in parallel). 3. Following the proper shut-down steps, turn off the inverter, turn it on again after 3 minutes. Check if the error is cleared. 4. If the error persists, contact the distributor.
09	Fan Stuck	A cooling fan is stuck.	<ol style="list-style-type: none"> 1. Check if there is any foreign object blocking the fan causing it to stop. 2. Reinsert the fan cable on the interface board 3. Press the RSD switch to check if the fan is working. 4. Restart the inverter. If the error persists, please contact the distributor.
12	Bat on Mos	The reverse mosfet does not turn on.	<ol style="list-style-type: none"> 1. Following the proper shut-down steps, turn off the inverter, turn it on again after 3 minutes. Check if the error is cleared. 2. If the error persists, please contact the distributor.
13	Over temperature	NTC temperature reading is higher than 87°C	<ol style="list-style-type: none"> 1. Check if there is a stuck fan. 2. Verify the air ducts are not blocked. 3. Perform regular cleaning for the dust filters. 4. Reinsert the fan cable on the interface board.
15	BatReverse	Polarity reversal when battery is connected to inverter.	Verify the positive and negative battery connections to inverter are properly installed. If the error persists, contact the distributor.
18	AC Frequency out of range	After having self-adjusted to grid frequency, the AC input frequency is out of range	Check AC frequency to ensure it is in the operable range. Turn off grid input or restart the inverter to have self-adjustment again.
19	AC inconsistent in parallel system	<ol style="list-style-type: none"> 1. In single-phase parallel system, the AC input voltage or frequency between the master and sub inverter is inconsistent. 2. In three-phase parallel system, the AC input voltage or frequency among the inverters of same phase is inconsistent or the configured phase and detected phase of the sub inverter is inconsistent 	<ol style="list-style-type: none"> 1. Ensure the AC input is from a common source and installed to each inverter in parallel. 2. Restart the inverter, if the error persists, contact the distributor.
20	PV Isolation low	ISO protection was triggered.	<ol style="list-style-type: none"> 1. Check if there is an insulation issue of PV input cables. 2. Check if there are any broken PV cables. 3. Verify the panels are properly grounded. 4. Keep the cables away from wet areas.

25	Battery voltage high	Battery voltage is higher than 59V	Check the operation range of the battery and make sure it is within the range: 40 - 59Vdc, if not, power off the battery and disconnect it from the system.
26	Battery voltage low	Battery voltage is lower than cut off voltage limitation or 40V.	1. Check the setting for the low voltage warning and SOC. 2. Check if the battery output is low.
27	Battery open	The battery voltage is lower than 40V.	1. Verify the battery is connected. 2. Check the breaker state of the battery side. 3. Check if the battery has run out and protected itself.
28	EPS overload	Load port voltage is low due to overload issue.	1. Check if the EPS load is too high. 2. Check if the PV and battery is not powerful enough to take the loads. 3. Load percent is lower than 100%. Wait for 10 minutes or turn off the EPS switch and then turn it on again.
29	EPS voltage high	When working in off-grid mode, the EPS output RMS value is higher than nominal EPS voltage +30V	Verify if there is a device causing surges on the loads side. Recovery time is 20 minutes to clear the error. Restart the inverter. If the the error persists, contact the distributor.
31	EPS DCV high	High DC voltage component on EPS output when running off-grid.	Restart the inverter. If the error persists, contact the distributor

15.3 FAULT CODES

When the inverter detects faults, the LCD will display a sad face (fault) icon in the lower left corner along with the fault code. View the table below for a list of fault codes and explanations.

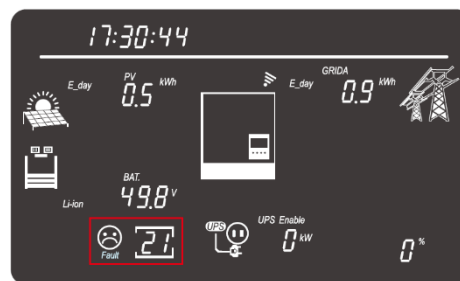

CODE	FAULT INFO	DESCRIPTION	TROUBLESHOOTING
00	Internal communication fault	The Comm CPU lost data from the Control CPU or the data from Control CPU is incorrect.	1. Check if the firmware update has successfully completed. 2. Update to the latest firmware. 3. Restart the inverter to clear the error.
02	Bat On Mos Fail	Battery reverse connection damaged the anti-reverse MOS or sampling error	Restart the inverter. If error persists, contact the distributor

03	CT Fail	The internal CT offset error in the inverter control program.	<ol style="list-style-type: none"> 1. Update to the latest firmware 2. Restart the inverter to clear the error. 3. If error persists, contact the distributor
08	CAN communication error in parallel system	Comm data lost in parallel system	<ol style="list-style-type: none"> 1. Check if it is the parallel system, if no, please set "NO Parallel" 2. Check if the parallel cable looks correct, and it should be the Cat-5 straight-wired cable. 3. Check if the configuration of DIP switches on inverters are correct, please refer to the parallel connection guidance.
09	No master in parallel system	There is no master distributed in the parallel system.	<ol style="list-style-type: none"> 1. Check parallel setting for Master/Slave to ensure there is only one Master set 2. Restart the inverter to clear the error.
12	UPS output short circuit	When working in off-grid mode, there is a short circuit issue in the load output	<ol style="list-style-type: none"> 1. Power off the inverter first. 2. Check if there is a short circuit issue of the load side. 3. check if L, N connection of one of the inverters has been reversed.
13	UPS reserve current	In a parallel system, the reverse power is greater than the specified value.	<ol style="list-style-type: none"> 1. Check if the parallel inverters have been set as "No Parallel", set them as "Single-phase Parallel". 2. Check if the parallel cable looks correct using a Cat-5 straight-wired cable. 3. Check if the configuration of DIP switches on inverters are correct, refer to the parallel connection guidance. 4. If using a single inverter, confirm the AC input and load (Application Setting) is set to 'No Parallel' 5. Confirm that the load port wiring is consistent, if it is a parallel system. Please strictly follow the manual for wiring.
15	Phase error in three phase system	In parallel system, the system type configurations between the inverters are inconsistent or lack of phase.	<ol style="list-style-type: none"> 1. Check if it is a three-phase parallel system, if no, please set "Single-phase parallel" or "No Parallel" accordingly. 2. If using a three-phase parallel system, check if the issue is a lack of phases. 3. Check L, N connection and breaker status.
16	Relay fault	There is a fault with a relay	Restart inverter. If error persists, contact the distributor
17	Internal communication fault 2	The BUS1 voltage is higher than 150V and MPPT SPS is working, but the Com board does not receive the Comm data from the MPPT board or it receives abnormal data	<ol style="list-style-type: none"> 1. Check if the firmware for both Comm and MPPT are up to date. 2. Manually turn off the POWER switch, turn it on again after 3 minutes, restart the inverter to check if the error is cleared. 3. If the error persists, contact the distributor.

18	Internal communication fault 3	The Control board does not receive the comm data from the Com board or it receives abnormal data.	<ol style="list-style-type: none"> 1. Check if the firmware for both Comm and DSP are updated to the latest version. 2. Please manually turn off the POWER switch, turn it on again after 3 minutes to restart the inverter to check if the error is cleared. 3. If error persists, contact the distributor
19	Bus voltage too high	BUS1 or BUS2 voltage is over range.	<ol style="list-style-type: none"> 1. Check if the PV input voltage is greater than 480VDC (see name plate) and try to reduce the panels 2. Update to the latest firmware
20	AC connection fault	<ol style="list-style-type: none"> 1. Connecting AC input cable to EPS (Loads) port by mistake. 2. Connecting AC input cable to Gen port by mistake when AC couple or smart load mode. 	<ol style="list-style-type: none"> 1. Check if the AC input is installed to Load/ Gen port by mistake 2. Restart the inverter to clear the error. 3. If fault persists, contact the distributor
21	PV voltage too high	The PV1 voltage or PV2 voltage higher than 480Vdc.	Turn off the PV input first and check if the PV input voltage is too high (refer to the specification of name plate) and try to reduce the panels.
22	Over current internal	Over current protection in hardware level triggered.	Manually turn off the POWER switch, turn it on again after 3 minutes to restart the inverter to check if the error is cleared
24	PV short	Over current protection was triggered, or PV input current is higher than 23A	<ol style="list-style-type: none"> 1. Turn off the PV input first. 2. Check the voltage of the PV strings and the PV resistance of inverter side with multimeter. 3. Check the wiring of the PV string to ensure there is no short circuit.
25	Temperature too high	Temperature reading of the NTC is higher than 92°C or there is a NTC open issue (-25°C)	<ol style="list-style-type: none"> 1. Check if the air duct or vents are blocked. 2. Reinsert the fan cable on the interface board. 3. The internal temperature of the inverter is too high, turn off the inverter for 10 minutes, then restart the inverter. 4. Place the unit in standby mode. If the fault still occurs, there may be a problem with temperature sampling.
26	Internal Fault	BUS1 voltage is lower 50V than PV input, or BUS1 is lower 50V than BUS2.	Restart inverter. If error persists, contact the distributor
28	Sync signal lost in parallel system	Parallel sync signal for control clock or grid frequency is abnormal.	<ol style="list-style-type: none"> 1. Ensure paralleling cables are connected to proper ports between inverters 2. Restart the inverter to clear the error. 3. Ensure that all inverters in the parallel system are updated to the latest firmware. 4. Strictly follow the manual for wiring.

29	Sync trigger signal lost in parallel system	Parallel sync trigger signal for work modes switching between Inverters is abnormal.	<ol style="list-style-type: none"> 1. Ensure that a T568B Ethernet cable (shipped with the inverter) is used to parallel between inverters in the correct ports 2. Check if the configuration of DIP switches on inverters are correct, please refer to the parallel connection guidance 3. Ensure that all inverters in the parallel system are updated to the latest firmware.
31	Internal communication fault 4	MPPT board fails to receive the comm data from COM board or receive the abnormal data	<ol style="list-style-type: none"> 1. Check if the firmware for both Comm & MPPT are successfully completed. 2. Update to the latest firmware. 3. Manually turn off the POWER switch, turn it on again after 3 minutes to restart the inverter to check if the error is cleared. 4. If fault persists, contact the distributor.

16. INVERTER MAINTENANCE

Electrical equipment must be properly maintained to increase longevity and consistency. Follow the steps below to help prevent component damage/deterioration.

1. Inspect the inverter every month to confirm nothing covers the inverter heatsink. If there is cover, shut down the inverter and clear the heat sink to restore proper cooling.
2. Inspect the inverter every 3 months to verify the operating parameters are normal, and there is no abnormal heating or noise from any components in the system.
3. Inspect the inverter every 6 months to check for any damaged cables, accessories, or terminals.

If unable to identify the source of any potential abnormal operations, please contact the distributor's technical support team for additional information.

17. WARRANTY INFORMATION

For information regarding warranty registration on EG4® Electronics products, please navigate to <https://eq4electronics.com/warranty/> and select the corresponding product to begin the registration process.

18.CHANGELOG

Version 1.6.7

- Updated RSD hardware amp rating in section 12.1.1 from 1.5A to 1A
- Modified PV wire installation instructions to accommodate new hardware
- Updated images of inverter to match latest model

Version 1.6.6

- Modified quick-part in section 6.6.2 for updated communication protocol information
- Modified verbiage in section 12.1 for External E-Stop Switch

Version 1.6.5

- Added Locked Rotor Amps (LRA) value to spec sheet
- Added French verbiage to the safety section.
- Added additional note to section 6.7.1 regarding neutral wiring

Version 1.6.4

- Added additional information regarding 120V Grid Charging Operations in sections 5.7.1
- Added additional information regarding PV charge with the inverter in standby to sections 5.5.1 & 11

Version 1.6.3.

- Added 2.4Ghz network bandwidth recommendation for Wi-Fi dongle to section 8.2

Version 1.6.2

- Added 3 phase wiring diagram to section 5.12.3

Version 1.6.1

- Modified verbiage on Packing List

Version 1.6

- Published v1.6
- Modified spec sheet warranty information
- Added Warranty information section
- Added LCD Settings for Smart Load, Gen Boost, and AC Coupling (Section 12)
- Added Gen Boost Settings (Section 6.2.1)
- Updated screenshots to include Gen Boost setting (Sections 5.9)
- Minor formatting changes

Version 1.5

- Added Smart Load section (Section 6.5)
- Added California Prop 65 label to safety section

Version 1.4

- Added AC Coupling section (Section 6.4)

Version 1.3.2

- Modified one line in spec sheet to provide more clarity
- Removed “hybrid” verbiage from troubleshooting section

Version 1.3.1

- Modified verbiage in RSD section 11.1 to suggest wiring into the NO contact
- Adjusted GEN
- Added additional pin-out information and graphic to section

Version 1.3

- Added new feature & description (Gen Boost) to section 7 – Installer Settings.
- Modified spec sheet table formatting

Version 1.2

- Reformatted document to match documentation standards.
- Replaced several images with higher quality images

Version 1.10

- Reformatted document to reflect recent template changes
- Removed excess 3-phase information from paralleling section 4.10.2 and setting 21 in section 11
- Removed Hybrid Settings from monitoring software – Section 6.2
- Modified packing list graphics and components
- Modified pin-out definition in section 4.5.2
- Modified voltage ranges on “AC Charge Battery Start Voltage, Battery Warning Voltage, Discharge Cut-off Voltage, Generator Charge Start Battery Voltage” in Sections 6.2, 6.3 and 6.4.
- Modified voltage range on setting 12 in Section 11
- Changed defaults on settings 19 and 27 in Section 11.
- Removed redundant verbiage from spec sheet.
- Modified Inverter Interface Diagram Section 4.2.

Version 1.1.8

- Corrected minor formatting issues in tables in section 11, page 44+
- Removed grid sell back verbiage from 2 sections

Version 1.1.7

- Added additional battery specs to Specifications Table on page 56
- Modified Generator Charge Current range to 0-110A, from 0-60A (page 46)
- Modified max. total charging current. Adjusted values throughout the manual and spec sheets.

Version 1.1.5

- Modified Surge Capacity in specifications table, Section 15
- Modified Idle Consumption in Standby Mode in specifications table, Section 15
- Modified Max Charging Current in different operating modes in Section 15
- Changed image of inverter in section 4.3.1

Version 1.1.3

- Adjusted Wi-Fi information to match Luxpower’s instructions for new module in section 9 > Smartphone App Setup
- Modified charge/discharge current values in spec sheet and in section 4.5.1 > Battery Cable Connection

Version 1.1.2

- Modified cover photo to represent the final product
- Adjusted spec sheet to represent our testing

Version 1.1.0

- Modified existing Wi-Fi dongle information to match new model of module
- Added/redacted Wi-Fi module configuration information (Section 7)

Version 1.0.2

- Updated monitoring system, Section 7, to represent the latest version

Version 1.0.1

- Corrected Inverter Pin-Out table to match new hardware
- Corrected minor formatting issues

Version 1.0.0

- First iteration of the completed manual

NOTES

[illegible]



CONTACT US

support@eg4electronics.com

(903) 609-1988

www.eg4electronics.com