




Standard Operating Procedure
Sulphur Springs, TX

EG4 6.5k ArenalNVReflashTool Guide




Hardware Connection:

1. Connect battery to **BATTERY INPUT** and push the **MAIN Switch** to power on the inverter.

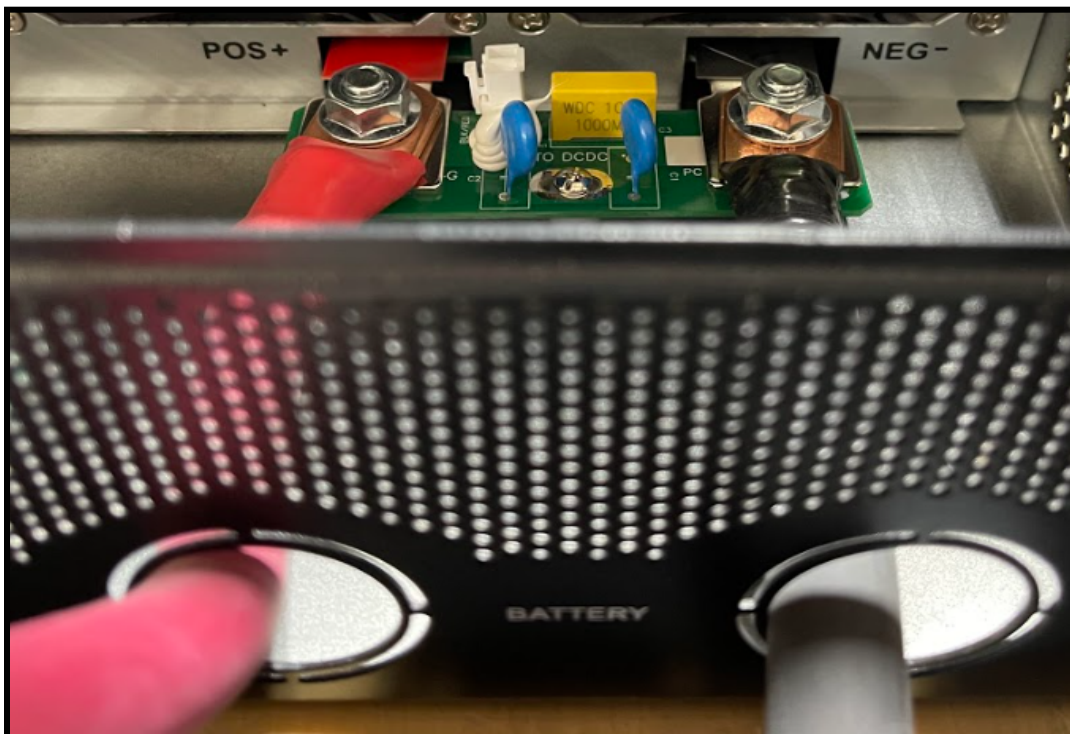


Software Updates:


1. Open the **ArenalNVReflashTool.exe** file

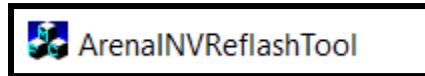**Update the Software:**


1. Shown in the picture below, choose the correct corresponding COM port.
 - a. To check your COM port, open Device Manager and under **Ports (COM & LPT)** it will display **USB-SERIAL** (Refer to picture)

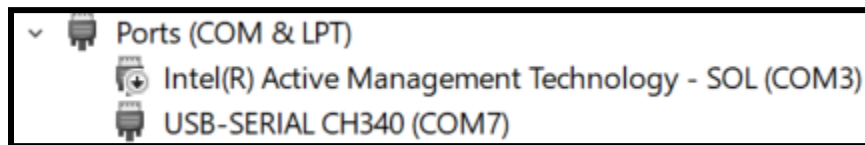


2. Click File and choose the Firmware version that you want to flash.

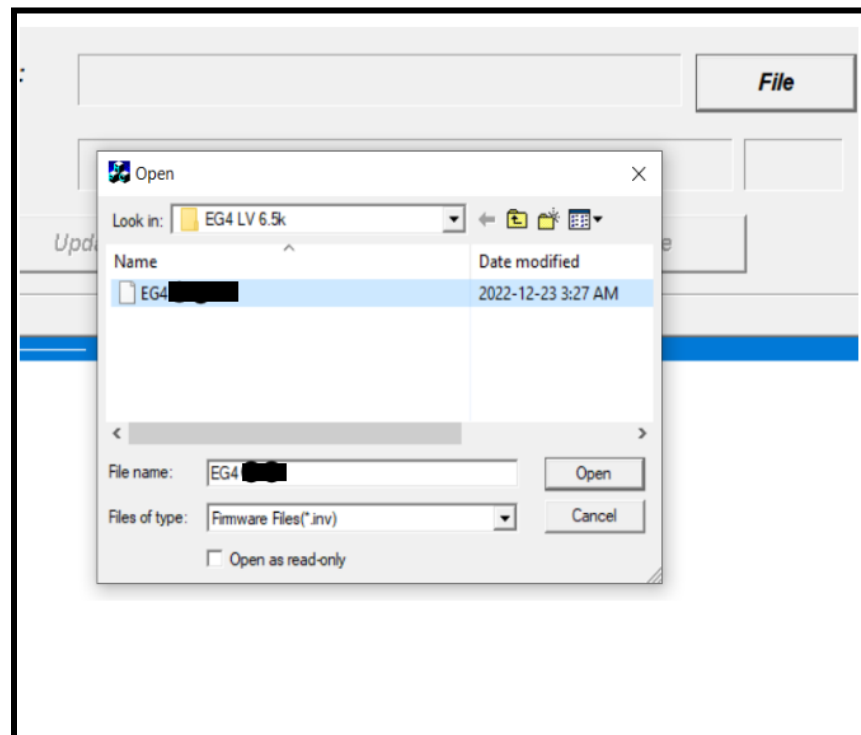


3. Click **UPDATE FIRMWARE**. The following will appear if the COM port is connected correctly (shown below)

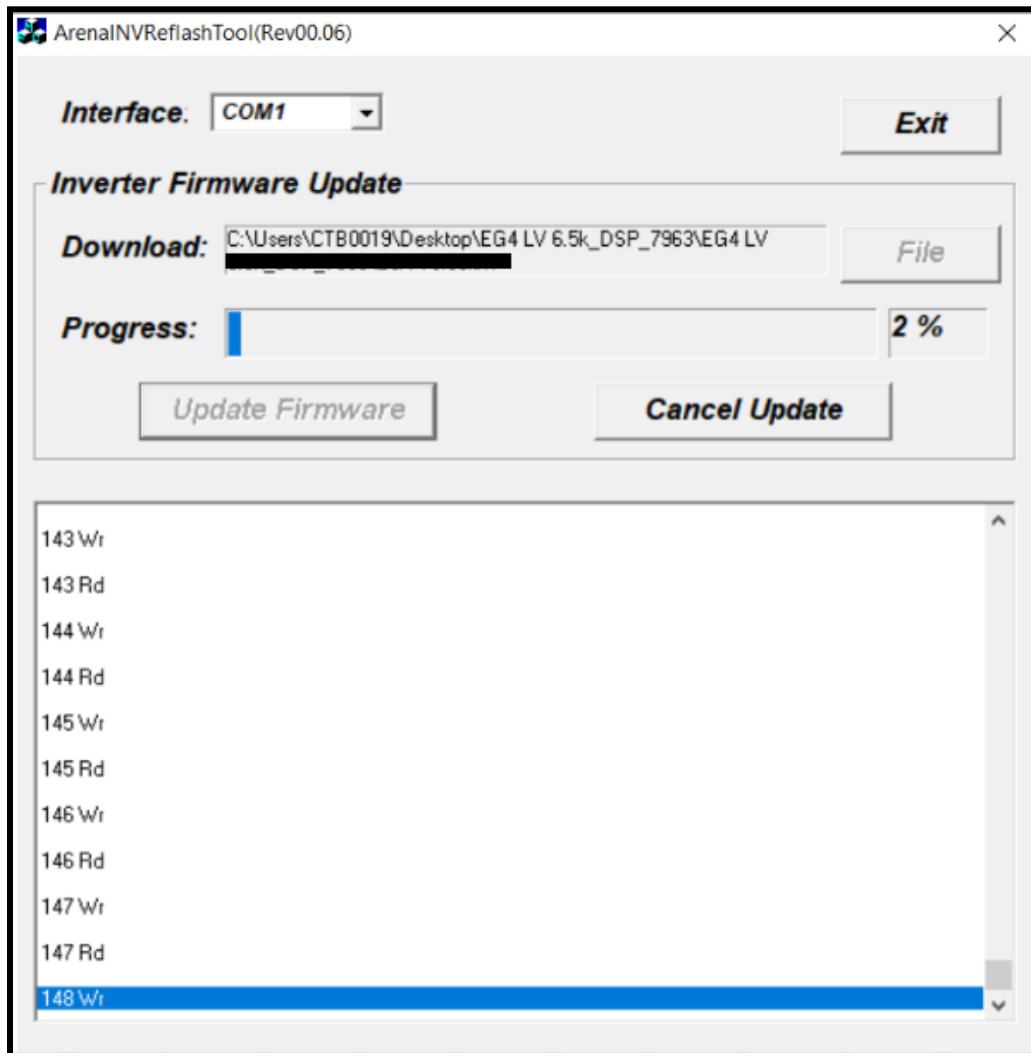

4. Picture below shows the completed flashing process.

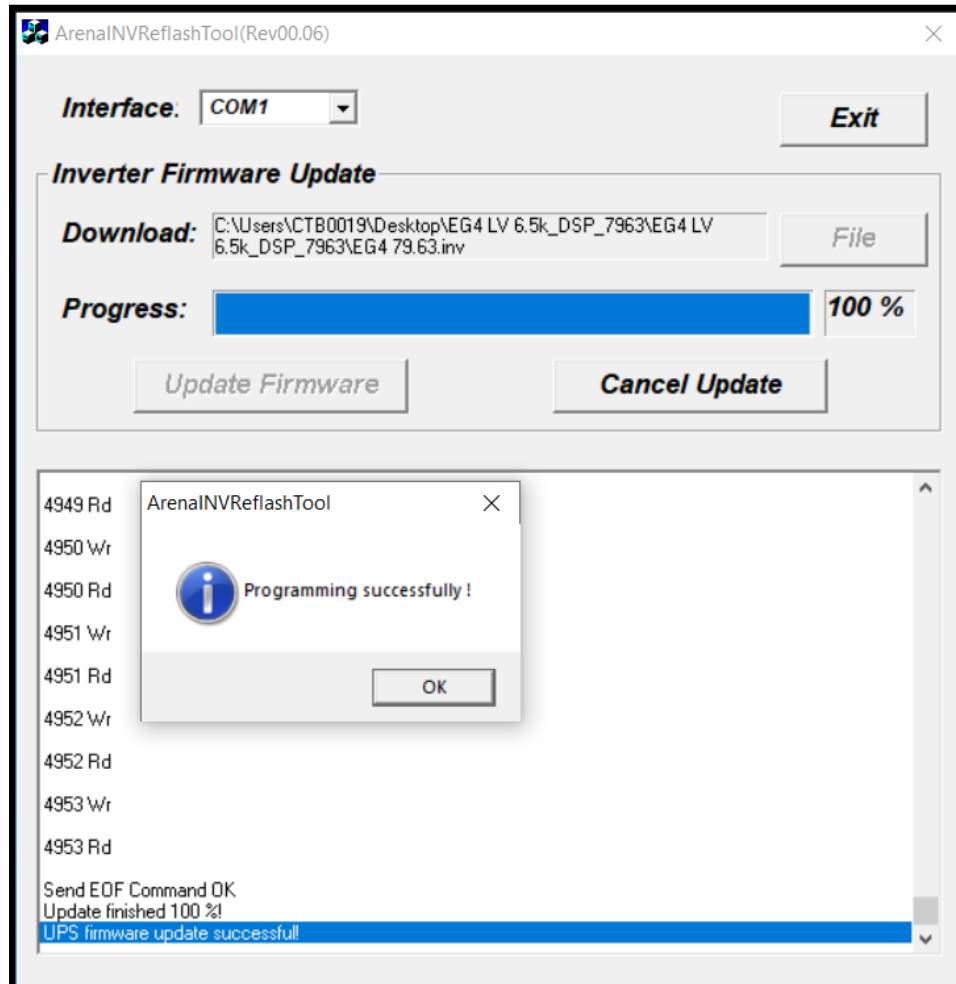

- Once the “**programming successfully**” pop-up appears, as shown in step 4, please confirm the Firmware version is correct on the inverter by scrolling up with the up button (shown below) until you see settings “U1” and “U2”. If you have trouble flashing, please check your COM port. Make sure all of the drivers are installed for the COM port and please try again.

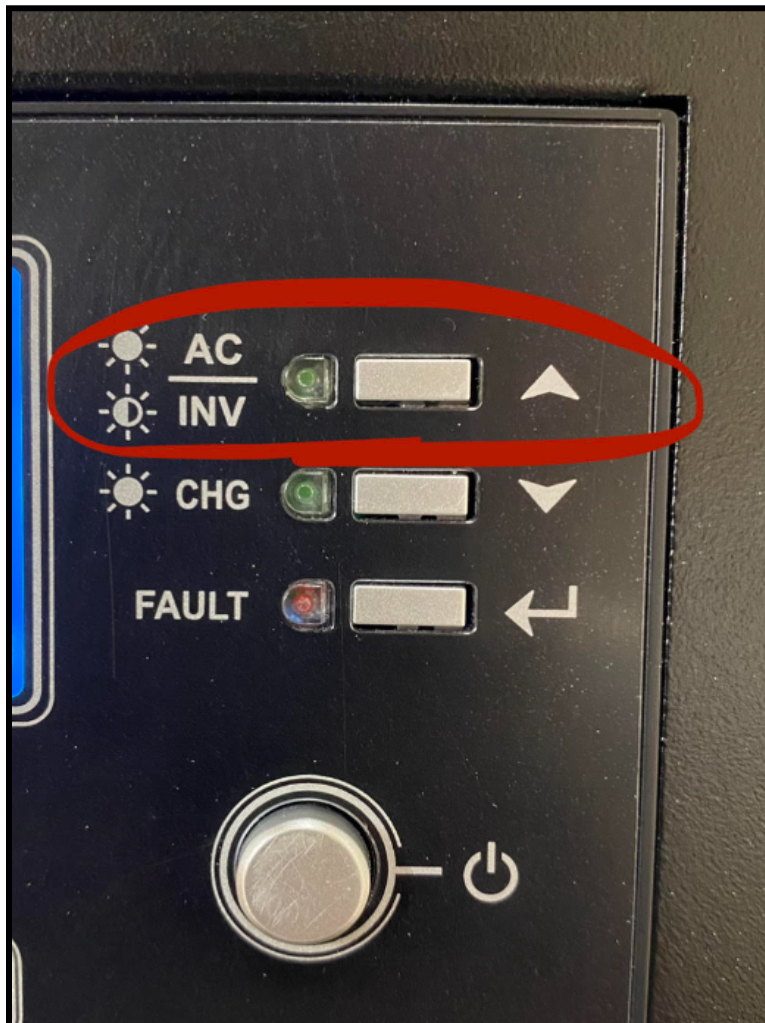

Prepared By: Research and Development Team

Revision: 1 - 2/16/2023 - 9:18:37 AM

Owned By: Signature Solar LLC.