


EG4 INVERTERS IN 3-PHASE CONFIGURATION - TABLE OF CONTENTS

NOTE: THE EG4 GRID-BOSS DOES NOT WORK FOR 3-PHASE SYSTEMS


Drawings:

- 1. EG4 FLEXBOSS INVERTERS - 3 PHASE - Whole Service Backup with Feeder Tap - 120/208 VAC**
- 2. EG4 18kPV & 12kPV INVERTERS - 3 PHASE - Whole Service Backup with Feeder Tap - 120/208 VAC**
- 3. EG4 OFF-GRID INVERTERS - 3 PHASE - 12000XP & 6000XP - 120/208 VAC**

1. EG4 FLEXBOSS INVERTERS - 3 PHASE - Whole Service Backup with Feeder Tap - 120/208 VAC

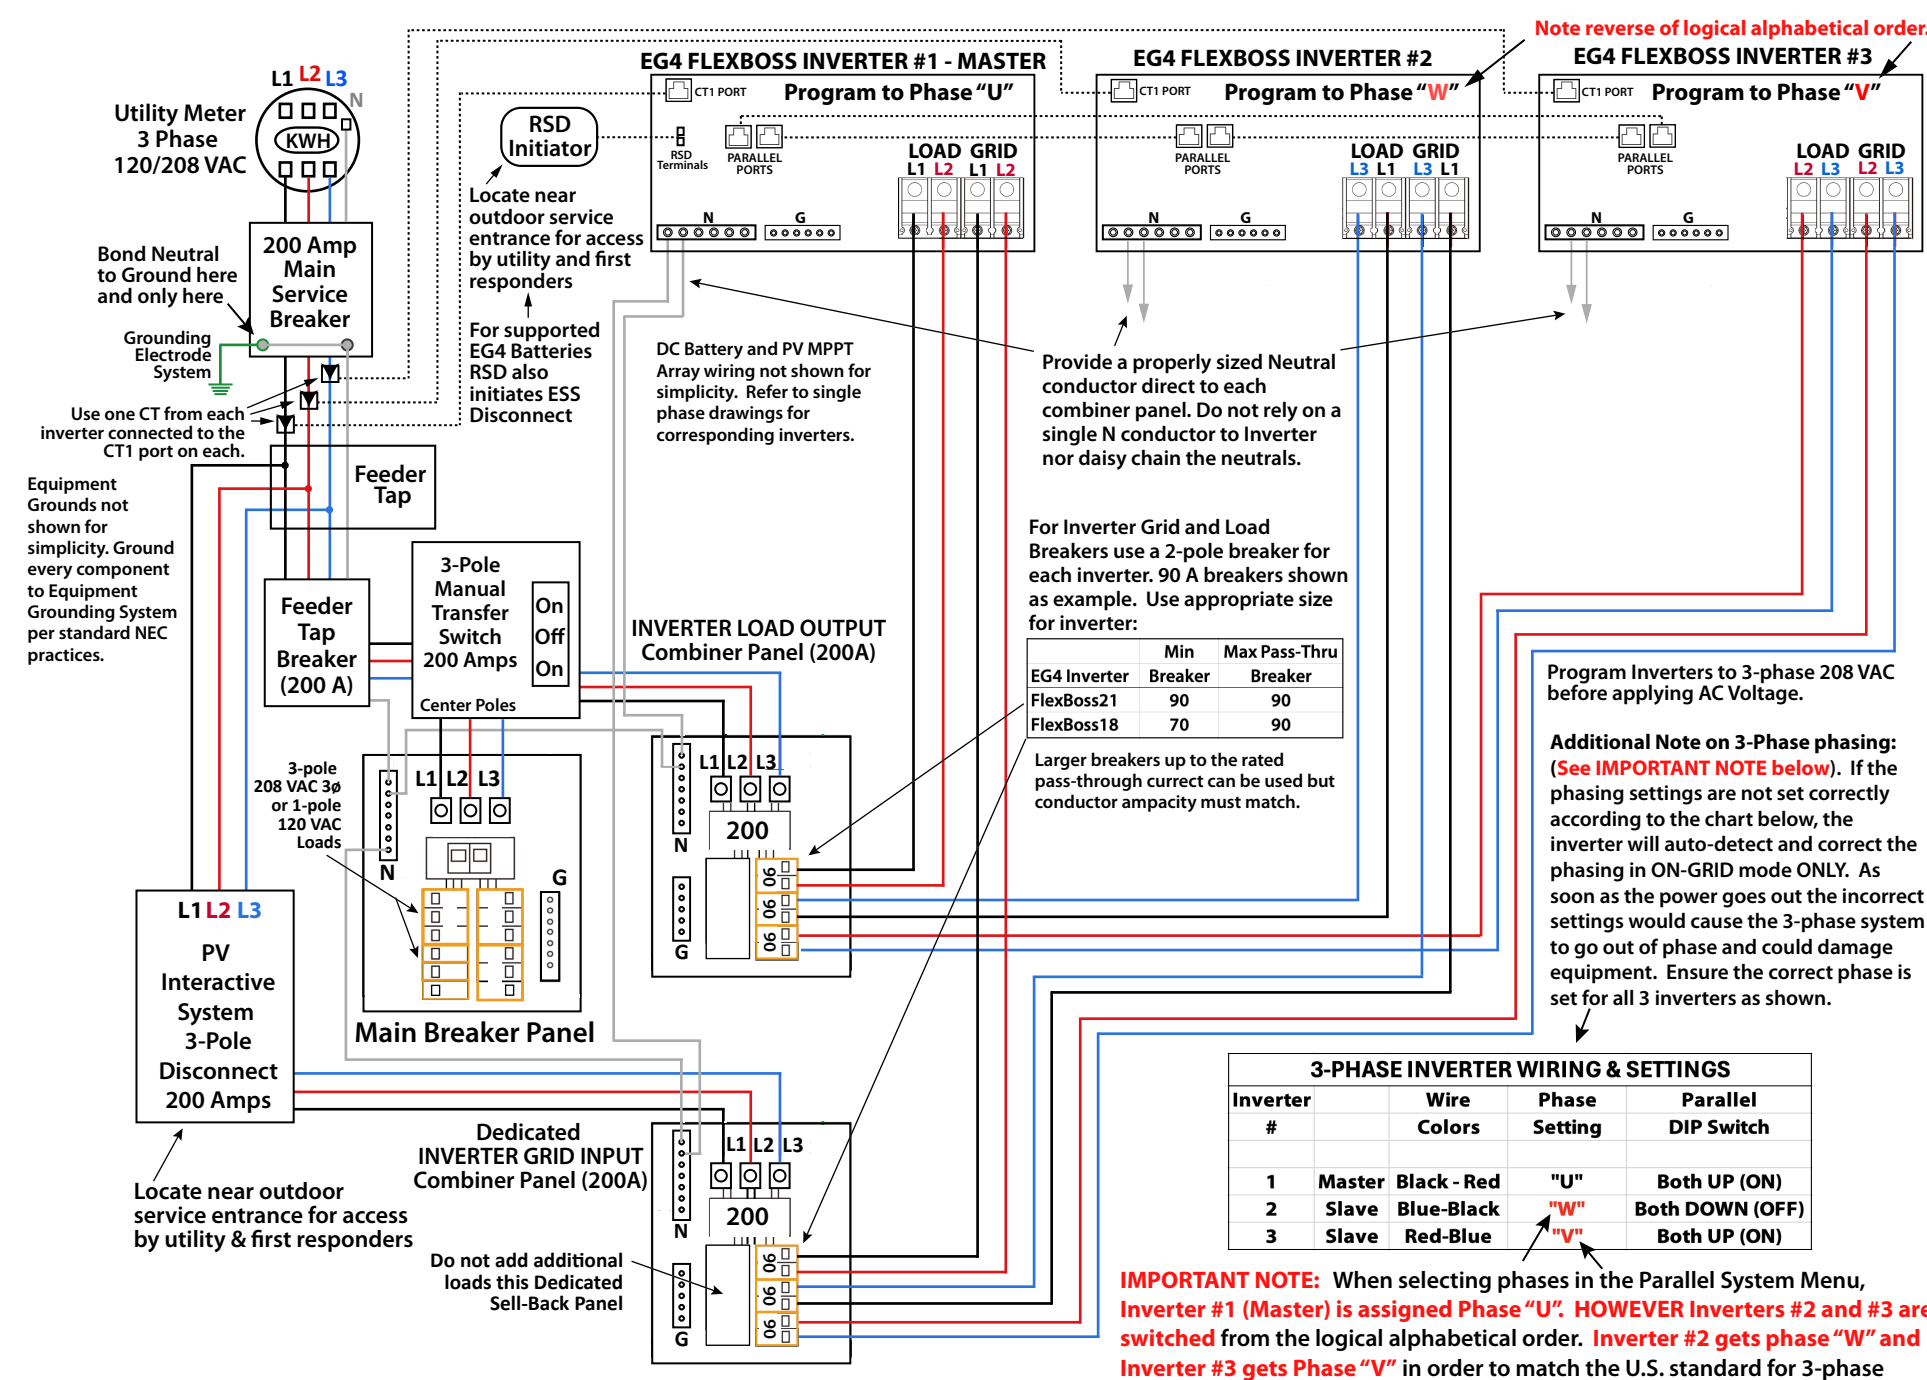

2. EG4 18kPV & 12kPV INVERTERS - 3 PHASE - Whole Service Backup with Feeder Tap - 120/208 VAC

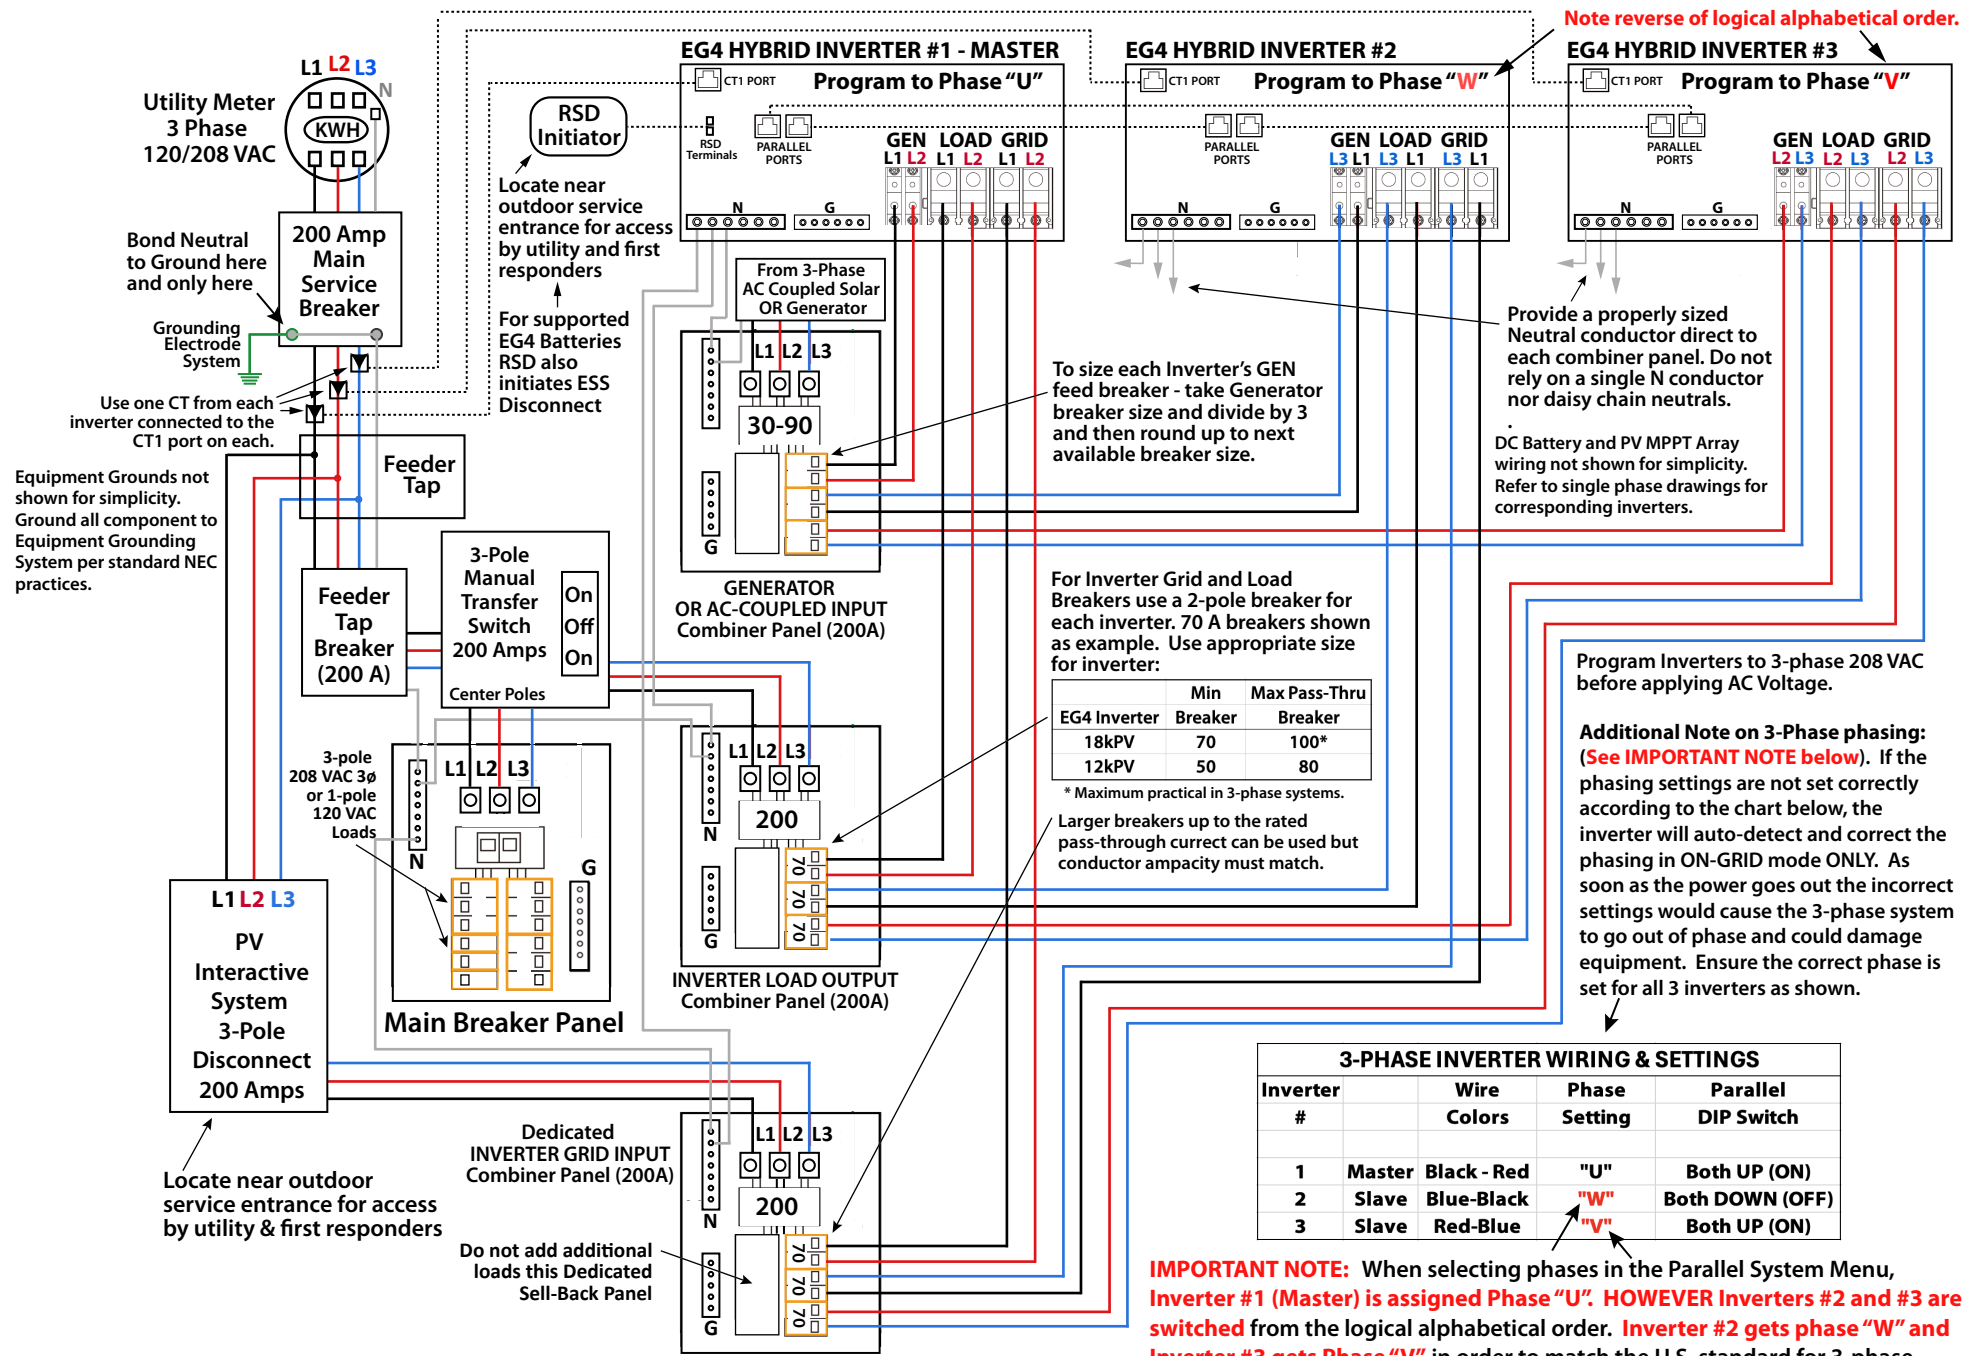

3. EG4 OFF-GRID INVERTERS - 3 PHASE - 12000XP & 6000XP - 120/208 VAC

